



Manuals.plus /

- › YEAUPE PRO /
- › YEAUPE PRO S6516 Filter Shower Head User Manual

## YEAUPE PRO S6516

# YEAUPE PRO S6516 Filter Shower Head User Manual

Model: S6516

## INTRODUCTION

Thank you for choosing the YEAUPE PRO S6516 Filter Shower Head. This manual provides essential information for the proper installation, operation, and maintenance of your new shower head. Please read these instructions carefully before use and retain them for future reference.

## PRODUCT FEATURES

- **Integrated Water Filtration:** Equipped with mineral beads to filter water, reducing impurities and residual chlorine. This helps to promote healthier skin and softer hair.
- **Large Spray Panel:** Features a generous 115 mm x 100 mm square spray panel for enhanced body coverage and a more immersive shower experience.
- **6 Adjustable Spray Modes:** Easily switch between six distinct spray patterns with a single hand, including Rain, Power, Oxygenated Spray, and combinations thereof, to suit various preferences and needs.
- **Durable Construction:** Manufactured from high-quality, scratch-resistant chrome-plated ABS material, ensuring durability and resistance to corrosion.
- **Self-Cleaning Silicone Nozzles:** Designed with flexible silicone nozzles that prevent limescale buildup and are easy to clean, maintaining consistent water pressure and spray performance.
- **Pressure Boosting Technology:** Enhances your existing water pressure for a more invigorating shower.

## SETUP AND INSTALLATION

The YEAUPE PRO S6516 Filter Shower Head is designed for quick and easy installation, typically requiring no professional plumbing assistance. It is compatible with most standard G1/2 interface shower hoses.

1. **Prepare for Installation:** Ensure your water supply is turned off before beginning installation.
2. **Remove Old Shower Head:** Unscrew your existing shower head from the shower hose by turning it counter-clockwise.
3. **Install New Shower Head:** Carefully screw the YEAUPE PRO S6516 Filter Shower Head onto your existing shower hose by turning it clockwise until it is hand-tight. Do not overtighten.
4. **Check for Leaks:** Turn on the water supply and check for any leaks around the connection point. If leaks occur, tighten

slightly more or ensure the rubber washer is properly seated.

5. **Filter Bead Installation (if separate):** If the mineral filter beads are provided separately, unscrew the handle of the shower head, insert the beads as directed (refer to image), and re-secure the handle.



Image: Step-by-step guide for installing the shower head and inserting filter beads. The image shows unscrewing the handle, adding filter beads, and attaching the shower head to a hose.

**Note:** If water pressure is unstable, you may remove the water restrictor located inside the shower head connection point. Consult a professional if unsure.

## OPERATING INSTRUCTIONS

The YEAUPE PRO S6516 Filter Shower Head offers 6 distinct spray modes. To change the spray mode, simply use the selector switch located on the side of the shower head. Rotate the switch to cycle through the available patterns.

1. **Rain:** A gentle, full-coverage spray for a relaxing shower.
2. **Rain + Oxygenated Shower Spray:** Combines the gentle rain with an aerated spray for a softer, yet invigorating experience.
3. **Oxygenated Shower Spray:** An aerated, soft spray, ideal for sensitive skin or rinsing.
4. **Power Massage + Oxygenated Shower Spray:** A combination of powerful massage jets and aerated spray.
5. **Power Massage:** Concentrated, strong jets for muscle relaxation and deep rinsing.
6. **Rain + Power Massage:** A blend of the gentle rain and powerful massage for a balanced experience.

## 6 Spray Settings



Image: Visual representation of the six different spray patterns available on the shower head, including Rain, Oxygenated Spray, and Power Massage.

## MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your shower head.

### Cleaning the Nozzles

The silicone nozzles are designed for easy cleaning to prevent mineral buildup. Simply rub your fingers or a soft brush across the nozzles periodically to dislodge any limescale or debris. For stubborn buildup, a mild descaling solution can be used, but avoid harsh chemicals that may damage the finish.

## Self-Cleaning Silicone Outlet

Anti-Blocking and Anti-Branching  
Easy to clean with your hands or toothbrush



*Image: Close-up view of the self-cleaning silicone nozzles, highlighting their design for easy maintenance and prevention of blockages.*

### Filter Replacement

The mineral filter beads will eventually need replacement to maintain effective water filtration. The frequency of replacement depends on your local water quality and usage. Typically, filter beads should be replaced every 3-6 months. To replace:

1. Unscrew the handle of the shower head.
2. Carefully remove the old filter beads.
3. Insert new filter beads into the handle.
4. Screw the handle back onto the shower head, ensuring a tight seal.



Image: Illustration of the internal filtration system, showing the various layers and mineral beads responsible for purifying the water.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Low Water Pressure	<ul style="list-style-type: none"> <li>◦ Clogged nozzles</li> <li>◦ Water restrictor in place</li> <li>◦ Low household water pressure</li> </ul>	<ul style="list-style-type: none"> <li>◦ Clean silicone nozzles (see Maintenance).</li> <li>◦ Consider removing the water restrictor (consult a professional if needed).</li> <li>◦ Check household water supply.</li> </ul>
Leaking at Connection	<ul style="list-style-type: none"> <li>◦ Loose connection</li> <li>◦ Missing or improperly seated washer</li> </ul>	<ul style="list-style-type: none"> <li>◦ Tighten the shower head connection.</li> <li>◦ Ensure the rubber washer is correctly placed and not damaged.</li> </ul>
Ineffective Filtration	<ul style="list-style-type: none"> <li>◦ Expired filter beads</li> </ul>	<ul style="list-style-type: none"> <li>◦ Replace filter beads (see Maintenance).</li> </ul>

## SPECIFICATIONS

<b>Brand</b>	YEAUPE PRO
<b>Model Number</b>	S6516
<b>Product Dimensions (L x W x H)</b>	26.4 x 10 x 12.7 cm
<b>Weight</b>	360 grams
<b>Color</b>	White
<b>Style</b>	White Shower Head
<b>Finish</b>	Polished
<b>Material</b>	Acrylonitrile Butadiene Styrene (ABS)
<b>Shape</b>	Square
<b>Installation Method</b>	Wall Mount
<b>Number of Spray Settings</b>	6
<b>Special Features</b>	Pressure Boosting Technology, Water Filtration
<b>Included Components</b>	1 Shower Head

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please contact YEAUPE PRO customer service through the retailer where the product was purchased or visit the official YEAUPE PRO website. Please have your model number (S6516) and purchase date available when contacting support.

While specific warranty details are not provided in this manual, standard consumer rights and warranties apply as per local regulations.