



[Manuals.plus](#) /

> [EasyAcc](#) /

> EasyAcc Model 606Y Small Oscillating Rechargeable Desktop Fan User Manual

EasyAcc 606Y

EasyAcc Model 606Y Small Oscillating Rechargeable Desktop Fan User Manual

Model: 606Y | Brand: EasyAcc

INTRODUCTION

Thank you for purchasing the EasyAcc Model 606Y Small Oscillating Rechargeable Desktop Fan. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new fan. Please read it thoroughly before use and retain it for future reference.

PRODUCT FEATURES

- **Oscillating Function:** Automatically circulates air across a wider area. Manual head angle adjustment within a 90° range.
- **LED Digital Display:** Shows current battery status and fan speed level.
- **Quiet Operation:** Noise level between 25 to 35 decibels for minimal disturbance.
- **Compact and Portable:** Designed for easy transport and placement.
- **Removable Front Grill:** Allows for easy cleaning of fan blades.
- **4000mAh Rechargeable Battery:** Provides extended working time.
- **USB-C Charging:** Compatible with Micro USB and Type-C USB for convenient charging.
- **4 Speed Settings:** Adjustable airflow from gentle breeze to strong wind.

PACKAGE CONTENTS

Please check the package for the following items:

- EasyAcc Model 606Y Oscillating Fan
- USB-C Charging Cable
- User Manual (this document)

SAFETY INSTRUCTIONS

To ensure safe operation, please observe the following precautions:

- Do not insert fingers or any objects into the fan grill when the fan is operating.
- Keep the fan away from water or other liquids to prevent electric shock.
- Do not use the fan in high humidity environments.
- Ensure the fan is placed on a stable, flat surface to prevent it from tipping over.
- Keep out of reach of children and pets.
- Use only the provided charging cable or a certified USB-C cable for charging.
- Do not attempt to disassemble or repair the fan yourself. Contact customer support for assistance.
- Unplug the fan before cleaning.

SETUP

1. **Unpacking:** Carefully remove the fan and all accessories from the packaging.
2. **Placement:** Place the fan on a stable, flat surface where airflow is desired.
3. **Initial Charge:** Before first use, fully charge the fan using the provided USB-C cable and a compatible USB power adapter (not included). The LED display will show battery status.

OPERATING INSTRUCTIONS

Power On/Off and Speed Adjustment

The fan features a single button for power and speed control.

1. **Power On:** Press the On/Off button once to turn on the fan at Speed 1 (Sleeping Wind, 1980 RPM).
2. **Adjust Speed:** Press the On/Off button repeatedly to cycle through the 4 speed settings:
 - Speed 1: Sleeping Wind (1980 RPM)
 - Speed 2: Neutral Wind (2310 RPM)
 - Speed 3: Strong Wind (2730 RPM)
 - Speed 4: Super Strong Wind (2950 RPM)
3. **Power Off:** After Speed 4, pressing the button again will turn the fan off. Alternatively, press and hold the On/Off button for 2 seconds to turn off the fan from any speed.

EasyAcc

Battery Desktop Fan Automatic Steering

Enjoy the coolness in summer



LED battery
display



4 speeds



4000
battery



automatic
steering



easy to
clean



silent



Image: Fan speed settings and corresponding RPM levels.

Oscillation Function

The fan offers both automatic oscillation and manual vertical adjustment.

- **Automatic Oscillation:** Press the dedicated oscillation button (often labeled with an oscillation icon) once to activate 120° automatic horizontal oscillation. Press it again to stop oscillation.
- **Manual Vertical Adjustment:** The fan head can be manually tilted up or down within a 90° range to direct airflow as needed.

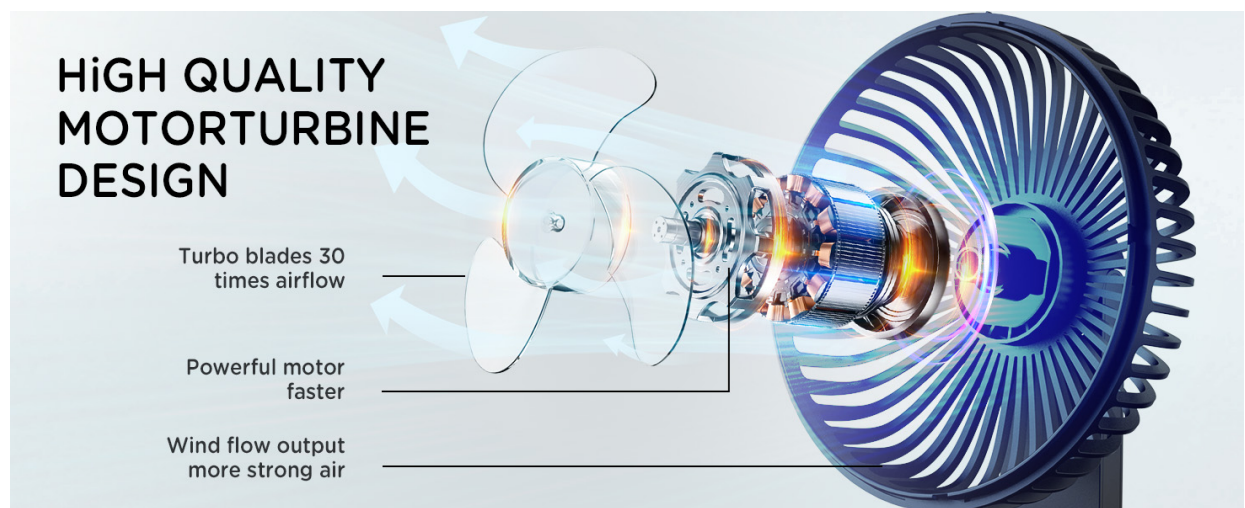


Image: Fan oscillation and tilt capabilities.

Charging the Fan

The fan is equipped with a 4000mAh battery and supports USB-C charging.

1. Connect the provided USB-C cable to the charging port on the fan base.
2. Connect the other end of the cable to a USB power source (e.g., wall charger, laptop, power bank, car charger).
3. The LED digital display will show the battery percentage during charging.
4. A full charge provides approximately 5-23 hours of working time, depending on the speed setting and oscillation usage.

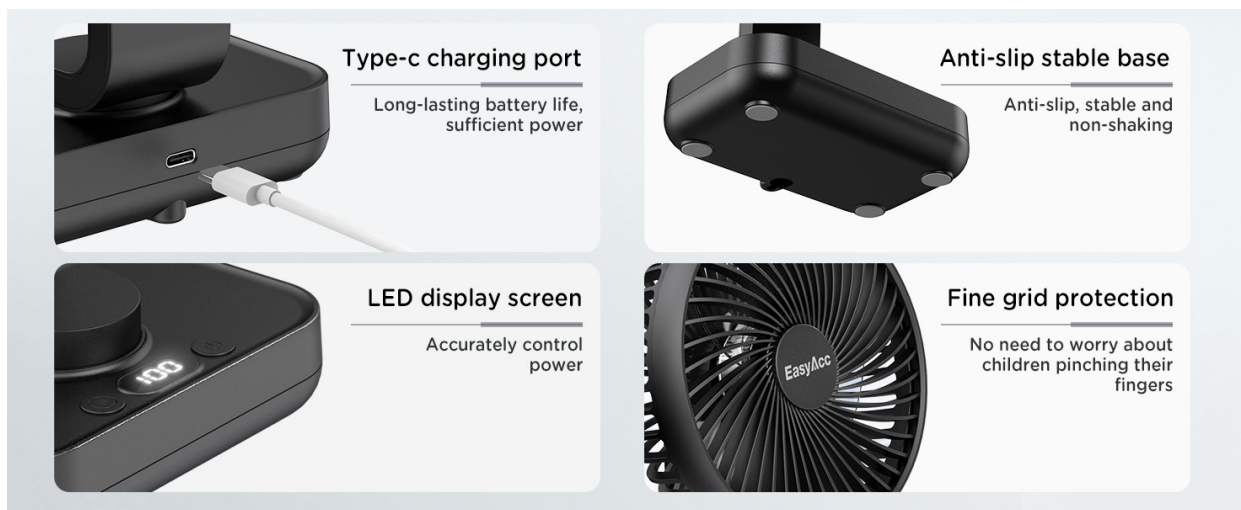


Image: Charging options for the fan's 4000mAh battery.

MAINTENANCE

Cleaning the Fan

Regular cleaning helps maintain optimal performance and air quality.

1. **Power Off:** Ensure the fan is turned off and unplugged from its power source before cleaning.
2. **Remove Front Grill:** Gently twist the front grill counter-clockwise to detach it from the fan body.
3. **Clean Blades and Grill:** Use a soft, damp cloth to wipe the fan blades and the inside of the grill. For stubborn dust, a mild soap solution can be used, ensuring no liquid enters the motor housing.
4. **Dry Thoroughly:** Allow all parts to dry completely before reassembling.
5. **Reassemble:** Align the front grill with the fan body and twist clockwise until securely locked.

Removable fan cover

Easy to clean, breathe healthier



Image: Steps for cleaning the fan's removable front cover and blades.

Storage

When not in use for extended periods, store the fan in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan using the USB-C cable. Check the LED display for battery status.
Fan does not oscillate.	Oscillation function is not activated.	Press the oscillation button to activate the automatic oscillation.
Weak airflow.	Fan blades are dirty or speed setting is low.	Clean the fan blades (refer to Maintenance section). Increase the fan speed.
Unusual noise during operation.	Obstruction in fan blades or loose parts.	Turn off and unplug the fan. Check for any obstructions and remove them. Ensure the front grill is securely attached. If the noise persists, contact customer support.

SPECIFICATIONS

- **Model:** 606Y
- **Brand:** EasyAcc
- **Color:** Black
- **Electric Fan Design:** Table Fan
- **Power Source:** Battery Powered
- **Product Dimensions (D x W x H):** 5" x 5" x 3" (138mm x 75mm x 187mm)
- **Special Features:** Removable Front Grill, LED Digital Display (Battery Status & Speed Level), Oscillation, USB-C Fast Charge, Ultra-Quiet (25-35 dB)
- **Number of Speeds:** 4
- **Noise Level:** 35 Decibels (Max)
- **Number of Blades:** 3
- **Voltage:** 5 Volts (DC)
- **Control Method:** Button Control / Touch
- **Battery Capacity:** 4000mAh
- **Charging Port:** Type-C USB (also compatible with Micro USB)
- **Material:** Plastic

4000 BATTERY



Car charger



Wall charger



Laptop



Powerbank



USB-C



Image: Product dimensions and LED display details.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official EasyAcc website. You may also contact EasyAcc customer service directly for assistance with product issues or inquiries.

EasyAcc Official Website: www.easyacc.com