



[Manuals.plus](#) /

› [ROCCAT](#) /

› ROCCAT Vulcan Pro Keyboard & Kone Pro Air Mouse User Manual

ROCCAT Vulcan Pro, Kone Pro Air

ROCCAT Vulcan Pro Keyboard & Kone Pro Air Mouse User Manual

Comprehensive Guide for Setup, Operation, and Maintenance

INTRODUCTION

Welcome to the user manual for your ROCCAT Vulcan Pro Linear Optical PC Gaming Keyboard and ROCCAT Kone Pro Air Gaming PC Wireless Mouse. This guide provides detailed instructions for setting up, operating, maintaining, and troubleshooting your new gaming peripherals. Designed for peak performance and ergonomic comfort, these devices will enhance your gaming and productivity experience.



Image: The ROCCAT Vulcan Pro keyboard and Kone Pro Air mouse displayed together, showcasing their sleek black design and RGB lighting capabilities.

SETUP

1. ROCCAT Vulcan Pro Keyboard Setup

1. **Connect the Keyboard:** Plug the USB cable of the ROCCAT Vulcan Pro keyboard into an available USB port on your PC. The keyboard is plug-and-play compatible.
2. **Install ROCCAT Swarm Software (Recommended):** For full customization of AIMO RGB lighting, key assignments, and macros, download and install the ROCCAT Swarm software from the official ROCCAT website (www.roccat.com/pages/swarm).
3. **Attach Palm Rest:** Align the magnetic palm rest with the bottom edge of the keyboard and allow it to snap into place for ergonomic support.



Image: A top-down view of the ROCCAT Vulcan Pro keyboard, highlighting its full-size layout, RGB illuminated keys, and detachable palm rest.

2. ROCCAT Kone Pro Air Mouse Setup

- 1. Charging the Mouse:** Connect the USB-C PhantomFlex charging cable to the front of the mouse and to a USB port on your PC. Allow the mouse to fully charge before first use. A full charge provides over 100 hours of battery life. A 10-minute charge provides 5 hours of play time.
- 2. Connectivity Options:**
 - **2.4GHz Wireless (Gaming Mode):** Plug the included USB wireless dongle into an available USB port on your PC. The mouse will automatically connect. This mode offers the lowest latency for gaming.
 - **Bluetooth (Productivity Mode):** Switch the toggle on the bottom of the mouse to Bluetooth mode. On your PC, go to Bluetooth settings and pair with "ROCCAT Kone Pro Air". This mode is ideal for general use and conserves battery.
- 3. Install ROCCAT Swarm Software (Recommended):** For advanced customization of DPI settings, button remapping, macros, and AIMO RGB lighting, download and install the ROCCAT Swarm software from the official ROCCAT website (www.roccat.com/pages/swarm).





Image: A front view of the ROCCAT Kone Pro Air mouse, showcasing its ergonomic shape, translucent Bionic Shell, and vibrant RGB lighting.

OPERATING INSTRUCTIONS

ROCCAT Vulcan Pro Keyboard Features

- **Titan Switch Optical:** Experience lightspeed actuation with the linear Titan Switch Optical, providing a familiar mechanical keystroke feel with enhanced responsiveness and durability (rated for 100 million keystrokes).
- **AIMO Illumination:** The proprietary AIMO lighting ecosystem offers vivid, intelligent RGB lighting with 16.8 million

colors. Customize effects and synchronize with other compatible ROCCAT devices via Swarm software.

- **Mixer-Style Media Controls:** Conveniently located dedicated media controls, including a volume dial and backlit buttons, allow for on-the-fly audio adjustments and lighting brightness control.



MIXER-STYLE MEDIA CONTROLS

Image: A detailed view of the ROCCAT Vulcan Pro keyboard's mixer-style media controls, including the volume dial and dedicated media buttons.

- **Advanced Anti-Ghosting:** Optimized technology ensures every keystroke of frequently used keys is registered accurately, even during intense gaming sessions.
- **Low-Profile Design:** Engineered for comfort and reduced fatigue during extended use, complemented by a durable anodized aluminum top plate.

ROCCAT Kone Pro Air Mouse Features

- **Ergonomic Shape & Lightweight Design:** The Kone Pro Air's refined ergonomic shape, perfected over years of research, provides superior comfort for various hand sizes and grip styles, weighing only 75g.

FEEL IS FLOW



Image: A hand gripping the ROCCAT Kone Pro Air mouse, demonstrating its ergonomic fit and the vibrant RGB lighting visible through the Bionic Shell.

- **Titan Switch Optical (Mouse):** Faster than traditional mechanical switches, the mouse's Titan Switch Optical provides a 100 million click life cycle and speed-of-light actuation for precision.
- **Owl-Eye 19K DPI Optical Sensor:** Experience incredible precision and tracking accuracy with the high-performance Owl-Eye optical sensor, customizable up to 19,000 DPI via Swarm software.
- **ROCCAT Bionic Shell & AIMO RGB:** The solid, lightweight honeycomb shell features a translucent fade on the main clicks, allowing the signature AIMO RGB lighting (16.8 million colors) to shine through while keeping dust and dirt out.
- **Titan Wheel Pro:** An aluminum scroll wheel designed for tactile feedback and durability.
- **Pure PTFE Glides:** Heat-treated pure PTFE glides ensure smooth, low-friction movement across various surfaces.

MAINTENANCE

- **Cleaning the Keyboard:** Use a soft, dry, lint-free cloth to wipe down the keyboard surface. For deeper cleaning, use compressed air to remove debris from between keycaps. Avoid using harsh chemicals or abrasive materials.

- **Cleaning the Mouse:** Gently wipe the mouse surface with a soft, slightly damp cloth. Ensure no liquid enters the mouse. Clean the optical sensor area with a cotton swab if tracking issues occur.
- **Cable Management:** Keep cables tidy to prevent tangles and damage.
- **Storage:** When not in use for extended periods, store the devices in a clean, dry environment away from extreme temperatures.

TROUBLESHOOTING

Keyboard Not Responding:

- Ensure the USB cable is securely plugged into both the keyboard and the PC.
- Try a different USB port on your PC.
- Restart your computer.
- Check if the keyboard is disabled in your operating system's device manager.

Mouse Not Responding/Lagging:

- **Wireless (2.4GHz):** Ensure the USB dongle is securely plugged in and close to the mouse. Check mouse battery level.
- **Bluetooth:** Ensure Bluetooth is enabled on your PC and the mouse is paired. Check mouse battery level.
- Try charging the mouse.
- Clean the optical sensor on the bottom of the mouse.
- Ensure the mouse is on a suitable surface (not highly reflective or transparent).

RGB Lighting Issues:

- Ensure ROCCAT Swarm software is installed and updated.
- Check lighting settings within the Swarm software.
- Verify that the devices are properly connected.

Software Not Recognizing Device:

- Ensure ROCCAT Swarm software is the latest version.
- Try reinstalling the Swarm software.
- Restart your PC after installation.

SPECIFICATIONS

ROCCAT Vulcan Pro Keyboard & Kone Pro Air Mouse

Feature	Description
Brand	ROCCAT
Keyboard Switch Type	Titan Switch Optical (Linear)
Keyboard Layout	Full Size
Keyboard Lighting	Per-Key AIMO RGB (16.8 million colors)
Keyboard Top Plate	Anodized Aluminum

Feature	Description
Mouse Connectivity	2.4GHz Wireless, Bluetooth
Mouse Sensor	Owl-Eye Optical Sensor (up to 19,000 DPI)
Mouse Weight	75g
Mouse Battery Life	100+ hours
Mouse Charging	USB-C PhantomFlex (Rapid Charge)
Switch Durability	100 million keystrokes/clicks
Color	Black

WARRANTY AND SUPPORT

ROCCAT products are built with quality and longevity in mind. Both the ROCCAT Vulcan Pro Keyboard and Kone Pro Air Mouse come with a **2-year limited manufacturer warranty**.

For technical support, driver downloads, FAQs, and warranty claims, please visit the official ROCCAT support website: support.roccat.com. You can also visit the ROCCAT store on Amazon for product information: [ROCCAT Amazon Store](#).