

[Manuals.plus](#) /

› [jovant](#) /

› jovant 3-in-1 Pole Pruning Shears & Battery Pole Saw Instruction Manual

jovant PTJ-COMB-001

jovant 3-in-1 Pole Pruning Shears & Battery Pole Saw Instruction Manual

Model: PTJ-COMB-001 | Brand: jovant

1. INTRODUCTION

The jovant 3-in-1 Pole Pruning Shears and Battery Pole Saw system is designed for efficient and safe tree trimming. This versatile tool combines an electric pruner, a 6-inch chainsaw, and a telescoping pole, allowing for a maximum overhead reach of 15.3 feet. It is powered by two 20V 4.0Ah lithium-ion batteries, providing cordless operation for various pruning tasks.

Pole Pruning Shears & Battery Pole Saw



Image 1.1: The jovant 3-in-1 system demonstrating both pruning shears and pole saw attachments in action.

2. SAFETY INFORMATION

Always prioritize safety when operating power tools. Read and understand all instructions before use. Keep hands and body clear of cutting blades and chains. Wear appropriate personal protective equipment (PPE) including safety glasses, gloves, and hearing protection.

- **Dual-Locking System:** The electric pruner features a dual-locking system to prevent accidental startup and potential injury. Ensure both locks are engaged when not in use.
- **Telescoping Pole Safety:** The telescoping pole is equipped with a safety lock knob. Always ensure this knob is securely tightened to prevent accidental dislodgement during operation.
- **Clear Work Area:** Ensure the work area is clear of bystanders, pets, and obstacles.
- **Stable Footing:** Maintain stable footing, especially when using the extension pole for high branches. Avoid overreaching.
- **Battery Safety:** Use only specified batteries and chargers. Do not expose batteries to extreme temperatures or

moisture.

Function Introduction

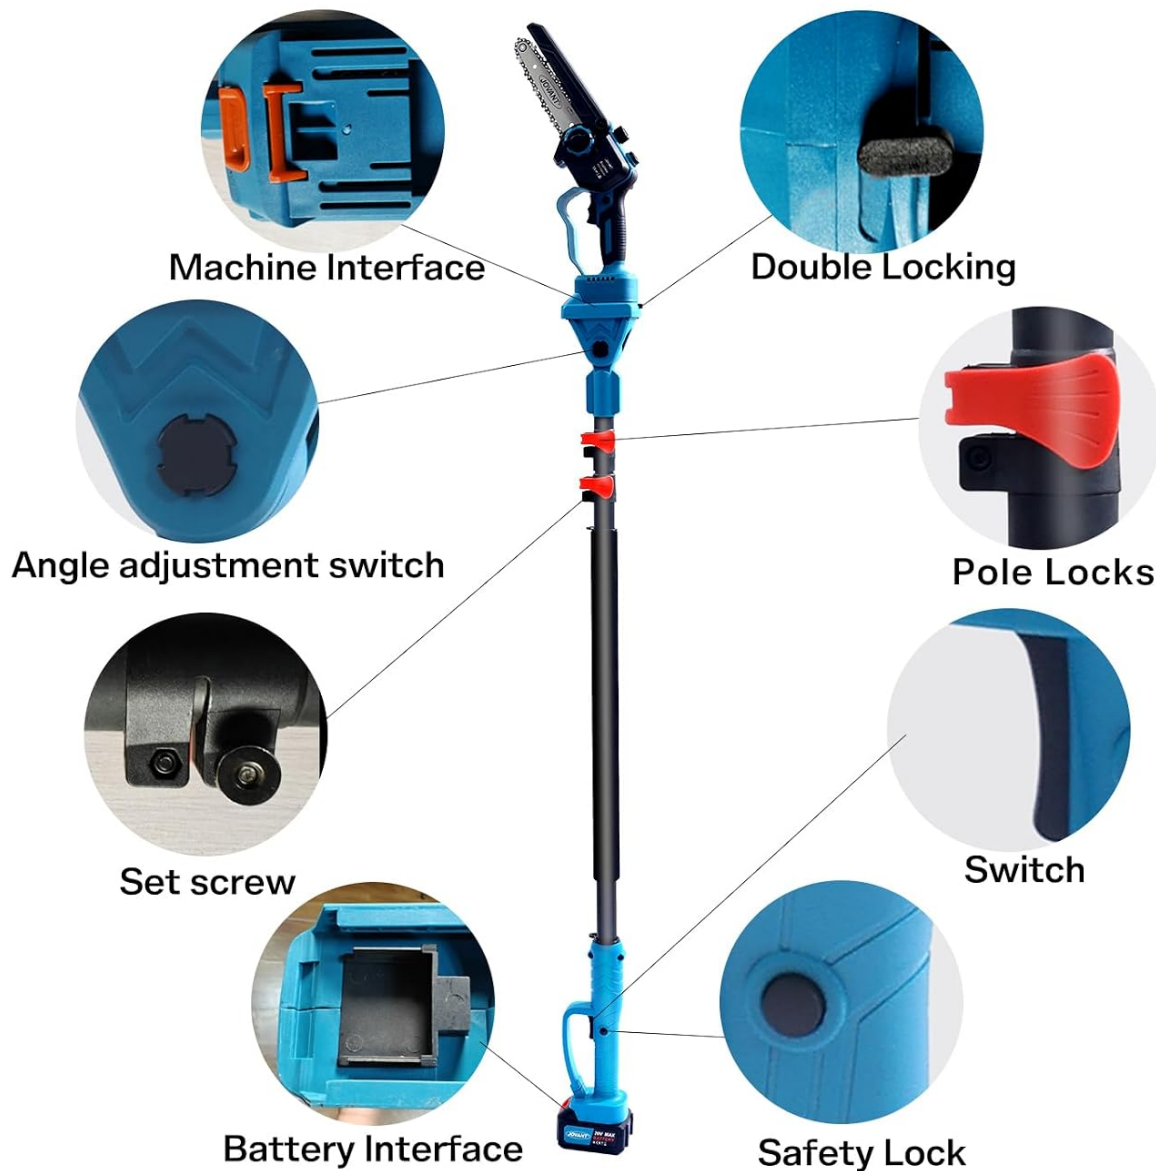


Image 2.1: Overview of key functional and safety components.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Electric Pruner (30mm) x1
- 6-inch Chainsaw x1
- Telescoping Extension Pole x1
- 4.0Ah (4000mAh) Lithium-ion Battery Packs x2
- Chains x3 (1 pre-installed on chainsaw)
- Chain Plates x2 (1 pre-installed on chainsaw)
- Quick Charger x1
- Guide Plate Cover x1

- Chain Protection Cover x1
- Chain Filing Tool x1
- Portable Storage Bag x1

4. SETUP

4.1 Battery Charging and Installation

1. Insert the 4.0Ah battery pack into the quick charger.
2. Plug the charger into a standard power outlet. The indicator light on the charger will show charging status.
3. Once fully charged (typically within two hours), remove the battery from the charger.
4. Align the charged battery with the battery interface on the electric pruner or chainsaw, then slide it in until it clicks securely into place.



Image 4.1: Battery technology and safety features.

4.2 Attaching Tools to the Telescoping Pole

1. Select either the electric pruner or the 6-inch chainsaw.
2. Align the machine interface of the selected tool with the top end of the telescoping pole.
3. Push the tool onto the pole until it is firmly seated.
4. Secure the connection using the set screw or locking mechanism on the pole, ensuring it is tight to prevent movement during operation.
5. Adjust the pole length by releasing the pole locks, extending to the desired length (5.3 ft to 9.3 ft), and then re-engaging the locks securely.

Your browser does not support the video tag.

Video 4.2: Demonstration of assembling the adjustable extension pole saw. This video shows how to connect the saw attachment to the telescoping pole and adjust its length for various trimming needs.

Your browser does not support the video tag.

Video 4.3: Overview of the 2-in-1 Pole Pruning Shears. This video illustrates the components and basic assembly of the pruning shears with the extension pole.

5. OPERATING INSTRUCTIONS

5.1 Using the Electric Pruner

1. Ensure the battery is installed and fully charged.
2. To activate, press the safety lock button and then squeeze the trigger. The dual-locking system prevents accidental activation.
3. Position the blades around the branch to be cut. The pruner can cut branches up to 30mm (1.2 inches) in diameter.
4. Squeeze the trigger fully to make a clean cut. Release the trigger to stop the blades.

5.2 Using the 6-inch Chainsaw

1. Ensure the battery is installed and fully charged.
2. Check that the chain is properly tensioned and lubricated.
3. To activate, press the safety lock button and then squeeze the trigger.
4. Position the chainsaw blade against the branch. Apply gentle pressure and let the saw do the work.
5. Maintain a firm grip and stable stance.

1.2" Electric Pruning Shears & 6" Battery Powered Chainsaw



Image 5.1: Individual electric pruner and chainsaw units.

5.3 Using with the Telescoping Pole

When using either tool with the telescoping pole, ensure the pole is securely assembled and locked at the desired length. The pole extends from 5.3 ft to 9.3 ft, providing an overhead reach of up to 15.3 ft for a 6 ft tall user. This allows for safe trimming of high branches without a ladder.



Image 5.2: Maximum overhead reach with the telescoping pole.

Extends Up To 15-Feet Height



Image 5.3: Various pole extension lengths for different tasks.

6. MAINTENANCE

6.1 General Cleaning

After each use, clean the tools to remove sap, debris, and dust. Use a damp cloth for the tool bodies. For blades and chains, use a brush and appropriate cleaning solution. Ensure all parts are dry before storage.

6.2 Blade and Chain Maintenance

- **Pruner Blades:** Keep the pruner blades sharp for optimal performance. Sharpen as needed with a suitable sharpening tool.
- **Chainsaw Chain:** Regularly check the chainsaw chain for sharpness and tension. Sharpen the chain using the provided chain filing tool or a dedicated chainsaw sharpener. Ensure the chain is properly lubricated before and during use.



Image 6.1: Example of a chainsaw sharpener for maintenance.

6.3 Battery Care

Store batteries in a cool, dry place away from direct sunlight and extreme temperatures. Do not store fully discharged batteries for extended periods. Charge them periodically if not in use to maintain battery health.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tool does not start	Battery not charged or improperly installed; Safety lock not disengaged; Tool malfunction.	Ensure battery is fully charged and correctly installed. Disengage safety lock before pressing trigger. If problem persists, contact customer support.
Poor cutting performance	Dull blade/chain; Incorrect chain tension (chainsaw); Overloading the tool.	Sharpen or replace blade/chain. Adjust chainsaw chain tension. Do not force the tool; allow it to cut at its own pace.
Tool stops during operation	Battery low; Overload protection activated; Overheating.	Recharge battery. Reduce load on the tool. Allow tool to cool down before resuming use.

8. SPECIFICATIONS

- **Model Number:** PTJ-COMB-001
- **Brand:** jovant
- **Power Source:** Battery Powered
- **Voltage:** 20 Volts
- **Wattage:** 80 watts
- **Battery Capacity:** 2 x 4.0Ah Lithium-ion (included)
- **Electric Pruner Capacity:** Up to 30mm (1.2 inches)
- **Chainsaw Blade Length:** 6 Inches
- **Telescoping Pole Length:** 5.3 ft to 9.3 ft (15.3 ft max overhead reach)
- **Item Weight:** 6.6 Pounds (approximate, tool only)
- **Blade Material:** High Carbon Steel
- **Handle Material:** Composite or Metal Alloy
- **Color:** Black, Orange

9. WARRANTY AND SUPPORT

jovant provides dedicated customer service for all inquiries and concerns about this product. Our support team aims to respond to messages within 24 hours to resolve any issues with your electric trimming kit.

For warranty claims or technical assistance, please contact jovant customer support through the retailer where the product was purchased or visit the official jovant website.

This product comes with a full warranty. Please retain your proof of purchase for any warranty claims.

