

## SEVERIN WKS 8908

# SEVERIN Wine Cooler User Manual

Model: WKS 8908

## 1. INTRODUCTION

Thank you for choosing the SEVERIN Wine Cooler WKS 8908. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before use and keep it for future reference.

### 1.1 Safety Instructions

- Ensure the appliance is placed on a stable, level surface away from direct sunlight or heat sources.
- Do not block ventilation openings. Maintain adequate space around the cooler for proper air circulation.
- This appliance is intended for household use only, specifically for storing wine bottles.
- Do not store explosive substances such as aerosol cans with flammable propellants in this appliance.
- Unplug the appliance from the power outlet before cleaning or performing any maintenance.
- Keep children away from the appliance, especially when the door is open.
- In case of malfunction, do not attempt to repair the appliance yourself. Contact authorized service personnel.

## 2. SETUP

### 2.1 Unpacking

Carefully remove the wine cooler from its packaging. Inspect the appliance for any signs of damage during transit. Retain the packaging materials for future transport or if the appliance needs to be returned.

### 2.2 Placement

Place the wine cooler in a well-ventilated area. Avoid placing it near heat sources like ovens, radiators, or in direct sunlight. Ensure there is at least 10 cm of space around the back and sides for proper ventilation. The appliance is designed for an ambient temperature range of 15°C to 25°C.

### 2.3 Initial Cleaning

Before first use, clean the interior and exterior of the wine cooler with a soft cloth dampened with mild detergent and water. Wipe dry thoroughly. Do not use abrasive cleaners or solvents.

## 2.4 Power Connection

Plug the appliance into a grounded electrical outlet. Allow the wine cooler to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant to settle.





Figure 2.1: Front view of the SEVERIN Wine Cooler WKS 8908.

## 3. OPERATING INSTRUCTIONS

---

### 3.1 Temperature Control

The desired temperature can be set continuously from 5°C to 18°C using the external touch display. To adjust the temperature, use the '+' and '-' buttons on the control panel. The current temperature will be displayed digitally.

**Digital einstellbare Temperatur  
von 5 °C bis 18 °C**

**Zur Lagerung von bis zu  
33 Flaschen à 0,75 l**



Figure 3.1: Digital temperature control from 5°C to 18°C and capacity for up to 36 bottles.

### 3.2 LED Interior Lighting

The wine cooler features internal LED lighting. This can be switched on or off as needed via a dedicated button on the touch control panel to illuminate your wine collection.

### 3.3 Loading Bottles

The cooler has 6 chrome-plated shelves, 5 of which are height-adjustable, allowing flexible storage for various bottle sizes. The total capacity is up to 36 standard 0.75L wine bottles. Arrange bottles to ensure proper air circulation and avoid overloading shelves.





Figure 3.2: Interior view of the wine cooler with bottles on the shelves.

## 4. MAINTENANCE

### 4.1 Cleaning

Regular cleaning helps maintain the efficiency and appearance of your wine cooler. Always unplug the appliance before cleaning.

- **Interior:** Clean the interior with a solution of mild detergent and warm water. Wipe down shelves and interior walls. Rinse with clean water and dry thoroughly.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. For stubborn marks, use a mild, non-abrasive cleaner.
- **Door Seal:** Clean the door seal regularly to ensure a tight seal and prevent energy loss.

### 4.2 Defrosting

The SEVERIN Wine Cooler WKS 8908 features an automatic defrost function. This means that ice buildup is prevented, and manual defrosting is not required. Any condensed water will evaporate automatically.

## 5. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and their solutions:

Problem	Possible Cause	Solution
Appliance does not operate	No power supply; Power cord not plugged in; Circuit breaker tripped.	Check power connection; Ensure outlet is functional; Reset circuit breaker.
Temperature is not cold enough	Door not closed properly; Door opened too frequently; Ambient temperature too high; Ventilation blocked; Temperature setting too high.	Ensure door is sealed; Reduce door openings; Move appliance to cooler location; Clear ventilation; Lower temperature setting.
Appliance is noisy	Appliance not level; Objects vibrating inside; Normal compressor operation.	Adjust leveling feet; Secure loose items; This is normal. The appliance operates at a quiet 42 dB.
Water on the floor	Drainage hole blocked (unlikely with auto-defrost); Excessive humidity.	Check for blockages if applicable; Ensure proper ventilation.

## 6. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	SEVERIN
Model Number	WKS 8908
Product Dimensions	48 x 43 x 85 cm
Net Weight	31.2 Kilograms

Feature	Specification
Capacity	95 Liters (up to 36 x 0.75L bottles)
Annual Energy Consumption	140 kWh per year
Cooling Compartment Volume	95 Liters
Temperature Range	5°C to 18°C
Noise Level	42 dB
Defrost System	Automatic
Door Hinge	Right
Number of Shelves	6 (5 height-adjustable)
Color	Black
Voltage	230 Volts

## 7. WARRANTY AND SUPPORT

---

SEVERIN products are manufactured to high-quality standards and are subject to strict quality controls. In the unlikely event of a defect, please refer to the warranty conditions provided with your purchase documentation. For technical support, spare parts, or service inquiries, please contact your local SEVERIN service center or visit the official SEVERIN website for contact information.

Please have your model number (WKS 8908) and purchase date ready when contacting support.