

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [eeese air care](#) /
- › [Eeese Emma Dehumidifier User Manual](#)

eeese air care Parent_EEESE

Eeese Emma Dehumidifier User Manual

Model: Parent_EEESE

1. PRODUCT OVERVIEW

The Eeese Emma Dehumidifier is an electric appliance designed to reduce humidity levels in indoor spaces, improving air quality and comfort. It is suitable for rooms up to 50 m² and features an integrated air purifier function. This manual provides essential information for safe and efficient operation.





Image 1.1: Front view of the Eeese Emma Dehumidifier, showing the control panel on top.

Key Features:

- Extremely quiet operation (35 dB(A)).
- Low power consumption (145 watts).
- IPX4 rated, suitable for bathrooms.
- Washable air filter.
- Automatic shut-off when water tank is full.
- Automatic timer function.
- Practical handle for easy portability.
- Child lock function.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance to prevent injury or damage.

- **Electrical Safety:** Ensure the power supply matches the rating label on the dehumidifier. Do not operate with a damaged power cord or plug. Do not immerse the appliance in water.
- **Placement:** Place the dehumidifier on a stable, level surface. Maintain at least 20 cm clearance from walls and furniture to ensure proper airflow. Do not block air inlets or outlets.
- **Water Tank:** Always empty the water tank before moving the appliance. Do not drink the collected water.
- **Children and Pets:** Keep the appliance out of reach of children and pets. Use the child lock function to prevent accidental operation.

- **Maintenance:** Unplug the appliance before cleaning or performing any maintenance.
- **IPX4 Rating:** This appliance is IPX4 rated, meaning it is protected against splashing water from any direction. It is suitable for use in bathrooms, but avoid direct water spray.
- **Repairs:** Do not attempt to repair the appliance yourself. Contact qualified service personnel for repairs.

3. SETUP

3.1 Unpacking

1. Carefully remove the dehumidifier from its packaging.
2. Remove all packing materials and dispose of them responsibly.
3. Inspect the appliance for any signs of damage. If damaged, do not use and contact your retailer.

3.2 Placement

Choose a suitable location for the dehumidifier. For optimal performance, place it in the room where dehumidification is most needed.

- Ensure the appliance is placed on a firm, level surface.
- Allow at least 20 cm of space around the air inlet and outlet for unrestricted airflow.
- Avoid placing near heat sources or in direct sunlight.
- The appliance is suitable for rooms up to 50 m².



Image 3.1: Back view of the dehumidifier, highlighting the air filter and continuous drainage port.

3.3 Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the appliance.

3.4 Continuous Drainage (Optional)

For continuous operation without needing to empty the water tank, you can connect a drainage hose (not always included, check packaging) to the continuous drainage port located at the back of the unit. Ensure the hose is sloped downwards to allow water to drain by gravity into a suitable drain.

4. OPERATING INSTRUCTIONS

The control panel is located on the top of the dehumidifier. Familiarize yourself with the buttons and indicators.





Image 4.1: Detailed view of the control panel, showing power, mode, humidity, timer, and sleep mode buttons.

4.1 Power On/Off

Press the **Power** button to turn the dehumidifier on or off.

4.2 Setting Desired Humidity

Press the **Humidity** button repeatedly to cycle through desired humidity levels (e.g., 40%, 50%, 60%, Continuous). The selected humidity level will be displayed.

4.3 Timer Function

Press the **Timer** button to set the operating duration (e.g., 2, 4, 8 hours). The unit will automatically turn off after the set time.

4.4 Sleep Mode

Activate **Sleep Mode** for quiet operation during the night. In this mode, the fan speed is reduced, and the display lights may dim or turn off.

4.5 Child Lock

Press and hold the **Child Lock** button (often combined with another function, refer to control panel image for specific icon) for a few seconds to activate or deactivate the child lock. This prevents accidental changes to settings.

4.6 Water Tank Full Indicator

When the water tank is full, the dehumidifier will automatically shut off, and an indicator light will illuminate. Empty the water tank as described in the Maintenance section.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your dehumidifier.

5.1 Cleaning the Air Filter

1. Turn off and unplug the dehumidifier.
2. Locate the air filter cover on the back of the unit (refer to Image 3.1).
3. Remove the filter.
4. Wash the filter with clean water and a mild detergent.
5. Rinse thoroughly and allow it to air dry completely before reinserting.
6. Reinstall the dry filter and close the cover.

Clean the air filter every two weeks or more frequently depending on usage and air quality.

5.2 Emptying and Cleaning the Water Tank

1. When the water tank is full, the unit will stop operating. Carefully pull out the water tank from the front or side of the unit.
2. Empty the collected water.
3. Clean the tank with a mild detergent and water periodically to prevent mold or mildew growth.
4. Rinse thoroughly and ensure it is dry before reinserting it into the dehumidifier.
5. Push the tank firmly back into place until it clicks.

5.3 Storage

If storing the dehumidifier for an extended period:

- Unplug the unit and empty the water tank.
- Clean the air filter and the exterior of the unit.
- Store the unit upright in a dry, dust-free environment.

6. TROUBLESHOOTING

Before contacting customer support, please refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Dehumidifier does not turn on.	No power supply. Water tank is full or not properly inserted.	Check power cord and outlet. Empty and reinsert water tank correctly.
No water collected / Low dehumidification.	Room temperature too low. Air filter is clogged. Humidity setting is too high. Doors/windows are open.	Dehumidifiers work best above 5°C. Clean the air filter. Lower the desired humidity setting. Close doors and windows.
Unusual noise.	Unit not on a level surface. Obstruction in fan.	Place on a flat, stable surface. Turn off and unplug, check for obstructions.
Odor from unit.	Dirty air filter or water tank.	Clean air filter and water tank thoroughly.

7. SPECIFICATIONS

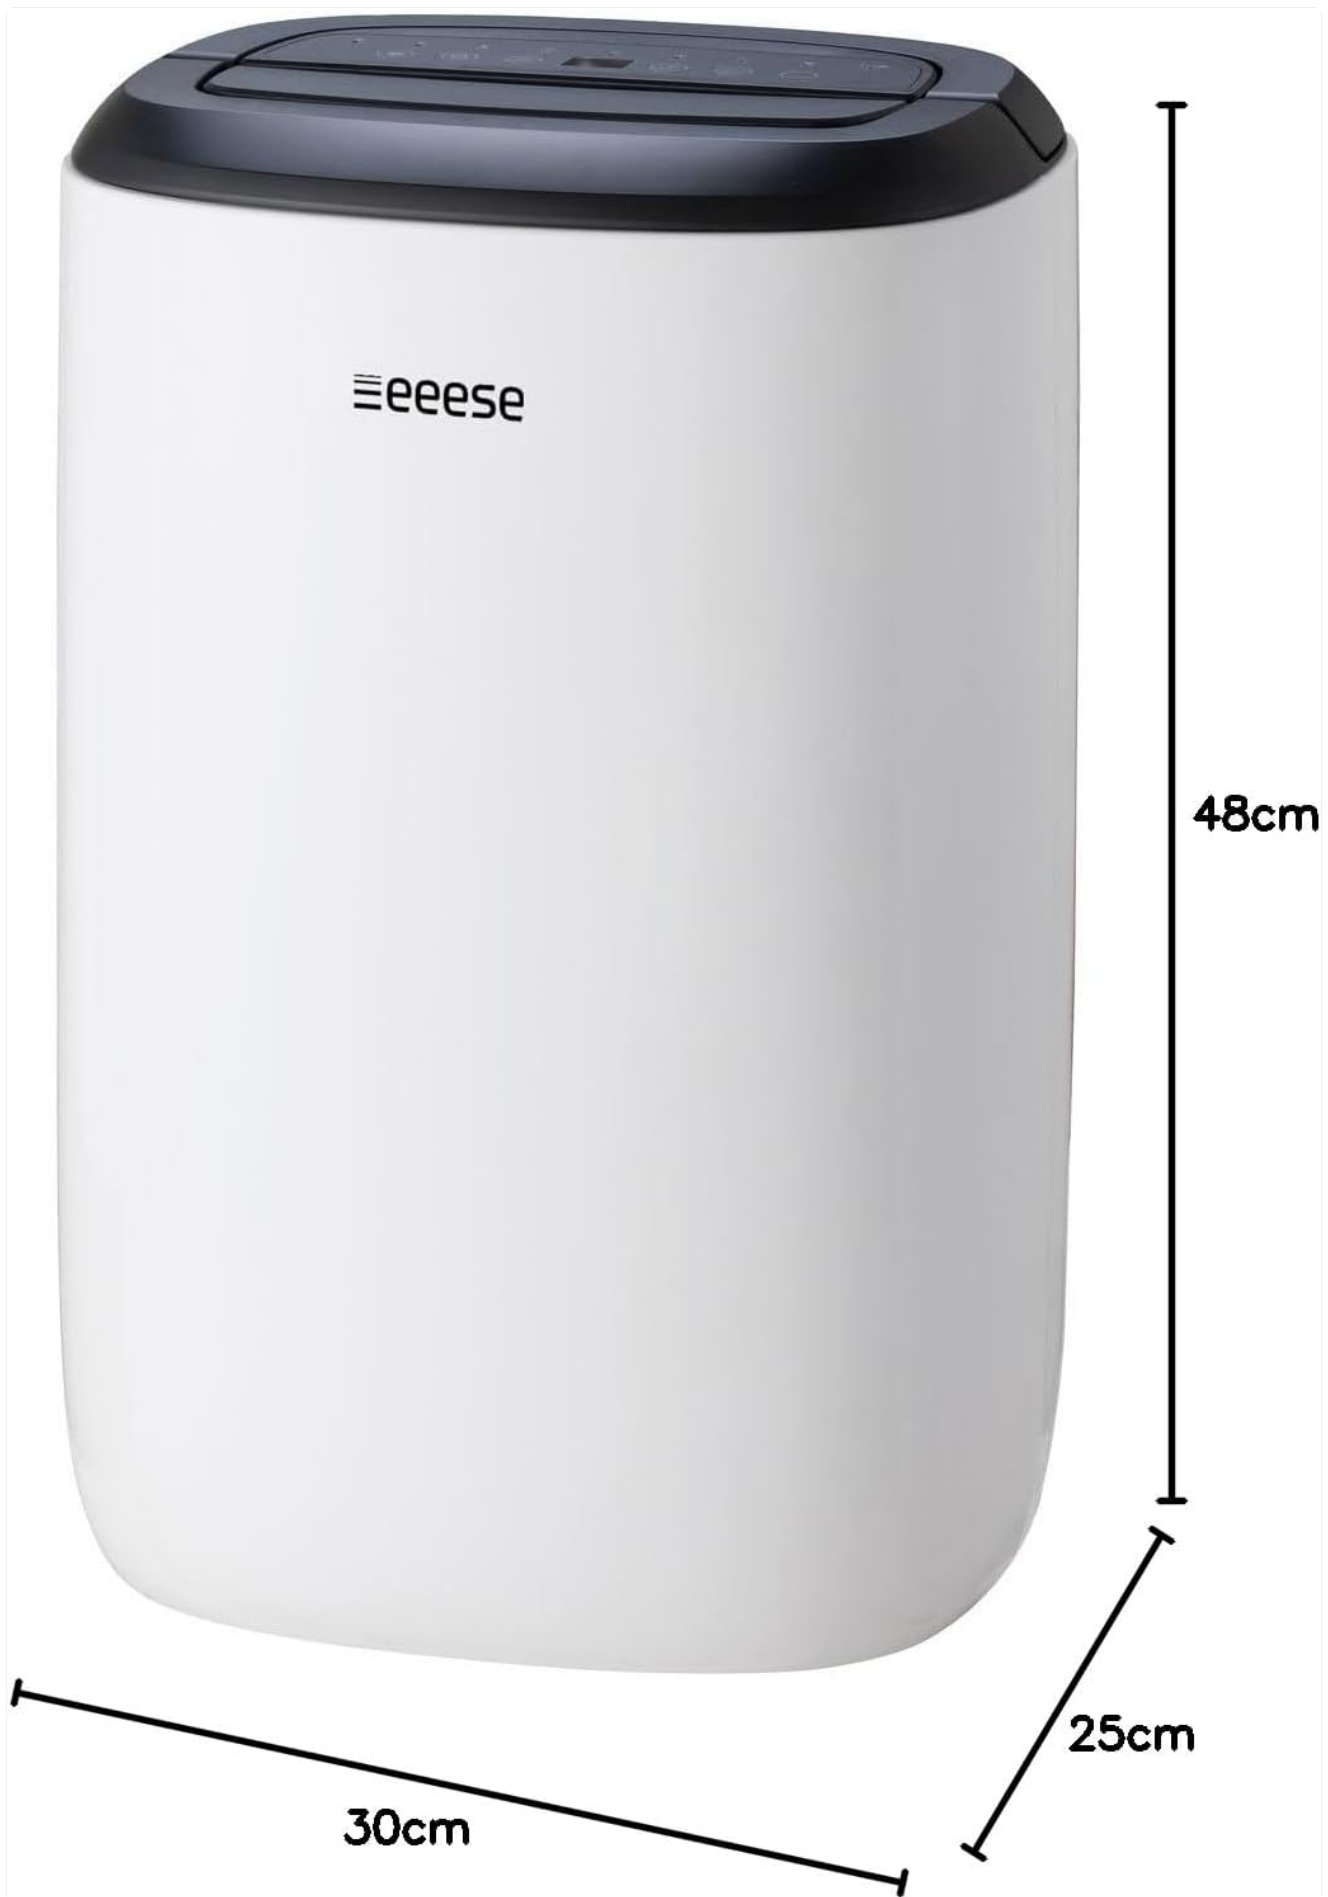


Image 7.1: Product dimensions of the Eeese Emma Dehumidifier.

Feature	Detail
---------	--------

Feature	Detail
Brand	eeese air care
Model Number	Parent_EEERE
Product Dimensions (D x W x H)	25 x 30 x 48 cm
Recommended Room Size	Up to 50 m ²
Color	Luna
Wattage	145 watts
Dehumidification Capacity	13 Liters/day
Water Tank Volume	12 Liters
Noise Level	35 dB(A)
Special Features	Extremely quiet, low power consumption, IPX4-classified, washable air filter, automatic shut-off, automatic timer, practical handle, child lock.
Included Components	Water reservoir

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The Eeese Emma Dehumidifier comes with a standard manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including warranty duration and coverage details. Keep your proof of purchase for warranty claims.

8.2 Customer Support

If you encounter any issues that cannot be resolved using the troubleshooting guide, or if you require further assistance, please contact Eeese Air Care customer support. Contact details can typically be found on the manufacturer's website or on the product packaging.

When contacting support, please have your product model number (Parent_EEERE) and purchase date ready.