

[manuals.plus](#) /

› [eeese air care](#) /
› [Eeese Emma Dehumidifier User Manual - Model Parent_EEESE](#)

eeese air care Emma (Parent_EEESE)

Eeese Emma Dehumidifier User Manual

Model: Emma (Parent_EEESE)

1. INTRODUCTION

Thank you for choosing the Eeese Emma Dehumidifier. This appliance is designed to efficiently remove excess moisture from the air, creating a healthier and more comfortable indoor environment. It features quiet operation, low power consumption, and smart functions for ease of use. Please read this manual carefully before operating the unit and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not operate the dehumidifier with a damaged cord or plug.
- Ensure the power supply matches the voltage specified on the rating label.
- Always plug the unit into a grounded electrical outlet.
- Do not block the air inlet or outlet. Maintain at least 20 cm (8 inches) clearance around the unit.
- Do not insert objects into the air outlet or inlet.
- Do not use the appliance near water or in excessively wet environments unless specifically rated for it (this unit is IPX4 rated for bathroom use).
- Always turn off and unplug the unit before cleaning or performing any maintenance.
- Keep the appliance out of reach of children. This unit includes a child lock feature.
- Do not attempt to repair or disassemble the unit yourself. Contact qualified service personnel.
- Empty the water tank regularly to prevent overflow and potential water damage.

3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Eeese Emma Dehumidifier.







Figure 3.1: Control Panel - Top view of the Eeese Emma Dehumidifier, showing the control panel with various function buttons and display.



Figure 3.2: Front View - Front view of the Eeese Emma Dehumidifier, displaying its compact and modern design.



Figure 3.3: Rear View - Rear view of the Eeese Emma Dehumidifier, highlighting the air filter cover and continuous drainage outlet.



Figure 3.4: Integrated Handle - Side view of the Eeese Emma Dehumidifier, demonstrating the integrated handle for easy portability.

Key Components:

- **Control Panel:** For setting desired humidity, timer, and other functions.
- **Air Inlet:** Where moist air enters the unit.
- **Air Outlet:** Where dry air is expelled.
- **Water Tank:** Collects condensed water. Features automatic shut-off when full.
- **Continuous Drainage Outlet:** For connecting a drain hose for continuous operation.
- **Washable Air Filter:** Filters dust and particles from the air.
- **Integrated Handle & Wheels:** For easy movement between rooms.

4. SETUP

4.1 Unpacking

1. Carefully remove the dehumidifier from its packaging.
2. Remove all packing materials, tapes, and protective films.
3. Inspect the unit for any damage. If damaged, do not operate and contact customer support.

4.2 Placement

- Place the dehumidifier on a firm, level surface to prevent vibrations and water leakage.
- Ensure there is at least 20 cm (8 inches) of unobstructed space around the air inlet and outlet for optimal airflow.
- The Eeese Emma Dehumidifier is suitable for rooms up to 50 m².
- This unit is IPX4 rated, making it suitable for use in bathrooms and other damp environments.

4.3 Power Connection

- Ensure the power cord is fully extended and free from kinks.
- Plug the power cord into a properly grounded electrical outlet.

4.4 Continuous Drainage (Optional)

For continuous operation without needing to empty the water tank, you can connect a drain hose (often included) to the unit.

1. Locate the continuous drainage outlet at the back of the dehumidifier (refer to Figure 3.3).
2. Connect one end of the drain hose to this outlet.
3. Lead the other end of the hose to a suitable drain, ensuring it is sloped downwards to allow water to flow out freely.
4. Ensure the hose is not kinked or blocked.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Functions

Refer to Figure 3.1 for the layout of the control panel.

- **Power Button:** Press to turn the dehumidifier ON or OFF.
- **Humidity Setting Button:** Press to adjust the desired humidity level (e.g., 30% to 80% Relative Humidity). The unit will operate until the set humidity is reached.
- **Timer Button:** Press to set the auto-on or auto-off timer (e.g., 1-24 hours).
- **Sleep Mode Button:** Activates Sleep Mode, reducing fan speed and noise level for quiet operation (approx. 35 dB(A)).
- **Child Lock Button:** Press and hold to activate/deactivate the child lock, preventing accidental changes to settings.
- **Display:** Shows current humidity, set humidity, or timer settings.
- **Water Full Indicator:** Illuminates when the water tank is full, and the unit automatically stops operating.

5.2 Power On/Off

Press the Power button once to turn the unit ON. Press it again to turn the unit OFF.

5.3 Setting Desired Humidity

When the unit is ON, press the Humidity Setting button repeatedly to cycle through desired humidity levels. The unit will automatically maintain the set humidity level.

5.4 Timer Function

The timer function allows you to set a specific time for the unit to automatically turn ON or OFF.

- **Auto-Off:** With the unit ON, press the Timer button to set the desired number of hours (1-24) after which the unit will turn off.
- **Auto-On:** With the unit OFF, press the Timer button to set the desired number of hours (1-24) after which the unit will turn on.

5.5 Sleep Mode

Press the Sleep Mode button to activate quiet operation. The fan speed will decrease, and the display lights may dim to minimize disturbance, making it ideal for use in bedrooms.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your dehumidifier.

6.1 Cleaning the Air Filter

The Eeese Emma Dehumidifier features a washable air filter. Clean the filter regularly (e.g., every two weeks or as needed) to maintain efficiency.

1. Turn off and unplug the dehumidifier.
2. Remove the air filter cover from the back of the unit (refer to Figure 3.3).
3. Carefully remove the air filter.
4. Wash the filter with mild soap and lukewarm water. Rinse thoroughly.
5. Allow the filter to air dry completely before reinserting it into the unit. Do not use a dryer or direct sunlight.
6. Reattach the air filter cover.

6.2 Emptying and Cleaning the Water Tank

When the water tank is full, the unit will automatically shut off, and the Water Full indicator will illuminate. Empty the tank promptly.

1. Turn off and unplug the dehumidifier.
2. Carefully pull out the water tank from the unit.
3. Pour out the collected water.
4. Clean the inside of the tank periodically with mild detergent and water to prevent mold or mildew growth. Rinse thoroughly.
5. Reinsert the empty water tank firmly into the unit. Ensure it is properly seated to allow the unit to resume operation.

6.3 Cleaning the Exterior

Wipe the exterior of the dehumidifier with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.

6.4 Storage

If storing the unit for an extended period:

- Ensure the water tank is empty and clean.
- Clean the air filter.
- Unplug the power cord and coil it neatly.
- Store the unit upright in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Before contacting customer support, please refer to the following table for common issues and solutions.

Problem	Possible Cause	Solution
Dehumidifier does not turn on.	No power supply. Water tank full or not properly inserted.	Check if the unit is plugged in and the outlet is working. Empty the water tank and ensure it is correctly seated.

Problem	Possible Cause	Solution
No water collected or insufficient dehumidification.	Air filter is dirty. Humidity setting is too high. Room temperature is too low. Air inlet/outlet blocked.	Clean the air filter. Lower the desired humidity setting. Dehumidifiers are less effective in cold environments. Ensure proper clearance around the unit.
Unit is noisy.	Unit is not on a level surface. Air filter is dirty.	Place the unit on a flat, stable surface. Clean the air filter.
Water leaks from the unit.	Water tank not properly inserted. Continuous drainage hose is blocked or improperly connected.	Ensure the water tank is firmly in place. Check the drainage hose for kinks or blockages and ensure a secure connection.

8. SPECIFICATIONS

Feature	Specification
Model Number	Parent_EEESE
Dehumidification Capacity	Up to 13 Liters/day
Recommended Room Size	Up to 50 m ²
Power Consumption	145 Watts
Noise Level (Sleep Mode)	Approx. 35 dB(A)
Product Dimensions (D x W x H)	25 x 30 x 48 cm
IP Rating	IPX4 (suitable for bathrooms)
Water Tank Capacity	12 Liters
Special Features	Extremely quiet, low power consumption, washable air filter, automatic shut-off when water tank is full, automatic timer, practical handle, child lock.

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information, technical assistance, or any questions regarding your Eeese Emma Dehumidifier, please contact eese air care customer support. Refer to your purchase documentation for specific warranty terms and contact details.