

[Manuals.plus](#) /

> [ADaga](#) /

> 10-Inch Digital Photo Frame, Multifunction Electronic Photo Frame, Gift for Family and Friends (Silver)

ADaga LSP1-23h2270

ADaga 10-Inch Digital Photo Frame User Manual

Model: LSP1-23h2270

PRODUCT OVERVIEW

The ADaga 10-inch Digital Photo Frame is designed to display your cherished memories in various formats, including photos, videos, and music. Its user-friendly interface and versatile connectivity options make it an ideal device for home or office use.

Key Features:

- High-resolution display (1024x600) with support for multiple photo, video, and audio formats.
- Integrated calendar and clock display for added utility.
- Practical automatic on/off function with versatile scheduling options.
- Elegant and slim design (less than 23mm thick) with discreetly hidden controls and connections.
- Versatile interface including USB, SD card slot, and 3.5mm headphone jack.
- Supports 1080P video format playback.



Image: A display of multiple ADaga digital photo frames in different color options, showcasing the sleek design and available finishes.

SETUP GUIDE

1. Unpacking

Carefully remove the digital photo frame and all accessories from the packaging. Ensure all components listed in the packing list are present: the digital photo frame unit, power adapter, and user manual.

2. Connecting Power

Connect the provided power adapter to the DC IN port on the back of the photo frame. Plug the other end of the adapter into a standard electrical outlet. The frame will typically power on automatically or enter standby mode.

3. Inserting Storage Media

The photo frame supports SD cards and USB drives for media storage. Locate the SD card slot and USB port on the side or back of the frame.

- **For SD Card:** Insert the SD card into the SD card slot until it clicks into place. Ensure the card is inserted in the correct orientation.
- **For USB Drive:** Insert your USB flash drive into the USB port.

OPERATING INSTRUCTIONS

1. Basic Navigation

Use the buttons on the back of the frame or the included remote control to navigate through menus and select options. Common buttons include: Menu, Enter, Up/Down/Left/Right arrows, Exit, and Volume controls.

2. Photo Playback

Once a storage device is inserted, the frame will typically auto-play a slideshow of photos. To manually browse photos or start a new slideshow:

1. From the main menu, select "Photo" or "Picture".
2. Choose the desired storage device (SD card or USB drive).
3. Select a photo to view it individually, or select "Slideshow" to begin a continuous display.



Image: The digital photo frame showcasing a vibrant image of a father and son, demonstrating its photo display capabilities.



Image: A digital photo frame displaying a family photo taken outdoors, illustrating the frame's ability to bring memories to life.

3. Video Playback

The frame supports 1080P video formats. To play videos:

1. From the main menu, select "Video".
2. Choose the storage device containing your video files.
3. Select the video file you wish to play.

4. Music Playback

You can play background music during photo slideshows or listen to music independently.

1. From the main menu, select "Music".
2. Choose the storage device with your music files.
3. Select a song or playlist to begin playback.

5. Calendar and Clock

Access the "Calendar" or "Clock" option from the main menu to view the current date and time. You can usually set the time and date within the system settings.

6. Settings Menu

The "Settings" menu allows you to customize various aspects of the photo frame's operation:

- **Display Settings:** Adjust brightness, contrast, and aspect ratio.
- **Slideshow Settings:** Configure transition effects, display time per photo, and background music.
- **System Settings:** Set language, time zone, auto on/off schedule, and reset to factory defaults.

MAINTENANCE

1. Cleaning

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials. Clean the frame's body with a dry, soft cloth.

2. Storage

When not in use for extended periods, store the digital photo frame in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to disconnect the power adapter.

TROUBLESHOOTING

Problem	Solution
Frame does not power on.	Ensure the power adapter is securely connected to both the frame and a working electrical outlet. Try a different outlet.
No images or videos displayed.	Check if the SD card or USB drive is properly inserted. Ensure media files are in supported formats (JPG, BMP, GIF, PNG, JPEG for images; 1080P video formats). Verify the storage device is not corrupted.
Remote control not working.	Check the battery in the remote control and replace if necessary. Ensure there are no obstructions between the remote and the frame's IR receiver.
Screen is blank or frozen.	Unplug the power adapter, wait 10 seconds, then plug it back in to restart the frame. If the issue persists, try resetting to factory defaults via the settings menu.

TECHNICAL SPECIFICATIONS

Feature	Detail
Screen Size	10 inches
Resolution	1024 x 600 pixels
Material	Hardware

Feature	Detail
Supported Memory Cards	SD Card, USB Drive (U disk)
Supported Image Formats	JPG, BMP, GIF, PNG, JPEG
Supported Video Formats	1080P video formats (specific codecs not detailed)
Product Dimensions	24.8 x 16.4 x 2 CM
Brightness	250 lumens
Actual Visible Area	22.1 x 12.3 CM
Power Mode	Plug-in use
Product Weight	0.65 kg
Color	Silver

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official ADaga website. Keep your proof of purchase for warranty claims.

For further assistance, you may contact ADaga customer service through the contact details provided on their official support channels.