



[Manuals.plus](#) /

> [NexaEase](#) /

> NexaEase Portable Blender Personal Juicer (Model A9) Instruction Manual

## NexaEase A9

# NexaEase Portable Blender Personal Juicer (Model A9) Instruction Manual

Your Guide to Fresh Blends On-The-Go

## 1. INTRODUCTION

---

Thank you for choosing the NexaEase Portable Blender Personal Juicer. This compact and powerful device is designed to help you prepare fresh shakes, smoothies, and other beverages wherever you are. Please read this manual carefully before use to ensure safe and optimal operation.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

To reduce the risk of injury or damage, always follow basic safety precautions when using electrical appliances. This includes, but is not limited to, the following:

- Read all instructions before operating the blender.
- Keep the blender out of reach of children.
- Do not immerse the motor base in water or other liquids. Clean with a damp cloth only.
- Ensure the cup is securely attached to the motor base before blending.
- Avoid touching moving parts. Keep hands and utensils out of the blender cup while blending to prevent injury.
- Do not blend hot liquids, as pressure buildup may cause injury.
- Do not overfill the blender cup. Follow the recommended fill lines.
- Unplug the blender from the power source when not in use, before assembling or disassembling parts, and before cleaning.
- Use only attachments and accessories recommended by the manufacturer.
- Do not operate the blender if the charging port is wet.

### 3. PRODUCT OVERVIEW

---

The NexaEase Portable Blender (Model A9) is designed for convenience and efficiency. It features a powerful motor, durable blades, and a portable design for active lifestyles.



Image: NexaEase Portable Blender, showing the blender, insulated sleeve, and a finished drink.

#### Included Components:

- Blender Unit (Motor Base with Blades & Blender Cup)
- Bottom Cap
- Leather Keychain Handle
- USB-C Charging Cable
- Insulated Sleeve
- User Manual

### 4. SETUP

---

#### 4.1 Initial Cleaning

Before first use, disassemble all removable parts (blender cup, lid, bottom cap) and wash them with warm, soapy water. Rinse thoroughly and dry. Do not immerse the motor base in water.

## 4.2 Charging the Blender

The blender is equipped with a USB-C rechargeable battery. Connect the provided USB-C charging cable to the charging port on the motor base and plug the other end into a compatible USB power adapter (not included). The indicator lights will show charging status. A full charge typically takes 3-5 hours.



Image: The blender's base with battery indicator lights and USB-C charging port.

## 4.3 Assembly

1. Ensure the motor base is fully charged.
2. Place your ingredients into the blender cup.
3. Align the blender cup with the motor base and twist clockwise until it is securely locked. The indicator lights will turn green when properly assembled and ready for use.
4. Close the lid securely.

## 5. OPERATING MODES

The NexaEase Portable Blender offers two blending modes for versatile use:

# 20oz PORTABLE BLENDER CUP



Image: Visual representation of Blend Mode (single click) and Pulse Mode (double click).

## 5.1 Blend Mode (Continuous Blending)

- **Activation:** Press the power button once.
- **Use:** Ideal for soft fruits, liquids, and protein powders. It blends continuously for 30 seconds, perfect for smoothies, shakes, and mixed drinks.

## 5.2 Pulse Mode (Intermittent Blending)

- **Activation:** Double-click the power button.
- **Use:** Best for harder ingredients like small ice cubes, frozen fruits, nuts, and tougher vegetables. This mode provides short bursts of power for better control over texture.

## 5.3 Battery Indicator Lights

The LED lights around the power button indicate the battery level:

- **Green Lights:** 80-100% charged.
- **Green & Red Lights:** 60-80% charged.
- **Red Lights:** 0-20% charged (recharge soon).

## 6. USAGE GUIDELINES

---

For best results and to prolong the life of your blender, follow these guidelines:

1. **Ingredient Preparation:** Cut fruits and vegetables into small pieces (approximately 1 inch or 2.5 cm) before adding them to the cup.
2. **Liquid First:** Always add liquid ingredients (water, milk, juice) first, followed by soft ingredients, and then harder ingredients or ice.
3. **Fill Level:** Do not fill the blender cup beyond 60% of its capacity to allow for proper blending and prevent overflow.
4. **Blending:** After activating the desired mode, you may gently shake the blender or tilt it upside down to ensure all ingredients come into contact with the blades.
5. **Serving:** Once blending is complete, you can drink directly from the blender cup using the sports bottle cap, or replace the motor base with the extra bottom cap for a standalone bottle.

Your browser does not support the video tag.

Video: Demonstration of the NexaEase Portable Blender in use, preparing a smoothie.

## 7. CLEANING AND MAINTENANCE

---

Proper cleaning ensures hygiene and extends the life of your blender.

1. **Disassemble:** Unscrew the blender cup from the motor base. Remove the lid and any other detachable parts.
2. **Wash Components:** Wash the blender cup, lid, and bottom cap with warm, soapy water. Use a brush to clean around the blades carefully.
3. **Clean Motor Base:** Wipe the motor base with a damp cloth. **Do not immerse the motor base in water.** Ensure the USB-C charging port is dry before charging.
4. **Rinse and Dry:** Rinse all washed parts thoroughly and allow them to air dry completely before reassembling or storing.

## 8. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Blender does not start.	Cup not securely attached. Battery low.	Ensure cup is twisted clockwise until secure. Charge the blender.
Blades stop during blending.	Overloaded with ingredients. Ingredients too large/hard.	Reduce ingredients. Cut ingredients into smaller pieces. Add more liquid. Gently shake the blender.
Leaking from the cup.	Lid not properly sealed. Cup not securely attached.	Ensure lid is tightly closed. Ensure cup is securely twisted onto the motor base.
Charging indicator lights not working.	Charging cable faulty. Charging port wet.	Try a different USB-C cable. Ensure charging port is completely dry.

## 9. SPECIFICATIONS

Feature	Detail
Brand	NexaEase
Model	A9
Motor Power	150W
Blade Speed	18,000 RPM
Blades	6 Stainless Steel Blades
Capacity	600 Milliliters (20 OZ)
Battery	2 Lithium Ion batteries (included)
Charging Port	USB-C
Voltage	7.4V
Material	BPA-free PCTG Plastic, Stainless Steel
Product Dimensions	3.54"D x 3.54"W x 11.26"H
Item Weight	1.87 pounds

## 10. WARRANTY AND SUPPORT

The NexaEase Portable Blender comes with a limited warranty. Please refer to the product packaging or contact NexaEase customer support for detailed warranty information and assistance. For any questions or issues not covered in this manual, please reach out to our customer service team.