

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [RSH](#) /

> [RSH Wallet Tracker Card User Manual](#)

RSH Wallet Tracker Card

RSH Wallet Tracker Card User Manual

Model: Wallet Tracker Card

1. INTRODUCTION AND OVERVIEW

The RSH Wallet Tracker Card is a compact, rechargeable item locator designed to help you find your personal belongings using the Apple Find My network. Its ultra-thin design makes it suitable for wallets, luggage, backpacks, and other items. This manual provides instructions for setup, operation, maintenance, and troubleshooting.

Key Features:

- **Rechargeable:** Full charge in 90 minutes provides approximately 3 months of continuous operation.
- **Ultra-Thin Design:** Dimensions of 3.31"L x 0.08"W x 2.12"Th, similar to a credit card.
- **IP67 Waterproof:** Resistant to water and dust, suitable for outdoor use.
- **Apple Find My Network:** Utilizes the Apple Find My network for location tracking.
- **Left Behind Reminder:** Receive instant notifications if you leave your item behind.
- **Lost Mode:** Set contact information for easy return if found by others.
- **Privacy Protection:** All communication within the Find My network is anonymous and encrypted.

Wireless Charging Tracker Card

Reusable & Rechargeable
Need qi-enabled wireless charger
Fully charged in 90 minutes



The RSH Wallet Tracker Card fits easily into a passport bag or wallet, helping to prevent loss.

2. SETUP INSTRUCTIONS

The RSH Wallet Tracker Card is designed to work exclusively with Apple iOS devices (iPhone, iPad, iPod, MacBook) through the Apple Find My app. It does not support Android devices.

Pairing with Apple Find My:

1. Ensure your Apple device's Bluetooth is enabled and the Find My app is installed and active.
2. Press the button on the RSH Wallet Tracker Card to activate it. The card will emit a ticking sound.
3. Open the Find My app on your Apple device.
4. Navigate to the "Items" tab and tap "Add Item."
5. Select "Other Supported Item."
6. Your device will search for the RSH Wallet Tracker Card. Once detected, tap "Connect."
7. Follow the on-screen prompts to name your item (e.g., "Wallet," "Keys," "Luggage") and select an emoji.
8. Agree to register the item with the Find My network.
9. Complete the registration process. The pairing should be finished within 30 seconds.

Visual guide for connecting the RSH Wallet Tracker Card to the Apple Find My app.



The RSH Wallet Tracker Card is compatible only with iOS devices, not Android.

3. OPERATING INSTRUCTIONS

Locating Items Nearby:


When your RSH Wallet Tracker Card is within Bluetooth range (up to 60m/200ft), you can use the Find My app to make it emit a sound. This helps you pinpoint its exact location if it's hidden nearby.

- Open the Find My app.
- Select your RSH Wallet Tracker Card from the "Items" list.
- Tap "Play Sound." The card will emit a sound between 70-100 dB.

Find My Network-Worldwide Tracking

With the help of millions of Apple devices, you can easily find your item. Whether for international travel or remote tracking, the location can be viewed on the mobile map.

Note: Only when there is an Apple device near your tag and Bluetooth is turned on, the tag can be updated to the latest location on the map

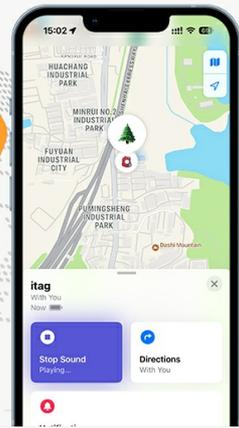


Use the Find My app to play a sound and locate your item when it's nearby.

Locating Items Faraway:

If your item is outside of Bluetooth range, the Find My network can help you locate it. Millions of Apple devices worldwide anonymously detect your tracker card and report its location to the Find My network, allowing you to see its last known location on a map.

- Open the Find My app.
- Select your RSH Wallet Tracker Card from the "Items" list.
- View its last known location on the map.
- You can get directions to the last known location.

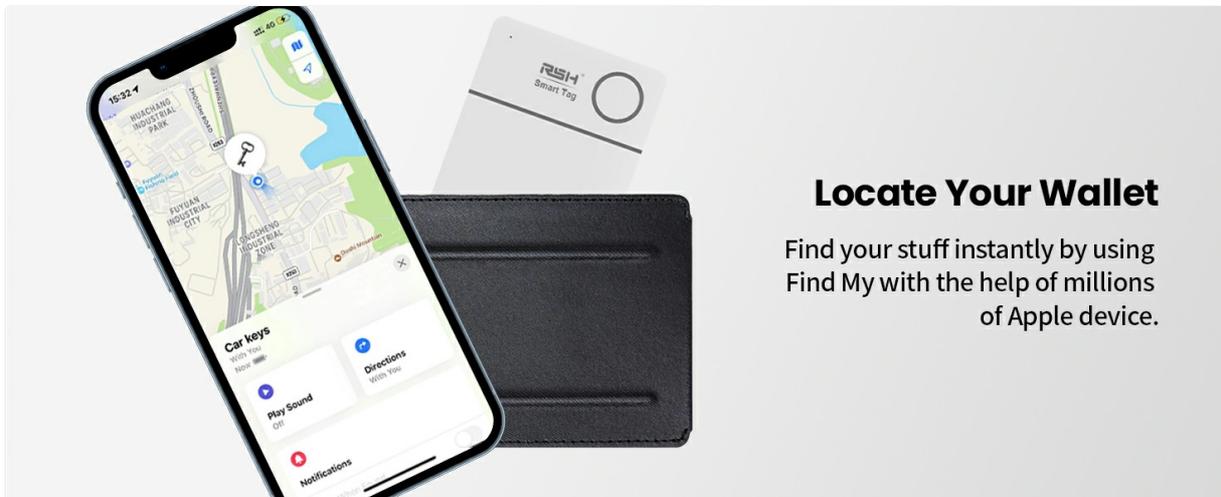

Locate Your Wallet

Find your stuff instantly by using Find My with the help of millions of Apple device.

Locate your RSH Wallet Tracker Card on the map using the Find My app.

The Find My network provides worldwide tracking capabilities.

Left Behind Reminder:

Receive an instant notification on your Apple device if your RSH Wallet Tracker Card disconnects from its Bluetooth connection, indicating you may have left it behind. The Find My app will show its last detected location.



Receive a 'Left Behind Reminder' notification if you accidentally leave your item.


4. CHARGING

The RSH Wallet Tracker Card features wireless charging capabilities. Use any Qi-enabled wireless charger to recharge the device. No special cables are required.

- Place the RSH Wallet Tracker Card on a Qi-compatible wireless charging pad.
- A full charge takes approximately 90 minutes.
- A fully charged card can operate continuously for up to 3 months.



The RSH Wallet Tracker Card supports wireless charging with any Qi-enabled charger.

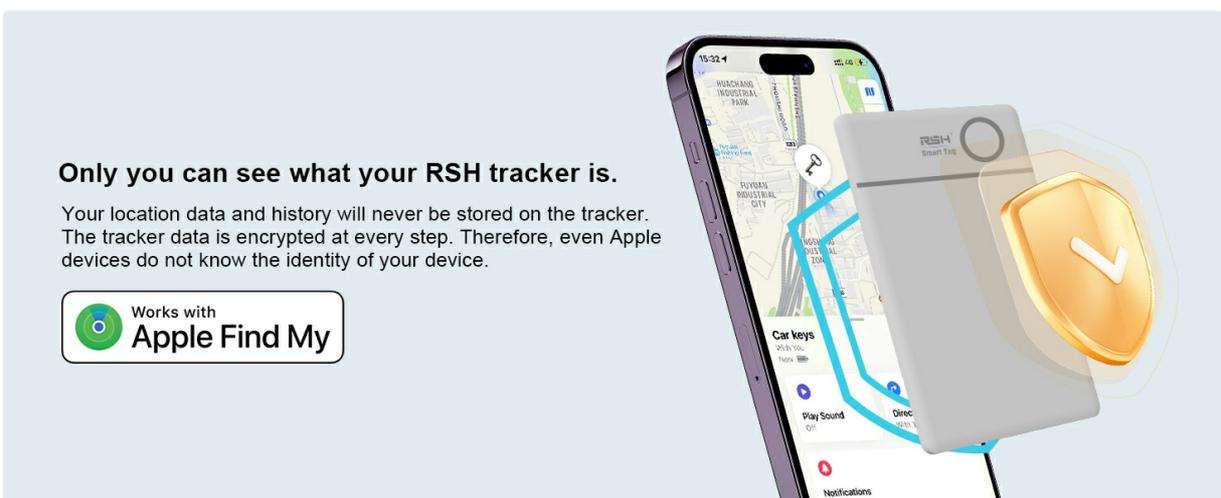

Wireless charging is convenient and eliminates the need for special cables.

5. ADVANCED FEATURES

Set Lost Mode:

If your RSH Wallet Tracker Card is lost, you can activate "Lost Mode" in the Find My app. This allows you to enter your contact information. If another Apple device user finds your tag, they can view your contact details and help return your item. The tag will also send you updated location information for precise positioning.



Activate Lost Mode to display your contact information if your tag is found.

Share Tracking Card:

You can share the location of your RSH Wallet Tracker Card with family or friends through the Find My app. This allows multiple trusted individuals to view the item's location on their maps. When the tracker card moves with a shared user, they will not receive tracking notifications.

Privacy Protection:

To ensure your privacy, all communication within the Apple Find My network is anonymous and encrypted. Location data and history are never stored on the tracker tag itself. Even Apple devices do not know the identity of your device, protecting your personal information.

Wireless Charging

Reusable @ Rechargeable Use any qi-enabled wireless charger to charge up RSH Card. No need cable.



Your location data is protected through anonymous and encrypted communication.

6. MAINTENANCE

Water Resistance:

The RSH Wallet Tracker Card has an IP67 rating, meaning it is water-proof and dust-resistant. It can withstand immersion in up to 3 feet (1 meter) of water for up to 30 minutes. While durable, avoid prolonged submersion or exposure to high-pressure water jets.



The RSH Wallet Tracker Card is IP67 waterproof, offering protection against water and dust.

General Care:

- Clean the card with a soft, dry cloth. Avoid abrasive cleaners.
- Store in a cool, dry place when not in use for extended periods.
- Avoid extreme temperatures.

7. TROUBLESHOOTING

Card Not Connecting to Find My:

- Ensure your Apple device's Bluetooth is turned on.
- Make sure the RSH Wallet Tracker Card is charged.
- Press the button on the card to ensure it is active and discoverable.
- Restart the Find My app or your Apple device.
- Ensure you are attempting to pair with an iOS device, as Android is not supported.

Sound is Too Low:

- The sound output is between 70-100 dB. In noisy environments or if the card is deeply embedded in an item, the sound may be difficult to hear.
- Try to move to a quieter area or listen closely.


Inaccurate Location:

- The Find My network relies on nearby Apple devices to update the tracker's location. If there are no Apple devices in the vicinity, the location update may be delayed or show the last known location.
- Ensure your Apple device has a stable internet connection for accurate map display.

8. SPECIFICATIONS

Product Dimensions	3.31"L x 0.08"W x 2.12"Th (8.5 cm x 0.22 cm x 5.4 cm)
Item Weight	0.635 ounces (18 grams)
Batteries	1 Lithium Metal battery (included), rechargeable
Charging Time	Approx. 90 minutes for full charge
Battery Life	Up to 3 months on a full charge
Connectivity	Bluetooth

Bluetooth Range	Up to 60m / 200ft
Sound Level	70-100 dB
Waterproof Rating	IP67 (up to 30 minutes in 3ft of water)
Material	Plastic

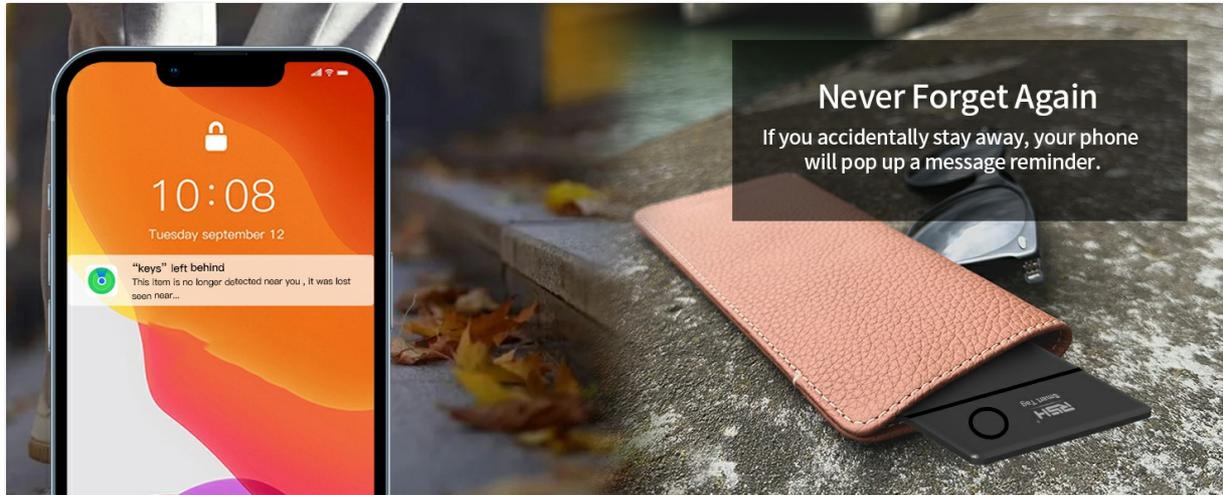

Key specifications of the RSH Wallet Tracker Card.



Set Lost Mode

If you have set up personal information, When someone finds your tag, he can check your contact information in lost mode.

The compact size allows for easy carrying in wallets, badge holders, or bags.

9. WARRANTY AND SUPPORT

RSH is committed to providing high-quality products and customer satisfaction. If you encounter any questions or issues with your RSH Wallet Tracker Card, please contact our customer service team. We are dedicated to assisting you until you are satisfied.

For support, please refer to the contact information provided with your purchase or visit the official RSH website.