

## COSTWAY WO75362+FR

# COSTWAY Rolling Kitchen Cart Instruction Manual

Model: WO75362+FR

Brand: COSTWAY

## INTRODUCTION

Thank you for choosing the COSTWAY Rolling Kitchen Cart. This contemporary kitchen cart is designed to provide versatile storage and a functional workspace for your kitchen or dining area. It features a durable rubberwood countertop, two spacious drawers, two towel racks, and two cabinets with adjustable shelves. Constructed from high-quality engineered wood, MDF, and pine wood, this cart offers enhanced stability and a prolonged service life. Four flexible casters, two of which are lockable, ensure smooth movement and secure placement.

## SAFETY INSTRUCTIONS

- **Weight Capacity:** Do not exceed the specified weight capacities for the countertop (40 kg), handle (3 kg), drawers (5 kg), and cabinets (5 kg). Overloading can lead to instability and damage.
- **Assembly:** Always follow the assembly instructions provided in the included manual carefully. Ensure all parts are correctly installed and tightened before use.
- **Stability:** For maximum safety, engage the locks on the two lockable casters when the cart is in a stationary position.
- **Placement:** Place the cart on a level and stable surface to prevent tipping.
- **Children:** Keep children away from the cart during assembly and ensure they do not climb on or play with the cart to prevent injury.
- **Cleaning:** Use a damp cloth for cleaning. Avoid harsh chemicals that may damage the finish.

## PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. The package includes:

- 1 x Rolling Kitchen Cart (disassembled components)

- 1 x Assembly Manual
- All necessary hardware for assembly

## SPECIFICATIONS

Feature	Detail
Brand	COSTWAY
Model Number	WO75362+FR
Color	Black
Overall Dimensions (L x W x H)	122 cm x 48 cm x 93 cm
Net Weight	41.6 kg
Material	Rubberwood, Engineered Wood, MDF, Pine Wood, Metal
Countertop Weight Capacity	40 kg
Drawer Weight Capacity	5 kg
Cabinet Weight Capacity	5 kg
Handle Weight Capacity	3 kg
Casters	4 (2 lockable)

## SETUP AND ASSEMBLY

The COSTWAY Rolling Kitchen Cart requires assembly. Please refer to the dedicated assembly manual included in your package for detailed, step-by-step instructions. Ensure you have all parts and tools listed in the manual before starting. It is recommended to assemble the cart on a soft, clean surface to prevent scratches.



Image: The assembled COSTWAY Rolling Kitchen Cart in a kitchen environment, showcasing its design and functionality.



Image: The black COSTWAY Rolling Kitchen Cart with a natural wood countertop, positioned in a kitchen with various items on its surface.



Image: A detailed diagram of the COSTWAY Rolling Kitchen Cart with key dimensions labeled in centimeters, including overall length, width, height, and internal cabinet measurements.

## OPERATING INSTRUCTIONS

### Storage Options

- **Countertop:** The large rubberwood countertop provides a durable surface for food preparation, serving, or displaying kitchen items.
- **Drawers:** Utilize the two smooth-gliding drawers for storing cutlery, utensils, or other small kitchen accessories.
- **Cabinets with Adjustable Shelves:** The two large cabinets feature 2-level adjustable shelves, allowing you to customize the storage space for items of various sizes, such as pots, pans, dishes, or small appliances. Strong magnets ensure the cabinet doors remain securely closed, protecting contents from dust.
- **Towel Racks:** Two convenient towel racks are located on the sides of the cart, keeping kitchen towels easily accessible.



Image: The COSTWAY Rolling Kitchen Cart with its drawers and cabinet doors open, illustrating the various storage compartments and their capacity for kitchen items.

# Rangement Multifonctionnel

Plan de Travail Large

Tiroir Coulissant

Tour de Rangement

2 Grandes armoires avec étagères à 2 niveaux

•••••  
Conservez vos objets quotidiens dans un ordre ordonné.



Image: A close-up view of the cabinet interior, highlighting the adjustable shelves with three possible positions, allowing for flexible storage configurations.

## Mobility and Stability

- **Smooth-Rolling Casters:** The four casters allow for effortless movement of the cart across various surfaces, making it easy to reposition as needed.
- **Lockable Casters:** Two of the casters are equipped with brakes. To secure the cart in place, press down on the brake levers. To allow movement, lift the levers. Always engage the brakes when the cart is stationary to prevent accidental movement.

# Étagères Réglables en 3 Positions

Vous offre plus d'options pour ranger vos objets



Image: A detailed view of the smooth-rolling casters, emphasizing the two casters equipped with locking mechanisms for secure placement.

## MAINTENANCE

- **Cleaning:** Wipe down all surfaces regularly with a soft, damp cloth. For stubborn stains, use a mild soap solution and immediately dry with a clean cloth. Avoid abrasive cleaners or harsh chemicals, which can damage the finish.
- **Rubberwood Countertop Care:** The rubberwood countertop can be maintained by occasionally applying a food-safe mineral oil to preserve its appearance and protect the wood.
- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary to maintain structural integrity.
- **Casters:** Keep the casters free of debris to ensure smooth movement. If they become stiff, clean them and apply a small amount of silicone lubricant if needed.



## Roulettes à Roulement Doux

Facilite le déplacement sur diverses surfaces

Image: A close-up showing various details of the cart, including the smooth rubberwood surface, practical metal handles, metal sliding rails for drawers, and magnetic door latches, all contributing to its durability and ease of use.

### TROUBLESHOOTING

- **Cart is unstable or wobbly:** Ensure all assembly screws are securely tightened. Check that the cart is placed on a flat, even surface. Engage the lockable casters.
- **Drawers do not slide smoothly:** Check for any obstructions in the drawer slides. Ensure the slides are properly aligned and free of debris.
- **Cabinet doors do not close properly:** Verify that the magnetic latches are correctly aligned with the metal plates on the doors. Check for any items obstructing the door closure.
- **Casters are difficult to move:** Inspect casters for tangled hair or debris. Clean them thoroughly. Ensure the caster locks are disengaged.

### WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

