



[Manuals.plus](#) /

> [vidaXL](#) /

> vidaXL Electric Reclining Massage Chair, Grey Artificial Leather User Manual

## vidaXL 3204540

# vidaXL Electric Reclining Massage Chair User Manual

Model: 3204540 | Brand: vidaXL

## 1. INTRODUCTION

---

Thank you for purchasing the vidaXL Electric Reclining Massage Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your new chair. Please read these instructions carefully before use and retain them for future reference.



Image 1.1: The vidaXL Electric Reclining Massage Chair in a home environment.

## 2. SAFETY INFORMATION

---

- Ensure all components are securely assembled before use.
- Do not exceed the maximum weight capacity of **110 kg**.
- Keep children and pets away from the chair's moving parts during operation.
- The massage function requires a certified **5V USB power adapter** (not included). Use only compatible adapters.
- Disconnect the chair from the power supply before cleaning or maintenance.
- Avoid spilling liquids on the electrical components.
- If any part is damaged, discontinue use and contact customer support.

## 3. PACKAGE CONTENTS

---

Please check that all the following components are present in your package:

- Chair backrest

- Chair seat with armrests
- Footrest assembly
- Power adapter for electric reclining (DC 24V, 1.5A)
- USB cable for massage function
- Remote control for massage function
- Assembly hardware (screws, washers, etc.)
- Instruction manual

## **4. ASSEMBLY INSTRUCTIONS**

---

Assembly is required. Please follow these steps carefully:

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Attach the backrest to the seat frame. Ensure the connection points align and secure with the provided hardware.
3. Connect the footrest assembly to the main chair frame.
4. Connect all electrical cables for the reclining mechanism. Ensure they are securely plugged in.
5. Attach the chair legs/feet if they are separate components.
6. Plug the power adapter for the electric reclining function into a suitable wall outlet.
7. Connect the USB cable for the massage function to a certified 5V USB power adapter (not included) and then to the chair's USB port.

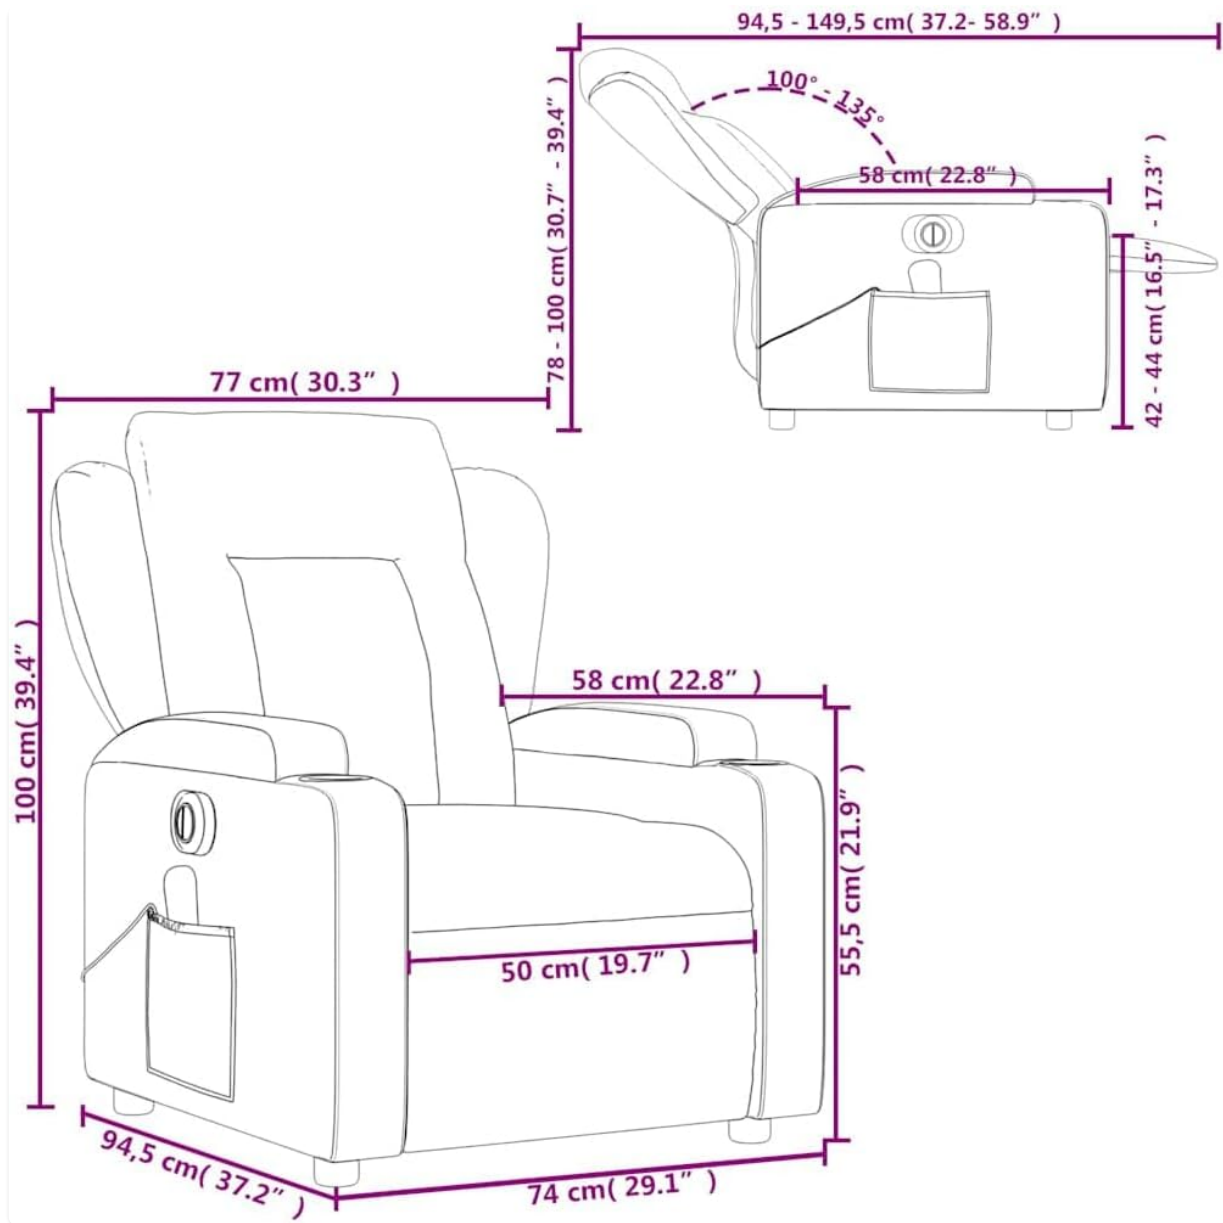


Image 4.1: Chair dimensions and reclining range, useful for assembly and placement.

## 5. OPERATING INSTRUCTIONS

### 5.1. Electric Reclining Function

The chair features an electric motor for automatic adjustment of the backrest and footrest. A control button is located on the side of the chair.

- To recline: Press and hold the button to extend the footrest and recline the backrest up to 135 degrees.
- To return to upright position: Press and hold the button again to retract the footrest and bring the backrest to its original position.



Image 5.1: Electric reclining control button and mechanism.



Image 5.2: Illustration of the chair's reclining positions.

## 5.2. Massage Function

The chair is equipped with a 6-point vibration massage function, controlled by a remote.

- Ensure the USB cable is connected to a certified 5V USB power adapter (not included) and the chair's USB port.
- Use the provided remote control to select different massage programs and adjust intensity.
- The massage function operates without heating.

## 5.3. Cup Holders and Side Pocket

The chair includes two convenient cup holders and a side pocket for storing small items, keeping them

within easy reach.

## 6. MAINTENANCE AND CARE

---

### 6.1. Cleaning

The artificial leather upholstery is durable and stain-resistant, making it easy to clean.

- Wipe the surface with a damp cloth.
- For stubborn stains, use a mild soap solution and then wipe with a clean, damp cloth.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the material.
- Do not soak the fabric.

### 6.2. General Care

- Periodically check all screws and connections to ensure they remain tight.
- Keep the chair away from direct sunlight and heat sources to prevent material degradation.
- Avoid sharp objects that could puncture or tear the upholstery.

## 7. TROUBLESHOOTING

---

- **Chair does not recline:** Check if the power adapter for the electric motor is securely plugged into both the chair and the wall outlet. Ensure the wall outlet is functional.
- **Massage function not working:** Verify that the USB cable is properly connected to a certified 5V USB power adapter and the chair's USB port. Ensure the remote control has working batteries (if applicable) and is pointed correctly.
- **Unusual noises during reclining:** Ensure all assembly hardware is tightened. If noises persist, discontinue use and contact customer support.

## 8. SPECIFICATIONS

---

Feature	Detail
Color	Grey
Material	Artificial leather (60% polyurethane, 30% polyester, 10% cotton), metal, plywood
Filling Material	Foam, PP fibers
Dimensions (Sitting)	77 x 94.5 x 100 cm (W x D x H)
Dimensions (Reclining)	77 x 149.5 x 78 cm (W x D x H)
Seat Width	50 cm
Seat Depth	58 cm
Seat Height from Ground	42-44 cm

Feature	Detail
Armrest Height from Ground	55.5 cm
Massage Type	6-point vibration massage (no heating)
Massage Voltage	5V DC
Massage Input Current	2A
Electric Motor Input	DC 24 V, 1.5 A
Electric Motor Output	100-240 V~, 50-60 Hz
Maximum Load Capacity	110 kg
Assembly Required	Yes

## 9. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the purchase documentation or contact vidaXL customer service directly. Keep your proof of purchase for any warranty claims.

You can visit the vidaXL brand store for more information: [vidaXL Store](#)