

vidaXL 3203966

vidaXL Electric Reclining Massage Armchair Model 3203966 User Manual

Light Grey Fabric

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your new vidaXL Electric Reclining Massage Armchair. Please read these instructions carefully before assembly and operation, and retain them for future reference. This armchair is designed to offer comfort and relaxation with its electric reclining and integrated massage functions.



Image 1.1: The vidaXL Electric Reclining Massage Armchair in its upright position.

2. SAFETY INFORMATION

- Ensure safe assembly by following all instructions carefully.
- Adhere strictly to the maximum load capacity of **110 kg** (approximately 242 lbs). Exceeding this limit may cause damage to the armchair and potential injury.
- Keep children and pets away from moving parts during operation.
- Do not insert foreign objects into any openings.
- Disconnect the power supply before cleaning or maintenance.
- Use only the provided power adapter or a certified 5V USB power source for the massage function.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all components listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Main chair components (backrest, seat, armrests)
- Legs (4 pieces)
- Power adapter for electric recline
- Remote control for massage function
- Assembly hardware (screws, washers, Allen key)

4. SETUP AND ASSEMBLY

Assembly is required for this armchair. Please follow the steps below and refer to the diagrams for visual guidance. It is recommended to assemble the chair on a soft, clean surface to prevent damage.

4.1. Assembly Steps

1. **Attach the Legs:** Carefully turn the main seat frame upside down. Attach the four legs to the designated mounting points using the provided screws and Allen key. Ensure they are securely tightened.
2. **Connect Backrest to Seat:** Align the backrest with the seat frame. Slide the backrest into the metal brackets on the seat until it clicks securely into place. Ensure both sides are fully engaged.
3. **Connect Armrests (if separate):** If armrests are separate, attach them to the main frame using the provided hardware.
4. **Connect Power Cables:** Locate the power cable for the electric recline mechanism and connect it to the power adapter. Connect the power adapter to a suitable electrical outlet. For the massage function, connect the USB cable from the chair to a certified 5V USB power source (not supplied).

Diseño curvado ergonómico

Se reclina en el ángulo que prefieras

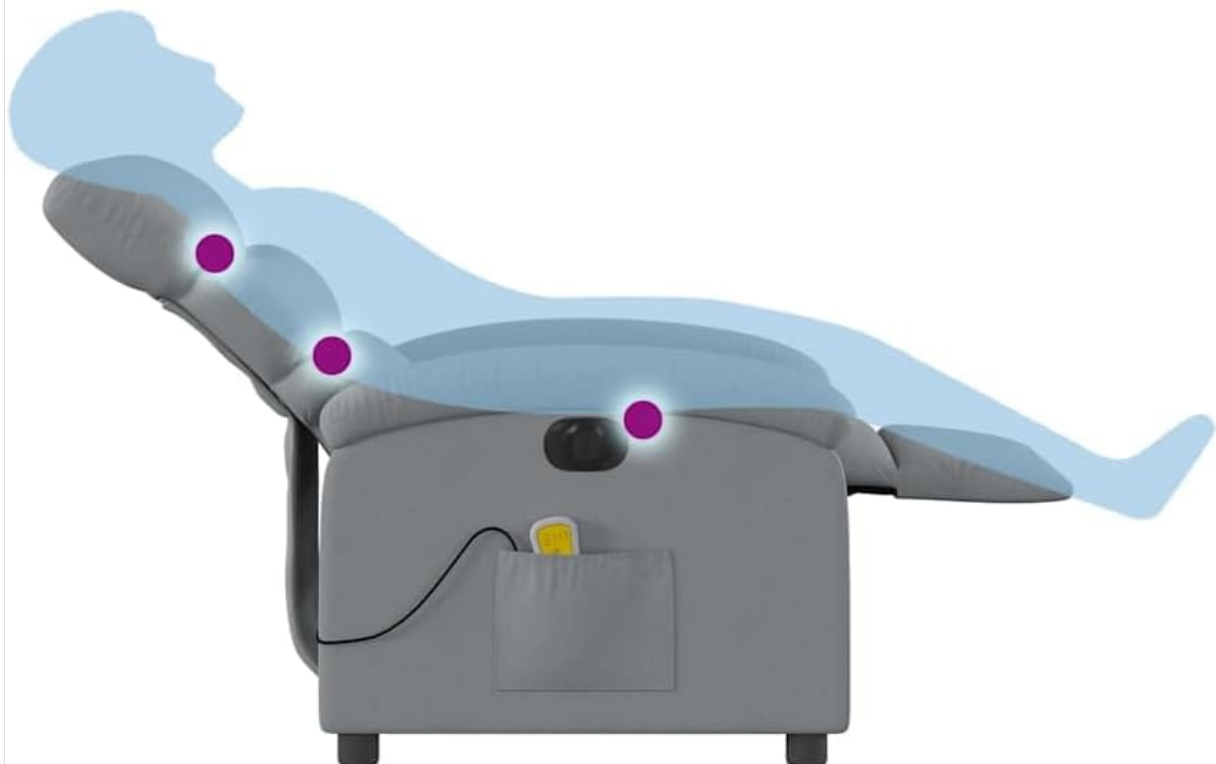 


Image 4.1: Assembly overview and dimensions. Note the 100-135 degree recline range.



Image 4.2: Detail of the electric recline button and massage points.

5. OPERATING INSTRUCTIONS

5.1. Electric Recline Function

The armchair features an electric motor for smooth reclining. To operate:

- Locate the control button on the side of the armchair.
- Press and hold the button to extend the footrest and recline the backrest. Release the button when you reach your desired position (up to 135 degrees).
- To return to the upright position, press and hold the button again. The backrest and footrest will retract automatically.

5.2. Massage Function

The integrated massage function provides targeted relaxation with 6 massage points.

- Ensure the USB cable from the chair is connected to a certified 5V USB power source (not included).
- Use the included remote control to activate and customize your massage experience.
- The remote control allows you to select different massage programs, intensities, and modes. Refer to the remote control diagram for specific button functions.

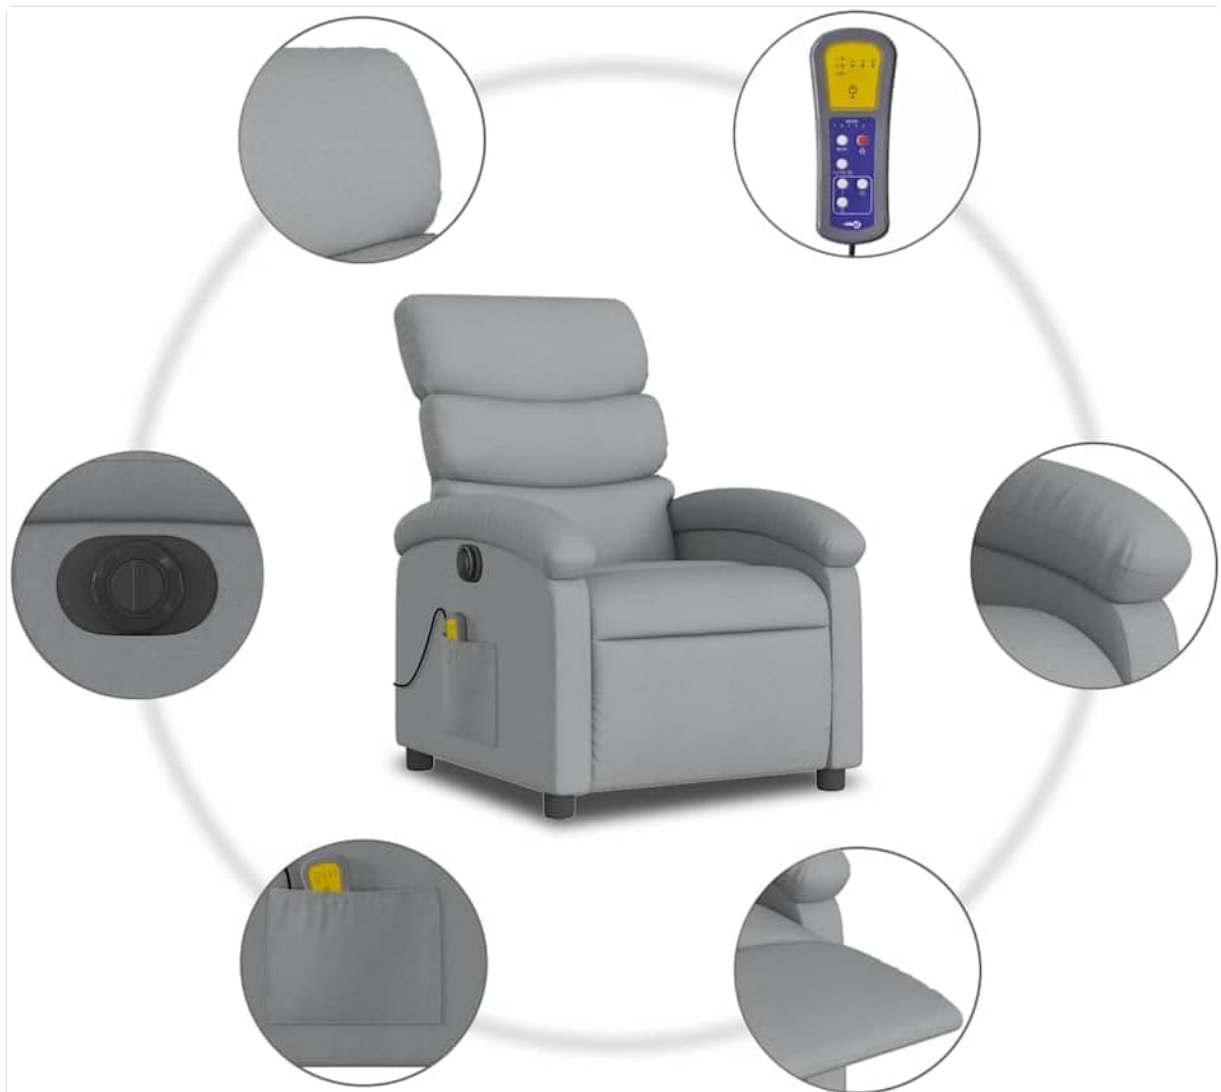 


Image 5.1: Massage remote control for selecting programs, intensities, and modes.

5.3. Side Pocket

A convenient side pocket is integrated into the armchair, ideal for storing the massage remote control, magazines, or other small personal items within easy reach.

6. MAINTENANCE

Proper care will extend the life and appearance of your armchair.

- **Cleaning:** Clean the fabric upholstery with soft cloths.
- **Regular Care:** Regularly vacuum or brush the fabric to remove dust and debris.
- **Stain Treatment:** Treat stains promptly with a mild detergent specifically designed for fabric upholstery. Test the detergent on an inconspicuous area first.
- **Avoid:** Do not use harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the fabric and internal components.

Función automática de masaje

relájate de la forma más cómoda



3 intensidades



3 posiciones



5 modos



Image 6.1: Detail of the premium fabric material.

7. TROUBLESHOOTING

If you encounter issues with your armchair, refer to the following common problems and solutions:

- **Chair does not recline:**
 - Check if the power adapter is securely connected to both the chair and a working electrical outlet.
 - Ensure there are no obstructions preventing the reclining mechanism from moving freely.
- **Massage function not working:**
 - Verify that the USB cable is properly connected to a certified 5V USB power source.
 - Ensure the USB power source is active and providing power.
- **Chair feels unstable or wobbly:**
 - Re-check all assembly hardware, especially the leg attachments, and tighten any loose screws.
 - Ensure the chair is placed on a flat, even surface.

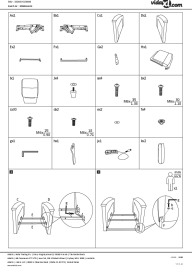 
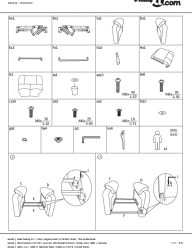 
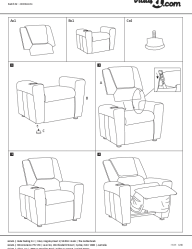 

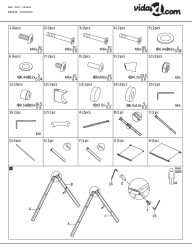 
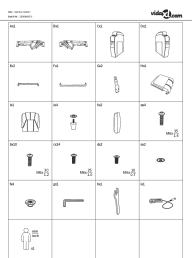 
8. SPECIFICATIONS

Feature	Detail
Brand	vidaXL
Model Number	3203966
Color	Light Grey
Material	Fabric (Seat), Wood, Metal (Frame)
Item Weight	22.2 Kilograms
Maximum Load Capacity	110 kg
Recline Angle	100-135 degrees
Massage Points	6
Massage Power Input	5V USB (power source not supplied)
Overall Dimensions (Upright)	70 cm (W) x 92 cm (D) x 99.5 cm (H)
Overall Dimensions (Reclined)	70 cm (W) x 147 cm (D) x 80 cm (H)
Seat Width	47 cm
Seat Depth	57 cm
Seat Height	42-45 cm
Backrest Height	61 cm

9. WARRANTY AND SUPPORT

Information regarding spare parts availability for this product is not explicitly provided. For any product-related inquiries, technical support, or warranty claims, please contact your retailer or the manufacturer, vidaXL, directly. Please have your model number (3203966) and proof of purchase ready when contacting support.

Related Documents - 3203966

	<p>vidaXL Recliner Chair Assembly and Safety Manual</p> <p>Comprehensive assembly instructions, safety guidelines, and technical specifications for the vidaXL Recliner Chair with massage function. Includes part identification and step-by-step assembly.</p>
	<p>vidaXL Recliner Assembly Instructions</p> <p>Assembly guide for the vidaXL recliner, including parts list and step-by-step instructions.</p>
	<p>VidaXL Recliner Assembly Instructions</p> <p>Assembly instructions for VidaXL recliners, including models Ax1, Bx1, and Cx4. This guide provides step-by-step visual instructions for assembling the recliner chair.</p>
	<p>VidaXL Extended Producer Responsibility (EPR) Guide</p> <p>Learn about VidaXL's commitment to Extended Producer Responsibility (EPR) for EEE and textile waste. Discover recycling information, obligations, and partners.</p>
	<p>vidaXL Folding Garden Chair Assembly Instructions</p> <p>Assembly instructions for the vidaXL folding garden chair, including a parts list and step-by-step visual guides.</p>
	<p>VidaXL Recliner Assembly Instructions and Safety Guide</p> <p>Comprehensive guide for assembling your vidaXL recliner, including a parts list, step-by-step instructions, and essential safety information and technical specifications.</p>
