

[Manuals.plus](#) /

› [ERGOMAKER](#) /

› ERGOMAKER Cherry 43x24-inch One-Piece Modern Office Computer Desk Top Instruction Manual

ERGOMAKER DP01-18-11060-C

ERGOMAKER Cherry 43x24-inch One-Piece Modern Office Computer Desk Top Instruction Manual

Model: DP01-18-11060-C

1. PRODUCT OVERVIEW

The ERGOMAKER Cherry 43x24-inch One-Piece Modern Office Computer Desk Top is designed to provide a spacious and durable work surface for various applications. This tabletop is compatible with different bases, including metal table legs, wooden table legs, cabinets, and height-adjustable standing desk frames. Its one-piece solid construction ensures a smooth, seam-free surface for comfortable use.



Image 1.1: ERGOMAKER Cherry Desk Top in a typical office setup.

2. SPECIFICATIONS

- **Material:** Particleboard
- **Thickness:** Approximately 0.7 inches (1.8 cm)
- **Dimensions:** 43 x 23.6 inches (110 x 60 cm)
- **Color:** Cherry finish
- **Shape:** Rectangular
- **Maximum Weight Recommendation:** 70 Kilograms (154 lbs)
- **Compatible ERGOMAKER Models:** SM203, SM205, ED205 Frame

Solid One-piece Wood Tabletop

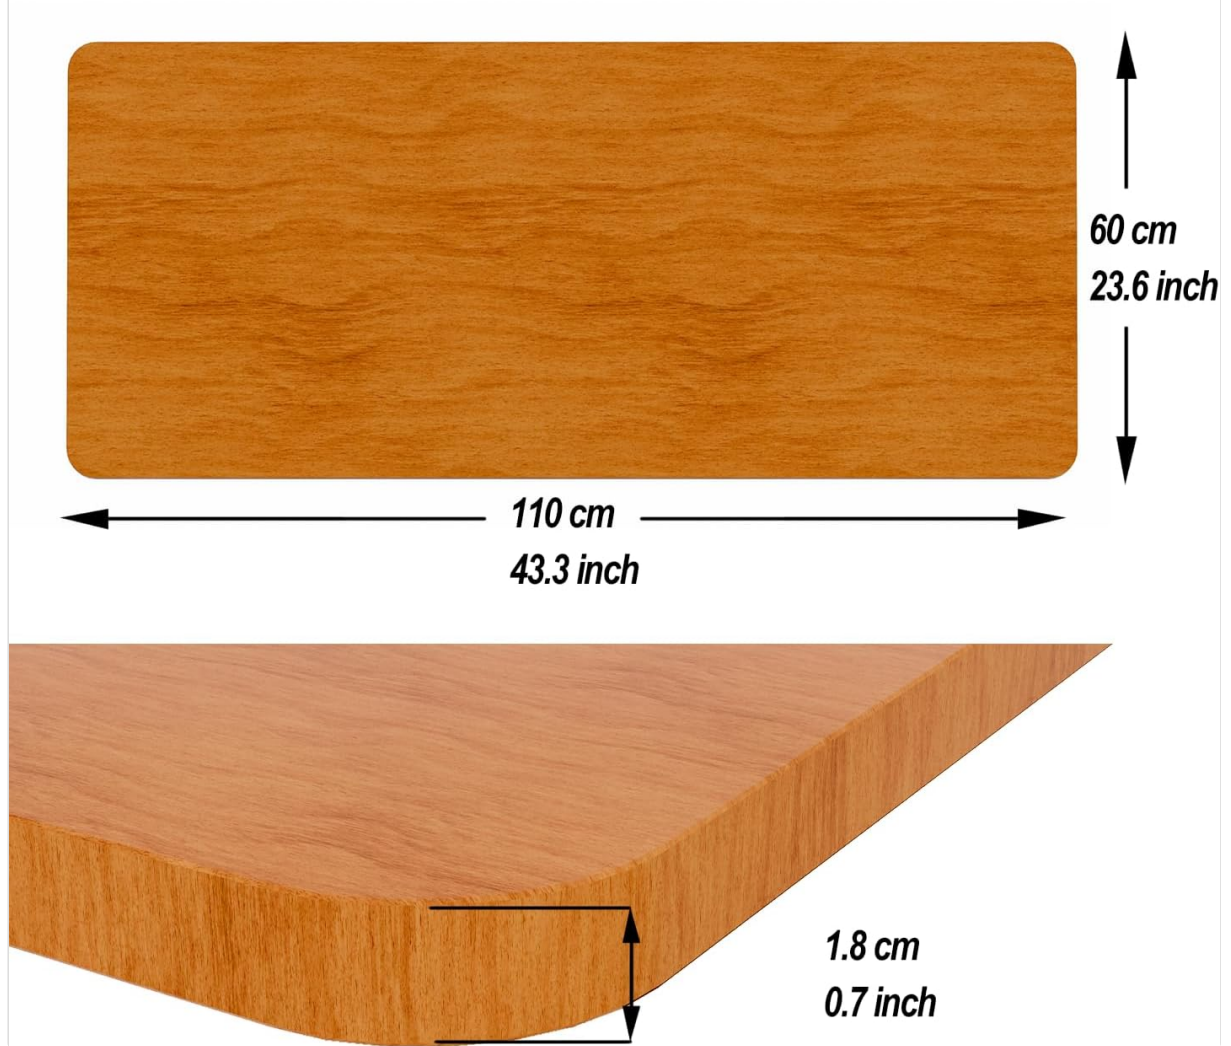


Image 2.1: Desk top dimensions and thickness.



Image 2.2: Detail of the particleboard material.

3. SETUP AND ASSEMBLY

This tabletop is designed for integration with various desk frames or bases. Please note that the tabletop is **not pre-drilled**. This allows for flexible customization to match your specific requirements and the mounting points of your chosen desk frame or legs.

3.1 Required Tools

- Screw Driver (appropriate for your chosen desk frame's hardware)
- Drill (for creating pilot holes, if necessary)

3.2 Assembly Steps

1. Carefully unpack the tabletop and inspect for any damage.
2. Position the tabletop upside down on a soft, clean surface to prevent scratches.
3. Align your chosen desk frame or legs with the desired placement on the tabletop.
4. Mark the screw hole locations accurately.
5. Using an appropriate drill bit, create pilot holes at the marked locations. Ensure the drill bit depth is less than the tabletop thickness (0.7 inches) to avoid drilling through.
6. Secure the desk frame or legs to the tabletop using the provided hardware from your desk frame. Do

not overtighten screws.

7. Carefully flip the assembled desk upright.

It is recommended that **1 person** perform the assembly.

4. USAGE AND APPLICATION

The ERGOMAKER desk top offers a spacious working area suitable for various office and home environments. Its one-piece design provides a completely smooth surface, ideal for placing monitors, laptops, documents, and other office supplies.

4.1 Versatile Decoration Options

The cherry finish complements a variety of desk frames and office setups, allowing you to create a functional and aesthetically pleasing workspace. Other available colors include black, white, and brown, offering diverse decoration choices.



Image 4.1: Available color options for the desk top.

5. MAINTENANCE

To maintain the appearance and longevity of your ERGOMAKER desk top, follow these simple care instructions:

- Wipe the surface with a damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- Promptly clean up spills to prevent staining.
- Avoid placing extremely hot items directly on the surface; use coasters or protective pads.

6. TROUBLESHOOTING

6.1 Damaged Goods Upon Arrival

If the product is received damaged, please take pictures of the damage and contact our customer service team as soon as possible. We will arrange for a replacement free of charge.

6.2 Product Issues During Use

Should you encounter any problems or have questions during the use of your ERGOMAKER desk top, please contact our customer service. Our team is available to provide one-on-one assistance to help resolve your concerns.

7. WARRANTY AND SUPPORT

Your ERGOMAKER desk top comes with a **2-year limited warranty**. This warranty covers manufacturing defects and ensures the quality of your product.

7.1 Customer Service

For any questions, concerns, or warranty claims, please do not hesitate to contact our friendly customer service team. Our team aims to respond within 24 hours and provide effective solutions.

Contact information can typically be found on the ERGOMAKER official website or through your purchase platform.