Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > LOUTOC /
- > LOUTOC Universal Samsung Smart TV Remote Control (BN59-01301C) Instruction Manual

LOUTOC BN59-01301C

LOUTOC Universal Samsung Smart TV Remote Control Instruction Manual

Model: BN59-01301C

1. Introduction

This manual provides essential instructions for the setup, operation, and maintenance of your LOUTOC Universal Samsung Smart TV Remote Control. This remote is designed as a replacement and is compatible with a wide range of Samsung Smart TVs, including Frame, Crystal UHD, Neo QLED, OLED, 4K, and 8K models. It requires no programming or complex setup, offering immediate functionality upon battery insertion.







Image: Two LOUTOC Universal Samsung Smart TV Remote Controls, illustrating the product included in the package.

Package Contents: Each package includes two (2) LOUTOC Universal Samsung Smart TV Remote Controls. Please note that batteries are not included.

2. SETUP

The LOUTOC Universal Samsung Smart TV Remote Control is designed for immediate use without the need for programming or pairing. Simply insert batteries to begin operation.

2.1 Battery Installation

- 1. **Open Battery Compartment:** Gently slide down the remote control cover located on the back of the remote.
- 2. Identify Polarity: Observe the positive (+) and negative (-) terminals inside the battery compartment.


- 3. **Insert Batteries:** Insert two (2) AA batteries, ensuring they align with the correct polarity markings. Incorrect battery insertion will prevent the remote from functioning.
- 4. **Close Battery Compartment:** Gently push the remote control cover upwards until it clicks into place, securing the batteries.



Gently slide down the remote control cover.



Distinguish your batteries' positive and negative terminals.

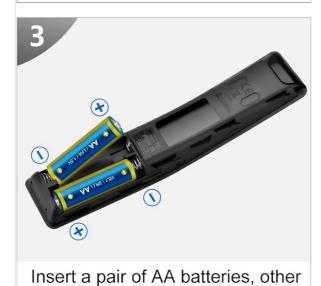

models will not work.



Likewise, gently push the remote control cover upwards to close it.

Image: A visual guide demonstrating the four steps for correctly installing AA batteries into the remote control.

Once batteries are installed, the remote is ready for use with your compatible Samsung Smart TV.

3. OPERATING INSTRUCTIONS

This remote control provides intuitive access to your Samsung Smart TV's functions. Familiarize yourself with the button layout for optimal use.



Voice Search

Power: Turns the product on or off.



Color / Number button:

Each time you press this button, the colored buttons window and the virtual numeric pad are displayed alternately.

- •Use this button to access additional options that are specific to the feature in use.
- Press to bring up the virtual numeric pad on the screen. Use the numeric keypad to enter numeric values. Select numbers and then select Done to enter a numeric value. Use to change the channel, enter a PIN, enter a ZIP code, etc.





Ambient Mode: Ambient Mode + mimics the wall behind it and elevates your space by turning the screen into décor, artwork, the weather, today's headlines, and more.

-Directional pad (up/down/left/right): Moves the focus.

Select: Selects or runs a focused item. When pressed while you are watching a broadcast programme, detailed programme information appears.

- Return: Press to return to the previous menu. When pressed for 1 second or more, the running function is terminated. When pressed while you are watching a programme, the previous channel appears.
- Play/pause: When pressed, the playback controls appear. Using these controls, you can control the media content that is playing.
- **Smart Hub:** Press to return to the Home Screen. For The Frame model, Press in Art mode to switch to TV mode.

VOL (Volume): Move the button up or down to adjust the volume. To mute the sound, press the button Press and hold the Volume button to display the Accessibility Shortcuts

CH (Channel): Move the button up or down to change the channel. To see the Guide screen, press the button. When pressed for 1 second or more, the Channel List screen appears. Press and hold the button up or down to quickly change the channel.

3 Shortcuts: Launches the app indicated by the button.

Image: A detailed diagram illustrating the function of each button on the LOUTOC Universal Samsung Smart TV Remote Control.

- Power Button: Turns the television on or off.
- Color / Number Button (123): Press to display the colored buttons window and the virtual numeric pad. Use the numeric keypad to enter numbers or access specific functions.
- Refer to Guide Button: Accesses the TV program guide.
- Ambient Mode Button: Activates Ambient Mode, which displays decorative content, artwork, weather, or headlines when the TV is off.
- Directional Pad (Up/Down/Left/Right): Navigates menus and moves focus on the screen.
- Select Button (Center of Directional Pad): Confirms selections or runs a focused item.
- Return Button: Returns to the previous menu. Press and hold for 1 second or more to terminate the current running program.
- Play/Pause Button: Controls media playback (play, pause).
- Smart Hub Button (Home Icon): Returns to the Home Screen. For 'The Frame' models, this button also switches to Art mode.
- VOL (Volume) Buttons: Adjusts the volume. Press and hold to display Accessibility Shortcuts menu.
- CH (Channel) Buttons: Changes the channel. Press and hold for 1 second or more to display the Channel List screen.

 Shortcut Buttons (NETFLIX, P-video, Hulu): Launches the corresponding streaming application directly.

Note: This is an infrared remote control and does not support voice control functions.

4. KEY FEATURES

- **Broad Compatibility:** Fully compatible with all Samsung Frame, Crystal UHD, Neo QLED, OLED, 4K, and 8K Smart TVs. It serves as a direct replacement for most original Samsung remote controls.
- **Instant Operation:** No programming or pairing is required. Simply insert batteries, and the remote is ready to use.
- **Dedicated Streaming Buttons:** Features direct access buttons for popular streaming services including NETFLIX, P-video, and Hulu, enhancing user convenience.
- **Reliable Performance:** Utilizes mature infrared technology for a strong signal, extended transmitting distance, and fast response times, ensuring smooth navigation without noticeable delay.
- **Durable Construction:** Manufactured from high-quality ABS material and silicone for enhanced durability and a comfortable grip.



Image: The remote control displayed alongside different Samsung Smart TV models, emphasizing its universal compatibility.



Image: The remote control showcasing its three dedicated shortcut buttons for Netflix, P-video, and Hulu.

5. MAINTENANCE

Proper care will ensure the longevity and optimal performance of your remote control.

- Cleaning: Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- Battery Replacement: Replace batteries when the remote's response becomes sluggish or it ceases to function. Always replace both batteries simultaneously with new AA batteries. Do not mix old and new batteries or different types of batteries.
- **Storage:** Store the remote in a dry place, away from direct sunlight, extreme temperatures, and high humidity.
- Avoid Drops: Protect the remote from physical impact, as drops can damage internal circuitry.

6. TROUBLESHOOTING

If you encounter issues with your LOUTOC Universal Samsung Smart TV Remote Control, refer to the following common solutions:

• Remote Not Responding:

- Ensure batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with a fresh pair of AA batteries.
- Check for any obstructions between the remote control and the TV's infrared receiver.
- Ensure you are within the effective operating range (approximately 40 feet) and pointing the remote directly at the TV.

• Buttons Not Working:

- If specific buttons are unresponsive, try replacing the batteries.
- Clean the remote's surface, especially around the buttons, to remove any debris that might be causing sticking.
- No Programming Required: Remember that this remote is designed to work immediately with compatible Samsung Smart TVs without any programming steps. If it's not working, the issue is likely battery-related or an obstruction.

7. Specifications

Model Number	BN59-01301C
Brand	LOUTOC
Product Dimensions	6.5 x 3 x 0.4 inches
Item Weight	0.7 ounces
Color	Black
Power Source	2 x AA Batteries (not included)
Compatible Devices	Samsung Smart Televisions (Frame, Crystal UHD, Neo QLED, OLED, 4K, 8K)
Max Number of Supported Devices	18 (Universal compatibility for various Samsung TV models)

8. WARRANTY AND SUPPORT

Your LOUTOC Universal Samsung Smart TV Remote Control comes with a 30-day return and refund service. We strive to maintain high standards of product excellence and customer satisfaction. If you have any questions, concerns, or require assistance regarding your order or the product, please do not hesitate to reach out to the seller through the platform where the purchase was made. Our support team is available to assist you.

Related Documents - BN59-01301C

