

## SINGER MX60

# SINGER MX60 Sewing Machine and Accessory Kit Instruction Manual

Model: MX60

## 1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your SINGER MX60 Sewing Machine and its accompanying accessory kit. The SINGER MX60 is a lightweight and portable sewing machine designed for ease of use, making it suitable for beginners and experienced sewers alike. It features preset stitch length and width for simple stitch selection and offers 57 stitch applications for various sewing techniques.

The included accessory kit expands your sewing capabilities with 9 presser feet, a twin needle, and a custom-fit plastic case. These accessories enable a wider range of projects, from basic mending to intricate quilting and embroidery.



Figure 1: SINGER MX60 Sewing Machine with included accessory kit and foot pedal.

## 2. PRODUCT FEATURES AND COMPONENTS

The SINGER MX60 Sewing Machine is equipped with several features to enhance your sewing experience:

- **57 Stitch Applications:** For key sewing techniques, offering versatility for various projects.
- **Easy Stitch Selection:** Simplified stitch selection with preset length and width.

- **Buttonholes:** A 4-step buttonhole function for easy creation.
- **Lightweight and Portable:** Ideal for transport to classes or for use in smaller spaces.
- **Front-Loading Bobbin:** Convenient access for bobbin changes.
- **Easy-to-Follow Threading Guides:** Clearly marked paths for effortless threading.
- **White LED Lighting:** Illuminates the sewing area for improved visibility.

## 2.1 Included Accessory Kit

The SINGER Accessory Kit includes:

- 9 Presser Feet: Blind Hem, Cording, Darning/Freehand Embroidery, Even Feed/Walking, Gathering, Narrow Rolled Hem, Overcasting, Satin Stitch, Straight Stitch.
- Twin Needle.
- Custom-fit SINGER plastic container with a padded removable insert for organized storage.



Figure 2: Side view of the SINGER MX60 Sewing Machine.

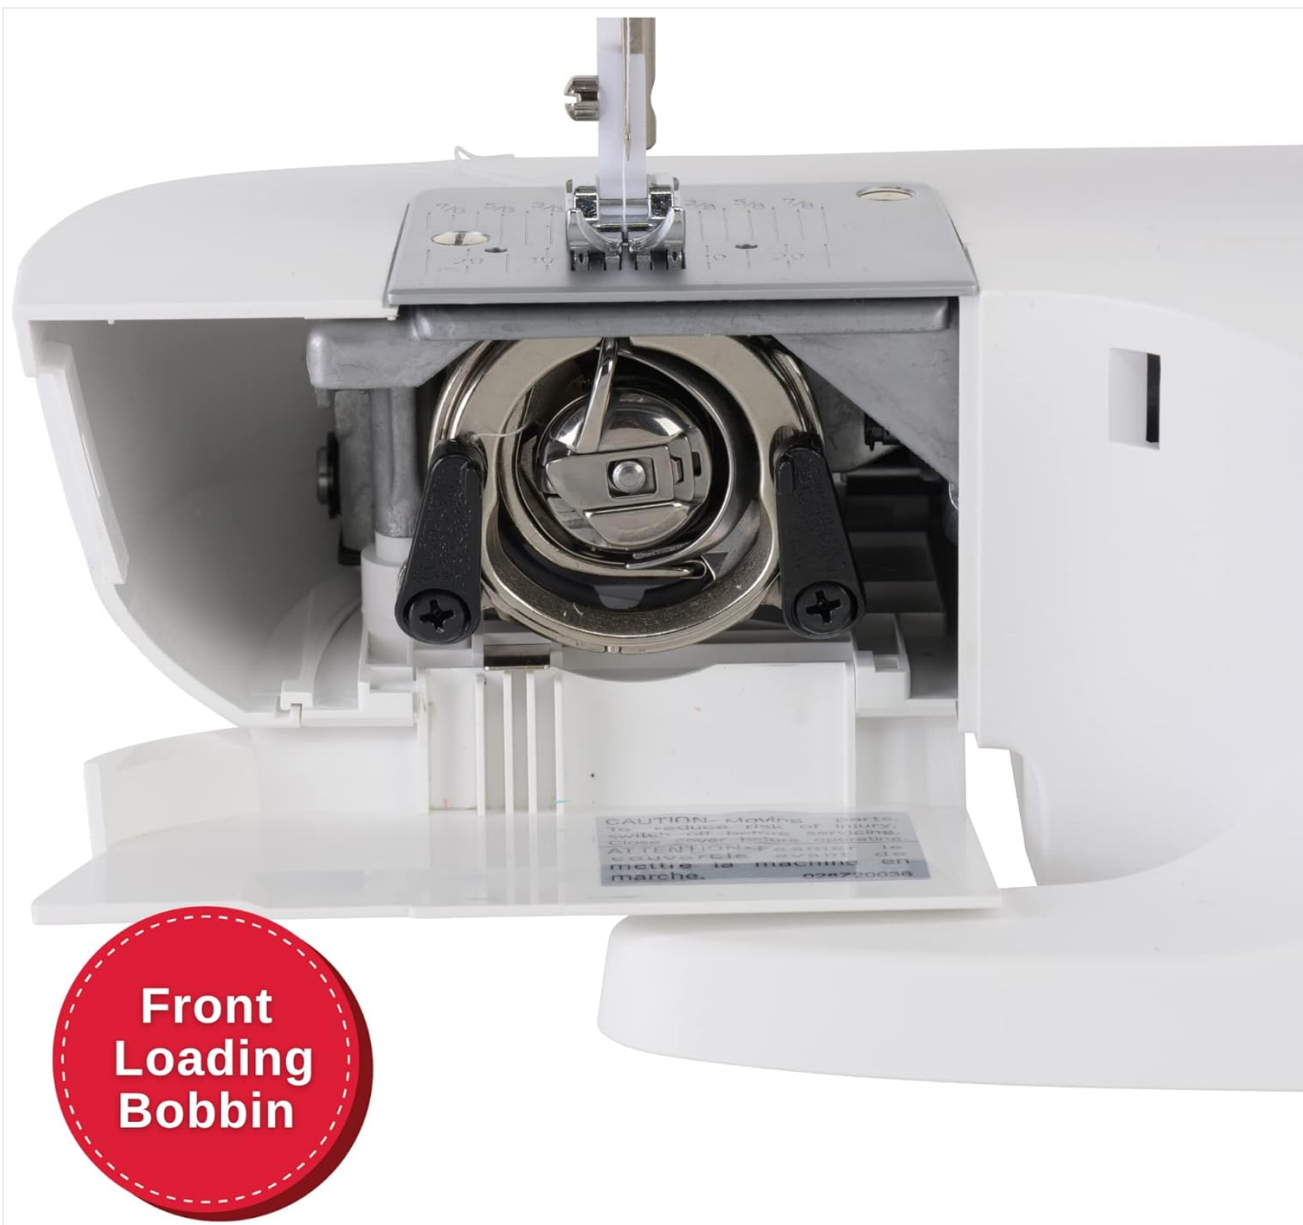


Figure 3: Close-up of the front-loading bobbin area, showing easy access for bobbin insertion.



Figure 4: Top view illustrating the easy-to-follow threading guides on the machine.

## 3. SETUP

### 3.1 Power Connection and Basic Controls

Before starting, ensure the machine is placed on a stable surface. Connect the power cord and foot pedal to the designated ports on the machine. Use the power switch to turn the machine on/off. The handwheel, located on the right side, manually moves the needle up and down; always turn it towards you.

Video 1: An overview of the SINGER M1500 sewing machine's main parts, including power connection, handwheel, spool pins, reverse lever, stitch selector dial, thread cutter, needle, presser foot, and removable storage compartment. Note: While this video features the M1500, many basic components and their functions are similar to the MX60.

### 3.2 Threading the Machine

Follow the numbered threading guides printed on the machine for correct upper thread path. Ensure the thread is properly seated in the tension discs and take-up lever for optimal stitch quality.

### 3.3 Winding the Bobbin

Place the empty bobbin onto the bobbin winding spindle. Follow the bobbin winding path indicated on the machine. Engage the bobbin winder and press the foot pedal to wind thread onto the bobbin. Disengage once full.

Video 2: A brief demonstration of the SINGER MX60 sewing machine, highlighting its basic functions like threading and bobbin winding. This video is from an influencer, but provides a useful visual for these setup steps.

## 4. OPERATING THE MACHINE

---

### 4.1 Stitch Selection and Adjustment

Use the stitch selector dial to choose your desired stitch pattern. The stitch length can be adjusted using the stitch length lever, and the reverse lever allows for backstitching to secure seams.

### 4.2 Using the Rolled Hem Foot

The Rolled Hem Foot (also known as a Narrow Hem Foot) is designed for creating very narrow, professional-looking hems on light to medium-weight fabrics, such as those used for scarves and blouses. It features a small scroll at the front that guides the fabric edge, rolling it over and enclosing the raw edge as you sew a straight stitch.

To use: Trim the fabric edge to a 1/2 inch hem allowance. Fold and press the fabric over 1/8 inch, then again another 1/8 inch. Position the folded fabric under the foot, lower the needle, and feed the fabric edge into the scroll. Sew slowly, guiding the fabric into the scroll as you go. For starting at a corner, use a small piece of tear-away stabilizer under the hem.

Video 3: Detailed instructions on how to use the SINGER Rolled Hem Presser Foot for creating narrow hems and for couching over narrow cords.

### 4.3 Using the Gathering Foot

The Gathering Foot is used to create gathers in fabric. It works best with softer, lightweight fabrics. The foot has a slot in the front, open on the left and closed on the right, and the bottom of the foot locks in fullness as you stitch.

To attach: Remove the machine's presser foot holder and attach the gathering foot using a screwdriver, ensuring the shank is properly seated. To gather a single fabric: Set the machine for a straight stitch, move the needle to the left position for the widest seam allowance. Place the fabric under the foot and sew at a moderate speed. Longer stitches and increased thread tension will provide fuller gathers. To gather and attach to a second flat fabric: Place the fabric to be gathered under the foot, lower the presser foot. Then insert the second (flat) fabric into the slot at the left side of the foot. Lower the needle and start sewing.

Video 4: Instructions on how to use the SINGER Gathering Foot to create gathers in fabric, both for single layers and for attaching gathered fabric to a flat piece.

## 5. MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your sewing machine.

- **Cleaning:** Regularly clean lint and dust from the bobbin area and feed dogs using the brush provided in your accessory kit.
- **Needle Replacement:** Replace needles frequently, especially when working with new projects or if the needle becomes dull or bent.
- **Lubrication:** Refer to the full product manual for specific lubrication instructions, if applicable.
- **Storage:** Store the machine in a dry, dust-free environment. Use the included accessory case to keep presser feet and other small items organized.

## 6. TROUBLESHOOTING

---

If you encounter issues with your SINGER MX60, consider the following common solutions:

- **Skipped Stitches:** Ensure the needle is inserted correctly and is not bent. Check that the machine is properly threaded.
- **Thread Breakage:** Verify correct threading, proper tension settings, and that the needle is suitable for your fabric and thread type.

- **Fabric Jamming:** Ensure the presser foot is lowered before sewing. Check for tangled threads in the bobbin area.
- **Uneven Stitches:** Adjust thread tension. Ensure the bobbin is wound evenly.

For more detailed troubleshooting, please consult the complete SINGER MX60 user manual available on the SINGER website.

## 7. SPECIFICATIONS


Feature	Detail
Brand	SINGER
Model Number	MX60
Stitch Applications	57
Sewing Space (Needle to Tower)	5.6 inches
Height	3.9 inches
Product Dimensions	1"D x 8"W x 4.5"H
Bobbin Type	Front-Loading






## 8. WARRANTY AND SUPPORT

For warranty information, product registration, and access to the full user manual, please visit the official SINGER website. SINGER provides comprehensive support resources, including FAQs, video tutorials, and customer service contact options. Online resources can be found at: [www.singer.com](http://www.singer.com)

© 2024 SINGER. All rights reserved. SINGER and SINGER IS SEWING IS MADE EASY are exclusive trademarks of The Singer Company Limited S.à.r.l. or its Affiliates.

### Related Documents - MX60

	<p><a href="#">Singer 44S Sewing Machine Instruction Manual</a></p> <p>Comprehensive instruction manual for the Singer 44S sewing machine, covering setup, operation, maintenance, and troubleshooting. Learn how to thread your machine, wind bobbins, sew various stitches, and resolve common issues.</p>
---	--

 <p>The image shows the cover of a Singer Needle Guide. It features the Singer logo at the top left, a small 'SINGER' logo with 'Needle Guide' below it at the top right, and a photograph of a sewing machine needle and foot stitching through fabric. The text 'Choose Durability that Delivers Sewing Ease and Performance' is visible at the bottom of the cover.</p>	<p><a href="#">SINGER Needle Guide: Choosing the Right Needle for Your Fabric</a></p> <p>A comprehensive guide to SINGER sewing machine needles, detailing needle anatomy, types, sizes, and fabric compatibility. Learn how to select the best SINGER needle for various fabrics and sewing projects to achieve optimal results.</p>
 <p>The image shows the cover of the SINGER M3330 Sewing Machine manual. It contains a list of features and specifications in a small, dense font. The title 'M3330 Sewing Machine' is at the top.</p>	<p><a href="#">SINGER M3330 Sewing Machine: Features and Specifications</a></p> <p>Explore the SINGER M3330 sewing machine, a special edition model featuring 97 stitch applications, 23 built-in stitches, a one-step buttonhole, and a heavy-duty metal frame. Ideal for all types of sewing.</p>
 <p>This is a duplicate of the first image, showing the cover of a Singer Needle Guide with the same logo, title, and sewing machine needle image.</p>	<p><a href="#">SINGER Needle Guide: Types, Sizes, and Fabric Compatibility</a></p> <p>Explore the SINGER Needle Guide to understand different sewing needle types, sizes, and their ideal fabric applications. Learn about SINGER's superior quality, features, and recommendations for optimal sewing results.</p>
 <p>The image shows the cover of the SINGER 331K Fittings manual. It features the Singer logo and the title '331K Fittings' in a simple, clean layout.</p>	<p><a href="#">Singer 331K Fittings Guide: Parts and Applications for Industrial Sewing Machines</a></p> <p>A comprehensive guide detailing the various fittings, including feed dogs, presser feet, throat plates, and roller pressers, for Singer 331K series industrial sewing machines (331K, 331K1, 331K2, 331K3, 331K4, 331K5, 331K6, 331K16, 331K24). Includes part numbers, descriptions, and applicable machine models for each component.</p>
 <p>The image shows the cover of the SINGER MX60 Instruction Manual. It features a line drawing of the sewing machine and the title 'SINGER MX60 Instruction Manual'.</p>	<p><a href="#">SINGER MX60 Instruction Manual: Sewing Machine Guide</a></p> <p>Comprehensive instruction manual for the SINGER MX60 sewing machine, covering setup, operation, maintenance, and troubleshooting. Learn to use your SINGER MX60 for various sewing tasks, from basic stitches to advanced techniques.</p>