

LANDOT QF-Z400

LANDOT 1.75 Inch Wide Hair Straightener

USER MANUAL - MODEL QF-Z400

[Instructions](#) [Safety Instructions](#) [Product Overview](#) [Setup](#) [Operating](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. Important Safety Instructions

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Water Hazard:** Do not use this appliance near water, such as bathtubs, showers, basins, or other vessels containing water. Never immerse the appliance in water or any other liquid.
- **Burn Risk:** The styling plates become extremely hot during use. Avoid direct contact with skin, especially the scalp, ears, and neck, to prevent burns.
- **Unplug After Use:** Always unplug the appliance immediately after use and before cleaning.
- **Flammable Materials:** Keep the appliance away from flammable materials, fabrics, and surfaces while in use and cooling down.
- **Children:** This appliance is not intended for use by children. Keep out of reach of children.
- **Power Cord:** Do not wrap the power cord around the appliance. Inspect the cord regularly for damage. Do not use if the cord is damaged.
- **Storage:** Allow the appliance to cool completely before storing.

2. Product Overview

The LANDOT 1.75 Inch Wide Hair Straightener (Model QF-Z400) is designed for efficient and versatile hair styling. Its wide ceramic plates allow for faster styling, while advanced heating technology ensures even heat distribution and reduced frizz.

PROFESSIONAL HAIR STRAIGHTENER

1 ¾ INCH Wide Professional
Ceramic Straightening
Iron Fast-heating faster get
silky-smooth straight
and increased shine



Image: The LANDOT 1.75 Inch Wide Hair Straightener, showcasing its sleek design.

Key Features:

- **1.75 Inch Wide Ceramic Plates:** Ideal for styling larger sections of hair, reducing styling time.
- **Advanced Heat Technology:** Provides fast heat-up and consistent temperature for smooth, shiny results.

- **Multiple Heat Settings:** Adjustable temperature control to suit various hair types.
- **3D Floating Plates:** Designed to prevent hair pulling and ensure smooth gliding.
- **Dual Voltage:** Suitable for international travel (voltage compatibility may vary, check local requirements).
- **Rounded Edge Design:** Allows for both straightening and creating waves or curls.

3X MORE PROTECTION

REDUCES FRIZZ & UPS SHINE

CERAMIC

TOURMALINE

KERATIN



3D FLOATING PLATES
No Pulling Hair



2X FASTER STYLING
3X LESS DAMAGE

WIDE

1.75"



NARROW

1"



Image: Visual comparison illustrating the wider 1.75-inch plates of the LANDOT straightener versus a standard 1-inch narrow plate.

3. Setup

1. **Unpack:** Carefully remove the straightener and all accessories from the packaging.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Placement:** Place the straightener on a heat-resistant, flat surface away from water and flammable materials.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet. Ensure the voltage matches your local power supply.

4. Operating Instructions

4.1 Hair Preparation

- Ensure your hair is clean, completely dry, and free of tangles before styling.
- Apply a heat protectant spray evenly throughout your hair to minimize heat damage.
- Section your hair into manageable portions using clips.

4.2 Power On and Temperature Selection



Image: Diagram of the LANDOT straightener highlighting the On/Off switch, temperature controls, and plate-locking switch.

1. Press the **On/Off Switch** to turn on the appliance. The LED display will illuminate.
2. Use the temperature control buttons (usually '+' and '-') to select your desired heat setting.
3. Allow the straightener to heat up to the selected temperature. The display will indicate when it's ready.

Recommended Temperature Settings:

MULTIPLE HEAT SETTINGS

Precise control for all hair types

250-310°F

120-150°C

Thin/Fine, damaged or bleached hair

320-390°F

160-190°C

Normal, healthy hair

400-450°F

200-230°C

Thick, curly and difficult style hair



Image: Visual guide for selecting appropriate temperature settings based on hair type.

- **Thin/Fine, Damaged, or Bleached Hair:** 120-150°C (250-310°F)
- **Normal, Healthy Hair:** 160-190°C (320-390°F)
- **Thick, Curly, and Difficult-to-Style Hair:** 200-230°C (400-450°F)

4.3 Straightening Hair

1. Take a small section of prepared hair (approximately 1-2 inches wide).
2. Place the section of hair between the styling plates, close to the roots.
3. Gently clamp the plates together and glide the straightener slowly and steadily down the entire length of the hair, from roots to ends.
4. Repeat this process for all sections of hair until desired straightness is achieved. For best results, avoid going over the same section multiple times.



ONLY ONE PASS NEEDED

Lando's ultra smooth plates with proprietary ceramic coating are designed for 1-pass styling, preserving moisture levels, boosting shine and eliminating frizz.

Image: A four-panel image demonstrating the step-by-step process of straightening hair, from sectioning to the final sleek result.

Before

Curly Frizzy/Coarse

After

Sleek & Straight



Image: A 'Before and After' comparison showing frizzy/coarse hair transformed into sleek and straight hair.

4.4 Creating Waves or Curls

The rounded edges of the LANDOT straightener allow for creating soft waves or curls.

1. Take a small section of hair.

2. Clamp the straightener around the hair section, close to the roots.
3. Rotate the straightener 180 degrees (either inwards or outwards, depending on the desired curl direction).
4. Slowly glide the straightener down the hair shaft, maintaining the rotation.
5. Release the hair and allow the curl to cool and set. Repeat for all sections.

Video: A demonstration showing how to use the LANDOT 1.75 Inch Wide Hair Straightener to create soft waves and curls.

4.5 After Styling

- Once styling is complete, press the **On/Off Switch** to turn off the appliance.
- Unplug the power cord from the electrical outlet.
- Allow the straightener to cool down completely on a heat-resistant surface before handling or storing.

5. Maintenance

5.1 Cleaning

- Ensure the straightener is unplugged and completely cool before cleaning.
- Wipe the exterior and styling plates with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the plates and finish.
- Ensure no moisture enters the internal components.

5.2 Storage

- Once the appliance is completely cool, engage the plate-locking switch (if available) to keep the plates closed for compact storage.
- Store the straightener in a cool, dry place, away from direct sunlight and moisture.
- Do not wrap the power cord tightly around the appliance, as this can cause damage over time.

6. Troubleshooting

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in correctly or no power from outlet.	Ensure the power cord is securely plugged into a working electrical outlet. Check the power switch.
Appliance is not heating up.	Temperature setting is too low or heating element issue.	Increase the temperature setting. If the problem persists, contact customer support.
Hair is pulling or snagging.	Hair is tangled or plates are not clean.	Ensure hair is thoroughly detangled before use. Clean the styling plates as per maintenance instructions.
Hair is frizzy after styling.	Hair was not completely dry before styling.	Always ensure hair is 100% dry before using the straightener.

7. Specifications

Feature	Detail
Model Number	QF-Z400

Feature	Detail
Brand	LANDOT
Plate Material	Ceramic
Plate Width	1.75 inches
Max. Temperature Setting	230°C (450°F)
Power Source	Corded Electric
Product Dimensions	30 x 5 x 5 cm
Item Weight	454 g
Hair Type Compatibility	All, Curly, Thick, Straight
Resulting Hair Type	Straight

8. Warranty and Support

For warranty information, product support, or to inquire about replacement parts, please refer to the warranty card included with your purchase or contact LANDOT customer service directly. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question