

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sunvivi](#) /

› [Sunvivi 8-Liter Programmable Multicooker User Manual](#)

Sunvivi e691c419-40f8-4f70-bd41-edfcc48b350e

Sunvivi 8-Liter Programmable Multicooker User Manual

Model: e691c419-40f8-4f70-bd41-edfcc48b350e

INTRODUCTION

Thank you for purchasing the Sunvivi 8-Liter Programmable Multicooker. This versatile appliance is designed to simplify your cooking experience with its 12-in-1 functionality, digital controls, and large capacity. Please read this manual thoroughly before first use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

COMPONENTS AND FEATURES

Familiarize yourself with the parts of your Sunvivi Multicooker:

- **Main Unit:** The outer housing containing the heating element and control panel.
- **Removable Cooking Pot:** An 8-quart cast aluminum pot for cooking.
- **Glass Lid:** A transparent lid with a handle, allowing you to monitor cooking progress.
- **Control Panel:** Digital display with time and temperature controls, and function buttons.
- **Handles:** Integrated handles on the main unit for safe transport.
- **Steaming Rack:** (If included) For steaming foods.



Image: The Sunvivi 8-Liter Programmable Multicooker with its main unit, removable cooking pot, and glass lid, shown with food cooking inside.

12 Functions, Infinite Flavors



Bake



Saute



Roast



Manual



Stew



Rice



Yogurt



Sous Vide



Smarts Steam



Slow Cook



Keep Warm



Image: An overview of the Sunvivi Multicooker highlighting its 12 functions: Bake, Saute, Roast, Manual, Stew, Rice, Yogurt, Sous Vide, Smarts Steam, Slow Cook, Keep Warm, and Delay.

Uniform Heating

Faster cooking, energy saving



Recirculating
Heating



Visible
Lid



Adjustable
Temp



Image: Detailed dimensions of the Sunvivi Multicooker, including the main unit (20" L x 13" W x 11.5" H), the cooking pot (16.5" L x 12" W x 5.5" H), and the steaming rack (12" L x 7" W x 3" H).

SETUP AND FIRST USE

- Unpacking:** Carefully remove all packaging materials and any promotional labels from the multicooker.
- Cleaning:** Before first use, wash the removable cooking pot and glass lid in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
- Placement:** Place the multicooker on a stable, level, heat-resistant surface, away from walls and other appliances to allow for proper ventilation.
- Power Connection:** Ensure the voltage of your power outlet matches the appliance's requirements (120 Volts AC). Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

The Sunvivi Multicooker features a user-friendly control panel with a digital display for time and temperature, and dedicated function buttons.

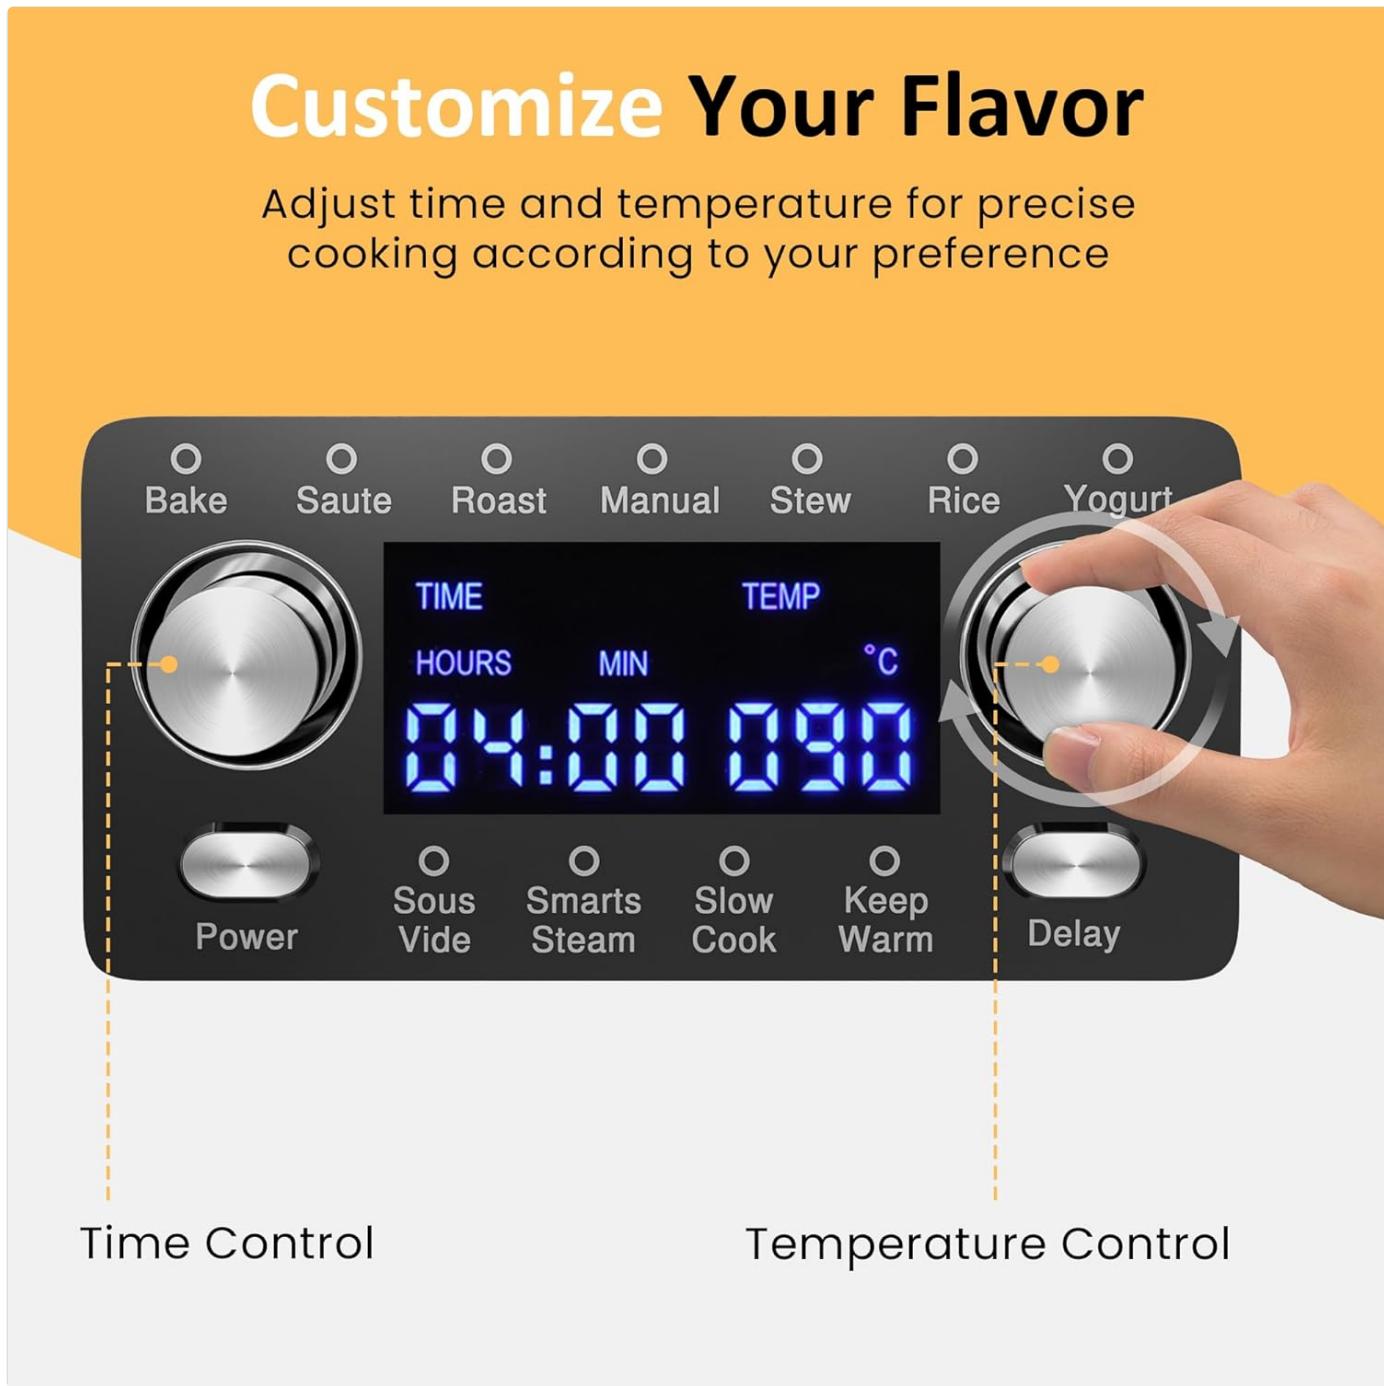


Image: A close-up of the Sunvivi Multicooker's control panel, showing the digital display, time control knob on the left, and temperature control knob on the right. The various function buttons are also visible.

General Operation:

- Power On:** Press the "Power" button to turn on the appliance. The display will illuminate.
- Select Function:** Choose your desired cooking function by pressing the corresponding button (e.g., Bake, Saute, Roast, Stew, Rice, Yogurt, Sous Vide, Smarts Steam, Slow Cook, Manual).
- Adjust Time:** Use the "Time Control" knob (left knob) to set the cooking duration in hours and minutes. Turn clockwise to increase, counter-clockwise to decrease.
- Adjust Temperature:** Use the "Temperature Control" knob (right knob) to set the desired cooking temperature. Turn clockwise to increase, counter-clockwise to decrease.
- Start Cooking:** Once time and temperature are set, the appliance will typically begin heating automatically after a few seconds, or you may need to press a start button if available (not explicitly shown but implied by digital controls).

6. **Delay Start:** The "Delay" function allows you to set a delayed start time for cooking. Press "Delay", then set the desired delay time using the Time Control knob.
7. **Keep Warm:** After cooking, the appliance may automatically switch to "Keep Warm" mode, or you can select it manually to keep food at serving temperature.

Specific Functions:

- **Bake:** For baking various dishes.
- **Saute:** For browning ingredients before slow cooking or for stir-frying.
- **Roast:** Ideal for roasting meats and vegetables.
- **Manual:** Allows for custom time and temperature settings for specific recipes.
- **Stew:** Optimized for slow-cooking stews and hearty dishes.
- **Rice:** For cooking various types of rice.
- **Yogurt:** For preparing homemade yogurt.
- **Sous Vide:** For precise temperature cooking in a water bath (requires additional accessories not included).
- **Smarts Steam:** For steaming vegetables, fish, or other foods using the steaming rack.
- **Slow Cook:** The primary function for traditional slow cooking over extended periods.
- **Keep Warm:** Maintains food at a safe serving temperature after cooking is complete.
- **Delay:** Sets a timer for when cooking should begin.



Image: The Sunvivi Multicooker in use, demonstrating the steaming function with corn on the cob and eggs on the included steaming rack.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your multicooker.

1. **Always unplug** the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Removable Cooking Pot and Glass Lid:** These parts are dishwasher safe. Alternatively, wash them in warm, soapy water using a non-abrasive sponge or cloth. Rinse thoroughly and dry completely.
3. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
4. **Storage:** Store the multicooker in a dry place. Ensure all parts are clean and dry before storing.

TROUBLESHOOTING

If you encounter issues with your Sunvivi Multicooker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not functioning; power button not pressed.	Ensure the power cord is securely plugged into a working outlet. Press the "Power" button.
Controls are difficult to read.	Small font size on control panel.	Ensure adequate lighting when operating. Refer to this digital manual for clear instructions on button functions and display readings.
Food not cooking properly or taking too long.	Incorrect temperature or time setting; lid not properly sealed; insufficient liquid for slow cooking.	Verify temperature and time settings for your recipe. Ensure the lid is seated correctly. Add sufficient liquid for slow cooking functions.
"Impossible to operate" / Controls seem unresponsive.	User unfamiliarity with digital interface; specific sequence required for certain functions.	Carefully follow the "Operating Instructions" section. Ensure you select a function BEFORE setting time/temperature. If issues persist, unplug the unit for 1 minute and plug back in to reset.

SPECIFICATIONS

- Model:** e691c419-40f8-4f70-bd41-edfcc48b350e
- Capacity:** 8 Quarts (approx. 7.5 Liters)
- Voltage:** 120 Volts (AC)
- Power:** 1250 Watts
- Dimensions (Product):** 49.78 cm x 33.02 cm x 28.96 cm (19.6 in x 13.0 in x 11.4 in)
- Weight (Product):** 7.01 kg (15.45 lbs)
- Dishwasher Safe Parts:** Removable Cooking Pot, Glass Lid

WARRANTY AND SUPPORT

Sunvivi products are manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or replacement parts, please contact Sunvivi customer service. Details are typically provided with your purchase documentation or on the official Sunvivi website.

Please retain your proof of purchase for warranty claims.