

[Manuals.plus](#) /

› [KAER](#) /

› KAER 10-15 Gun Safe Instruction Manual

KAER 1400

KAER 10-15 Gun Safe Instruction Manual

Brand: KAER | Model: 1400

PRODUCT OVERVIEW

The KAER 10-15 Gun Safe is designed for secure storage of rifles, pistols, and ammunition. It features robust construction, adjustable storage, and multiple access methods to ensure the safety of your firearms.



Figure 1: Front view of the KAER 10-15 Gun Safe with an interior view showing storage capacity for rifles and pistols.

Key Features

- **Large and Adjustable Storage Space:** Accommodates 10-12 long guns and 4 pistols, with adjustable racks for varying gun lengths. Dimensions: H55.11" X W19.68" X D15.1".
- **Reliable Security:** Constructed from sturdy cold-rolled steel with a 3mm thick alloy anti-pry steel door, 3*20mm solid locking bolts, and concealed hinges. Features an alarm for incorrect password entries.
- **Stylish Exterior Design:** Door panel decorations with stamping process and rivets for a clean and coordinated look.
- **Quick Access:** Multiple unlocking methods including digital password, emergency key, and external battery box for power outages. Equipped with a magnetic sensor light for interior illumination.
- **Easy to Assemble:** Designed for straightforward assembly with clear instructions and available video guidance. Can be mounted to the wall for enhanced security.

SETUP AND INSTALLATION

Assembly Instructions

The KAER Gun Safe is shipped unassembled for easier transport. Please follow the detailed instructions provided in the manual and refer to the assembly videos for visual guidance.

1. Unpack all components carefully, ensuring all parts listed in the packing list are present.
2. Assemble the main frame of the safe by connecting the side panels to the door frame and back panel using the provided screws.
3. Install the top and bottom plates securely.
4. Insert the adjustable shelf and gun racks into their desired positions.
5. Attach the magnetic sensor light to the interior ceiling of the safe.



Video 1: Gun Safe Installation Process. This video demonstrates the step-by-step assembly of the gun safe, including connecting panels and installing interior components.



Video 2: Assembled Gun Safe. A brief overview of the fully assembled gun safe, showcasing its interior and exterior features.

Wall Mounting

For enhanced security and stability, it is highly recommended to mount the safe to a wall or floor using the provided expansion screws. This prevents tipping and unauthorized removal.

4 EXPANSION BOLTS YOU CAN INSTALL IT TO THE FLOOR OT WALL



Figure 2: Illustration of wall or floor mounting using the four expansion bolts for secure placement.

OPERATING INSTRUCTIONS

Unlocking Methods

The KAER Gun Safe offers multiple ways to access your firearms:

1. **Digital Password:** Wake up the keypad by touching it, enter your 3-12 digit password, then press the “#” key and turn the handle clockwise to open.
2. **Emergency Key:** In case of forgotten password or battery failure, use one of the two provided emergency keys to manually unlock the safe.
3. **External Battery Box:** If the internal batteries are low, connect an external battery box (not included, but compatible) to the external port to power the keypad and enter your password.

TWO UNLOCKING METHODS

YOU COULD REFER TO THE VIDEO ON HOW TO SET THE PASSWORD



01 Digital Password(3-12 digits)



+



02 Emergency Key(2 Keys)



+



When the internal battery is low, you can use the external battery compartment to access the gun cabinet



Figure 3: Visual representation of the digital password and emergency key unlocking methods.

Setting Passwords

You can set up to two separate passwords for the safe. Refer to the video below for a detailed guide on setting your password.



Video 3: How to Set the Password. This video provides clear instructions on how to program and change the digital password for your gun safe.

Silent Mode and Alarm Function

- **Silent Mode:** To switch between silent and non-quiet modes, enter "11#" on the keypad when the safe is locked.
- **Alarm Function:** If an incorrect password is entered 3-5 times consecutively, the safe's alarm will sound. To turn off

the alarm, enter the correct password.



Silent Mode and Password Error Prompt
Press "11#" to switch between silent and non-quiet modes

Input wrong password, The Keyboard will sound beep for 4 times, and the alarm sound can only be eliminated after entering the correct password

Figure 4: Visual guide to the silent mode activation and the alarm system for incorrect password attempts.

MAINTENANCE

To ensure the longevity and proper functioning of your KAER Gun Safe, regular maintenance is recommended:

- Keep the safe clean and dry. Wipe down the exterior with a soft, damp cloth. Avoid abrasive cleaners.
- Regularly check the battery level of the electronic lock and replace batteries as needed to prevent unexpected lockout.
- Ensure the locking bolts and hinges are free from debris and operate smoothly.
- Always store the emergency keys in a secure location outside the safe, but easily accessible.

TROUBLESHOOTING

If you encounter issues with your KAER Gun Safe, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Keypad not responding	Low or dead batteries.	Replace internal batteries or use the external battery box.
Safe won't open with correct password	Incorrect password entry sequence or keypad malfunction.	Ensure correct password and "#" key sequence. Try using the emergency key. Contact customer support if issue persists.
Alarm sounds frequently	Repeated incorrect password attempts.	Enter the correct password to disarm the alarm. Ensure only authorized users know the code.
Door is stiff or difficult to open/close	Debris in hinges or locking mechanism.	Clean hinges and locking bolts. Apply a small amount of lubricant if necessary.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	KAER
Model Number	1400
Color	Black
Product Dimensions	15.15"D x 19.68"W x 55.11"H
Item Weight	71 Pounds
Material	Alloy Steel
Lock Type	Electronic, Key
Capacity	10-12 long guns, 4 pistols
Special Feature	Lockable, Adjustable Shelf
Mounting Type	Wall Mount
Assembly Required	Yes
UPC	759357460875

WARRANTY AND SUPPORT

Return Policy

This product is eligible for a 30-day easy return policy (refund/replacement). Please refer to your purchase platform for specific return procedures.

Customer Support

If you have any questions, concerns, or require assistance with your KAER Gun Safe, please contact customer support through the seller's page on Amazon or via the contact information provided in your purchase documentation.

Important Safety Information

Always keep the emergency key in a secure but accessible location, separate from the safe. Test the battery backup regularly to ensure safe access to the firearms inside in case of a power outage or forgotten password.