

[Manuals.plus](#) /

› [Superer](#) /

› Superer Charger Instruction Manual for APOSEN Cordless Vacuums (Models H120, H250, H251, H21, H21S, H150)

Superer TP04-270080U

Superer Charger Instruction Manual for APOSEN Cordless Vacuums

Models: H120, H250, H251, H21, H21S, H150

1. PRODUCT OVERVIEW

This Superer AC adapter is designed to provide reliable power for compatible APOSEN Cordless Vacuum Cleaner models. It ensures a consistent and stable power supply for optimal device performance and charging.



Image 1.1: The Superer AC power adapter with its integrated cable and round tip connector.

Key Features:

- **Compatibility:** Specifically designed for APOSEN Cordless Vacuum models H120, H250, H251, H21, H21S, H150.
- **Safety Standards:** Manufactured to meet nationally recognized electronic safety standards.
- **Output:** Provides a maximum output of 27V 0.8A.
- **Input:** Supports an input voltage range of 100-240V.

2. PACKAGE CONTENTS

Upon opening your package, please verify that all components are present:

- 1 x Superer Power Adapter (Model: TP04-270080U)

3. SETUP INSTRUCTIONS

Before connecting the charger, ensure your APOSEN vacuum cleaner requires a round tip power connector and an output of 27V 0.8A or less. This charger is not compatible with devices requiring more than 1A.

CHARGING PORT

Check the shape of your charging port before purchase.



Image 3.1: Verify your device's charging port type. This charger uses a round tip connector.

1. Locate the charging port on your APOSEN Cordless Vacuum.
2. Carefully insert the round tip connector of the Superer power adapter into the vacuum's charging port.
3. Plug the 2-prong plug of the power adapter into a standard 100-240V AC wall outlet.

Adapter Details



01

2 Prong Plug

02

Fastener Tape



03

Connector



Image 3.2: Components of the Superer power adapter, including the 2-prong plug, fastener tape for cable management, and the round tip connector.

4. OPERATION (CHARGING)

Once properly connected, the charger will begin supplying power to your vacuum. The charging indicator on your vacuum (if present) will typically illuminate to show it is charging.

CONSISTENT POWER SUPPLY

Provide consistent & stable power for your device.



Image 4.1: An APOSEN cordless vacuum connected to the Superer charger and plugged into a wall outlet for charging.

Important Notes:

- Do not use this charger with devices that require an output current greater than 0.8A.
- Unplug the charger from the wall outlet when not in use or when the vacuum is fully charged.
- Avoid placing the charger in direct sunlight or near heat sources.

5. SAFETY INFORMATION

The Superer charger is designed with multiple safety protections to ensure safe operation:

Safety Protection

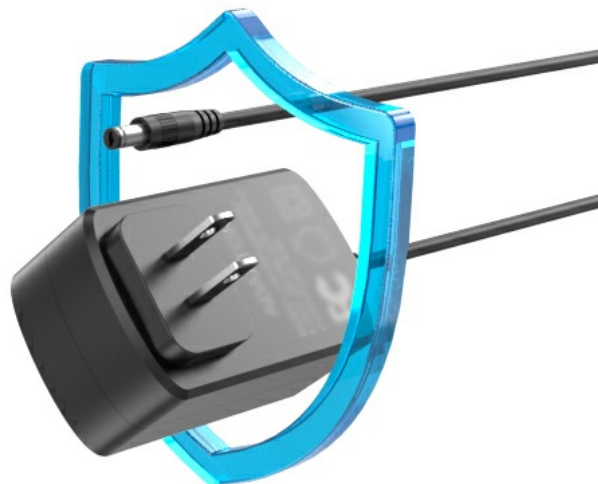
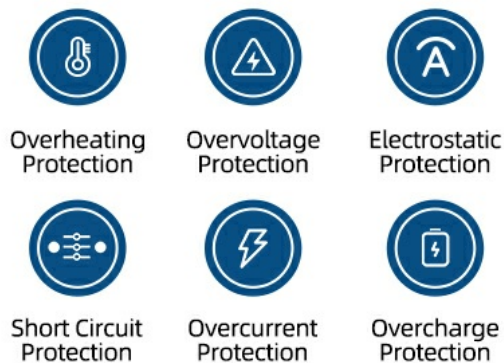


Image 5.1: Visual representation of the charger's built-in safety mechanisms.

- **Overheating Protection:** Prevents the charger from reaching unsafe temperatures.
- **Overvoltage Protection:** Safeguards against excessive voltage input.
- **Electrostatic Protection:** Protects against electrostatic discharge.
- **Short Circuit Protection:** Automatically shuts off power in case of a short circuit.
- **Overcurrent Protection:** Prevents damage from excessive current flow.
- **Overcharge Protection:** Protects the connected device from being overcharged.

Always use the charger in a dry environment. Do not expose it to water or excessive moisture. Keep out of reach of children.

6. SPECIFICATIONS



Image 6.1: The compact dimensions of the Superer charger, approximately 2.87" x 1.73" x 1.18".

Feature	Detail
Model Number	TP04-270080U
Input Voltage	100-240V AC
Output Voltage	27V

Output Amperage	0.8A (Max)
Wattage	21.6 watts
Connector Type	Round Power Connector
Color	Black
Item Weight	4.2 ounces
Package Dimensions	4.65 x 2.64 x 1.93 inches

7. TROUBLESHOOTING

If you encounter issues with your Superer charger, consider the following:

- **No Power:** Ensure the charger is securely plugged into both the wall outlet and the vacuum cleaner. Try a different wall outlet to rule out a power source issue.
- **Slow Charging:** Verify that the vacuum's charging port is clean and free of debris. Ensure the charger's specifications (27V 0.8A) match your vacuum's requirements.
- **Charger Overheating:** If the charger feels excessively hot, unplug it immediately. Ensure it is used in a well-ventilated area and not covered.
- **Incorrect Connector:** Double-check that your vacuum requires a round tip connector, not a USB-C or other type.

If problems persist after checking these points, please contact customer support.

8. WARRANTY AND SUPPORT

Superer stands by the quality of its products. This charger comes with comprehensive after-sales support:

Positive Customer Support

Refund Within 30 Days of Purchase
and Replace Service Within 12 Months



12

Replace Service Within 12 Months

Worry-free after sales



Replace Service
Within 12 Months



Refund Within
30 Days of Purchase



Quick feedback
to any problems

Image 8.1: Superer's commitment to customer satisfaction, including refund and replacement policies.

- **30-Day Replacement or Return:** This product is eligible for replacement or returns within 30 days of purchase.
- **12-Month Guarantee:** The manufacturer provides an additional 12-month guarantee for your peace of mind.

For any inquiries, technical assistance, or warranty claims, please contact Superer customer support through your purchase platform or the official Superer website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question