

[Manuals.plus](#) /

› [KAER](#) /

› KAER 12-15 Rifle Gun Safe Instruction Manual

KAER QC1400

KAER 12-15 Rifle Gun Safe Instruction Manual

MODEL: QC1400

Introduction

This manual provides detailed instructions for the safe and proper assembly, operation, and maintenance of your new KAER 12-15 Rifle Gun Safe. Please read all instructions carefully before use to ensure optimal performance and security. Keep this manual for future reference.

Important Safety Information

Failure to follow these safety guidelines may result in serious injury or property damage.

- Always store firearms unloaded and locked.
- Keep keys and access codes in a secure location, away from children and unauthorized persons.
- Ensure the safe is properly anchored to prevent tipping or unauthorized removal.
- Do not store flammable materials or explosives inside the safe.
- Regularly check the safe for any signs of tampering or damage.

Package Contents

Please verify that all items listed below are included and in good condition:

- 1 x KAER 12-15 Rifle Gun Safe (unassembled components)
- 2 x Emergency Keys
- 3 x Removable Gun Racks
- 4 x Fixing Bolts (for mounting)
- 1 x Emergency Battery Box
- 1 x User Manual (this document)

Setup and Assembly

The KAER 12-15 Rifle Gun Safe is designed for easy assembly. It is recommended to have assistance during the assembly process, though it can be done by one person.

1. Assembly Instructions

Follow the step-by-step instructions provided in the included assembly guide. Ensure all panels are correctly aligned and screws are tightened securely. The self-tapping screws may require firm hand tightening.



Image: Exploded view of the gun safe components, illustrating the assembly steps. The main panels, door, and internal accessories are shown separately before being put together.

2. Mounting the Safe

For enhanced security, it is highly recommended to fix the gun safe to a wall or floor using the provided expansion bolts. This prevents unauthorized removal or tipping.

1. Choose a suitable location with a solid wall or floor for anchoring.
2. Mark the drilling points through the pre-drilled holes on the back or bottom of the safe.
3. Drill pilot holes using an appropriate drill bit for your wall/floor material.
4. Insert the expansion bolts and secure the safe firmly.

4 EXPANSION BOLTS YOU CAN INSTALL IT TO THE FLOOR OT WALL



Image: A visual guide demonstrating the process of securing the gun safe to a wall using the four provided expansion bolts. It shows the safe against a wall with arrows indicating where the bolts should be inserted.

Operating Instructions

Unlocking Methods

Your KAER gun safe offers two primary unlocking methods:

1. **Digital Password:** The electronic keypad allows for a 3-12 digit password.
2. **Emergency Key:** Two emergency keys are provided for manual access, especially useful if the battery is low or the digital password is forgotten.

TWO UNLOCKING METHODS

YOU COULD REFER TO THE VIDEO ON HOW TO SET THE PASSWORD



01 Digital Password(3-12 digits)



+



02 Emergency Key(2 Keys)



+



When the internal battery is low, you can use the external battery compartment to access the gun cabinet



Image: A visual representation of the two ways to open the safe: using the digital keypad with a password and using the physical emergency keys. It also shows the external battery box for power in case of low internal battery.

Setting the Digital Password

Refer to the detailed instructions in the included manual for setting and changing your digital password. It is crucial to choose a strong, memorable password and keep it confidential.

Silent Mode Activation

To activate silent mode and disable keypad sounds, press "11#" on the digital keypad. This feature is useful for discreet access.

Error Locking System

The safe is equipped with an anti-theft system. If an incorrect code is entered 3-5 times consecutively, the lock will trigger a lockout period of 0.5-1 minute, preventing further attempts.

Internal Organization and Features

The KAER gun safe is designed for efficient and flexible storage of firearms and accessories.

Adjustable Storage

The safe includes a removable shelf and three adjustable gun racks, allowing you to customize the interior layout to accommodate various rifle and shotgun lengths (up to 45 inches) and other items.



Image: Illustrates the versatility of the safe's interior with options for using or removing the top shelf, and how rifles are stored with the included racks. It highlights the adjustable nature of the storage.

Door Organizer

The inside of the door features a robust organizer with four handgun holsters, one elastic strip, and two spacious storage bags, providing convenient access and storage for pistols, magazines, and other small accessories.

RIVETS

Rivet design



LOCKSET

Safety protection



GRIPS

Easy to open

Image: A comprehensive view of the safe's interior, pointing out key features such as the removable shelf, removable rifle rack, pistol pouches on the door, the magnetic lamp, the setting button for the lock, and the lock bolts.

Interior LED Lighting

The safe is equipped with an LED light that automatically illuminates when the door is opened to a 120° angle, providing clear visibility of the contents.

Maintenance

To ensure the longevity and proper functioning of your KAER gun safe, follow these maintenance guidelines:

- **Cleaning:** Wipe the exterior and interior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Lock Mechanism:** Periodically check the electronic keypad and mechanical lock for smooth operation. Do not lubricate the electronic components.
- **Battery Replacement:** Replace the batteries in the digital keypad as needed. If the internal battery is low, use the

external battery box for temporary power.

- **Anchoring Bolts:** Periodically check the tightness of the anchoring bolts to ensure the safe remains securely fixed.

Troubleshooting

Problem	Possible Cause	Solution
Keypad not responding / Safe won't open digitally	Low or dead batteries. Incorrect password entered.	Replace batteries. Use the emergency battery box. Re-enter the correct password. Use emergency key.
Safe is locked out after multiple attempts	Error locking system activated.	Wait for the lockout period (0.5-1 minute) to expire. Ensure correct password is used for next attempt.
Door does not close or latch properly	Obstruction in the door frame. Misalignment.	Check for any items blocking the door. Ensure the safe is on a level surface. Contact customer service if issue persists.

Specifications

Feature	Detail
Brand	KAER
Model Number	QC1400
Capacity	12-15 Rifles/Shotguns (up to 45 inches)
Product Dimensions (D x W x H)	15.1" x 19.6" x 55.1"
Item Weight	71 Pounds
Lock Type	Electronic, Key
Material	Cold-rolled steel (3mm thick anti-pry door)
Mounting Type	Floor Mount, Wall Mount
Included Components	Shotgun safe, 2 emergency keys, 3 removable gun racks, 4 fixing bolts, 1 emergency battery box, 1 manual

Warranty and Support

KAER products are designed for durability and reliability. For any questions, concerns, or to inquire about warranty information, please contact our customer service team. We are committed to providing a satisfactory solution. For further assistance, please visit the [KAER Store on Amazon](#).