

[Manuals.plus](#) /

› [Kircuit](#) /

› Kircuit 12V AC/DC Adapter User Manual

Kircuit CF-2303R

Kircuit 12V AC/DC Adapter User Manual

Compatible with Comfier Coococo CF-2303R CF2303R Shiatsu Neck & Back Massager

INTRODUCTION

The Kircuit 12V AC/DC Adapter is a high-quality power supply designed to provide reliable power to your compatible devices, such as the Comfier Coococo CF-2303R Shiatsu Neck & Back Massager. This adapter efficiently converts standard AC power from electrical outlets into the DC power required by your device, enabling both operation and battery charging.

Key features include:

- 100% Brand New, High Quality AC/DC Power Charger.
- Input: 100V-240V AC, suitable for various power grids and travel.
- Built-in Dynamic IC, Charger IC & Power fuse for rapid charging and overcharge protection.

PRODUCT OVERVIEW



Figure 1: The Kircuit 12V AC/DC Adapter, showing the main power brick, detachable AC input cord, and DC output cord with a barrel plug connector.



Figure 2: Detailed view of the adapter, highlighting its dimensions (e.g., 4.2 inches length) and the anti-interference magnetic ring on the DC output cable, designed for system reliability and stability.

SETUP

1. **Unpack the Adapter:** Carefully remove the Kircuit 12V AC/DC Adapter from its packaging. Ensure all components, including the main adapter unit and power cords, are present and undamaged.
2. **Connect the AC Input Cord:** If the AC input cord is detachable, connect the figure-8 end of the AC power cord firmly into the corresponding port on the adapter unit.
3. **Connect to Device:** Locate the power input port on your compatible device (e.g., Comfier Coococo CF-2303R massager). Insert the barrel plug connector of the adapter's DC output cord into this port. Ensure a snug and secure connection.
4. **Plug into Power Outlet:** Insert the two-prong AC plug of the adapter into a standard 100V-240V AC electrical wall outlet. Ensure the outlet is easily accessible and not overloaded.



Figure 3: The Kircuit AC/DC adapter connected to a wall outlet, ready to supply power to a device.

5. **Verify Connection:** Once connected, the adapter may have an indicator light (if present) to show it is receiving power. Your device should now be ready for operation or charging.

OPERATING INSTRUCTIONS

The Kircuit 12V AC/DC Adapter is designed for simple plug-and-play operation. Once properly connected to a power outlet and your device, it will automatically supply the necessary power.

- **Power Supply:** The adapter provides continuous power to operate your device directly from an electrical outlet.
- **Battery Charging:** If your device has a rechargeable battery, the adapter will charge it while connected and powered. The adapter's built-in protection features help prevent overcharging.
- **Safety Precautions:**
 - Do not expose the adapter to water, moisture, or extreme temperatures.
 - Avoid dropping or subjecting the adapter to severe impacts.
 - Do not attempt to open or repair the adapter. Refer to qualified service personnel.
 - Ensure the adapter is used only with compatible devices as specified.

MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your Kircuit AC/DC Adapter.

- **Cleaning:** Disconnect the adapter from the power outlet and your device before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use, store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly wrapping the cords to prevent damage.
- **Cord Inspection:** Periodically inspect the power cords and connectors for any signs of fraying, cuts, or damage. If any damage is observed, discontinue use immediately and replace the adapter.

TROUBLESHOOTING

If you encounter issues with your Kircuit 12V AC/DC Adapter, try the following troubleshooting steps:

- **No Power to Device:**
 - Ensure the adapter is securely plugged into a working electrical outlet. Test the outlet with another device.
 - Verify that the barrel plug is fully inserted into your device's power input port.
 - Check the AC input cord connection to the adapter unit (if detachable) for firmness.
 - Inspect the entire length of both cords for any visible damage.
- **Device Not Charging:**
 - Confirm that your device's battery is not fully charged or defective.
 - Ensure the adapter is the correct voltage and amperage for your device's charging requirements. This adapter provides 12V output.
 - Some devices may require the device to be turned off to charge.
- **Adapter Overheating:**
 - It is normal for adapters to feel warm during operation. However, if it becomes excessively hot to the touch or emits a burning smell, immediately unplug it from the wall and your device.
 - Ensure the adapter is not covered or placed in an area with poor ventilation.
 - Verify that the device connected is compatible and not drawing excessive power.

If these steps do not resolve the issue, contact customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	Kircuit
Model Compatibility	COOCOCO CF-2303R CF2303R (Shiatsu Neck & Back Massager)
Input Voltage	100-240 Volts (AC)
Output Voltage	12 Volts (DC)
Connector Type	Barrel Plug
Connectivity Technology	Powerline
Color	Black
Mounting Type	Wall Mount
Special Feature	100% Brand New, High Quality AC/DC Power Charger (non-OEM)

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Kircuit 12V AC/DC Adapter, please refer to the documentation provided with your purchase or contact the seller directly. Keep your proof of purchase for any warranty claims.

For general inquiries or assistance, you may also visit the Kircuit brand's official support channels or the retailer's

customer service.

© 2024 Kircuit. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CT34SDDL>

More documents and user manuals: <https://manuals.plus/>