



[Manuals.plus](#) /

› [LELO](#) /

› [LELO SIRI 3 Sound Activated Personal Vibrator User Manual](#)

LELO SIRI 3

LELO SIRI 3 Sound Activated Personal Vibrator User Manual

Model: SIRI 3 (Item Number: 12005)

INTRODUCTION

Thank you for choosing the LELO SIRI 3. This sound-activated personal vibrator is designed to provide a unique experience with its innovative SoundSense Technology. This manual provides essential information for the safe and effective use, care, and maintenance of your device. Please read it thoroughly before first use and retain it for future reference.

PACKAGE CONTENTS

Your LELO SIRI 3 package includes the following items:

- SIRI 3 Sound-Activated Personal Vibrator
- USB Charging Cable
- User Manual & Warranty Information
- Moisturizer Sachet (water-based lubricant)
- Satin Pouch for storage
- Warranty Registration Card

SIRI 3

sound-activated clitoral vibrator

 


WARRANTY CARD

verifies product authenticity

USER MANUAL

how to use guide

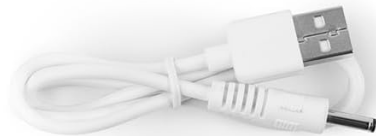

MOISTURIZER

SACHET

water-based lubricant
5 ml / 0.17 fl. oz.



CHARGING

CORD

USB cable

SATIN POUCH

for storage

Contents of the LELO SIRI 3 package, including the device, user manual, charging cable, lubricant sachet, satin pouch, and warranty card.

KEY FEATURES

- **SoundSense Technology:** Transforms music and ambient sounds into vibrations for a unique experience.
- **8 Pleasure Settings:** Offers a range of vibration modes from gentle murmurs to intense pulses.
- **Compact & Discreet Design:** Dimensions of 95 x 45 x 34 mm (3.74 x 1.8 x 1.3 inches) for easy handling and travel.
- **Body-Safe Silicone:** Made from extra-soft, flexible, and warm-to-touch silicone.
- **Fully Waterproof (IPX7):** Safe for use in the bath or shower and easy to clean.
- **USB Rechargeable:** Convenient and fast charging.



The LELO SIRI 3 device, showcasing its compact and ergonomic design.

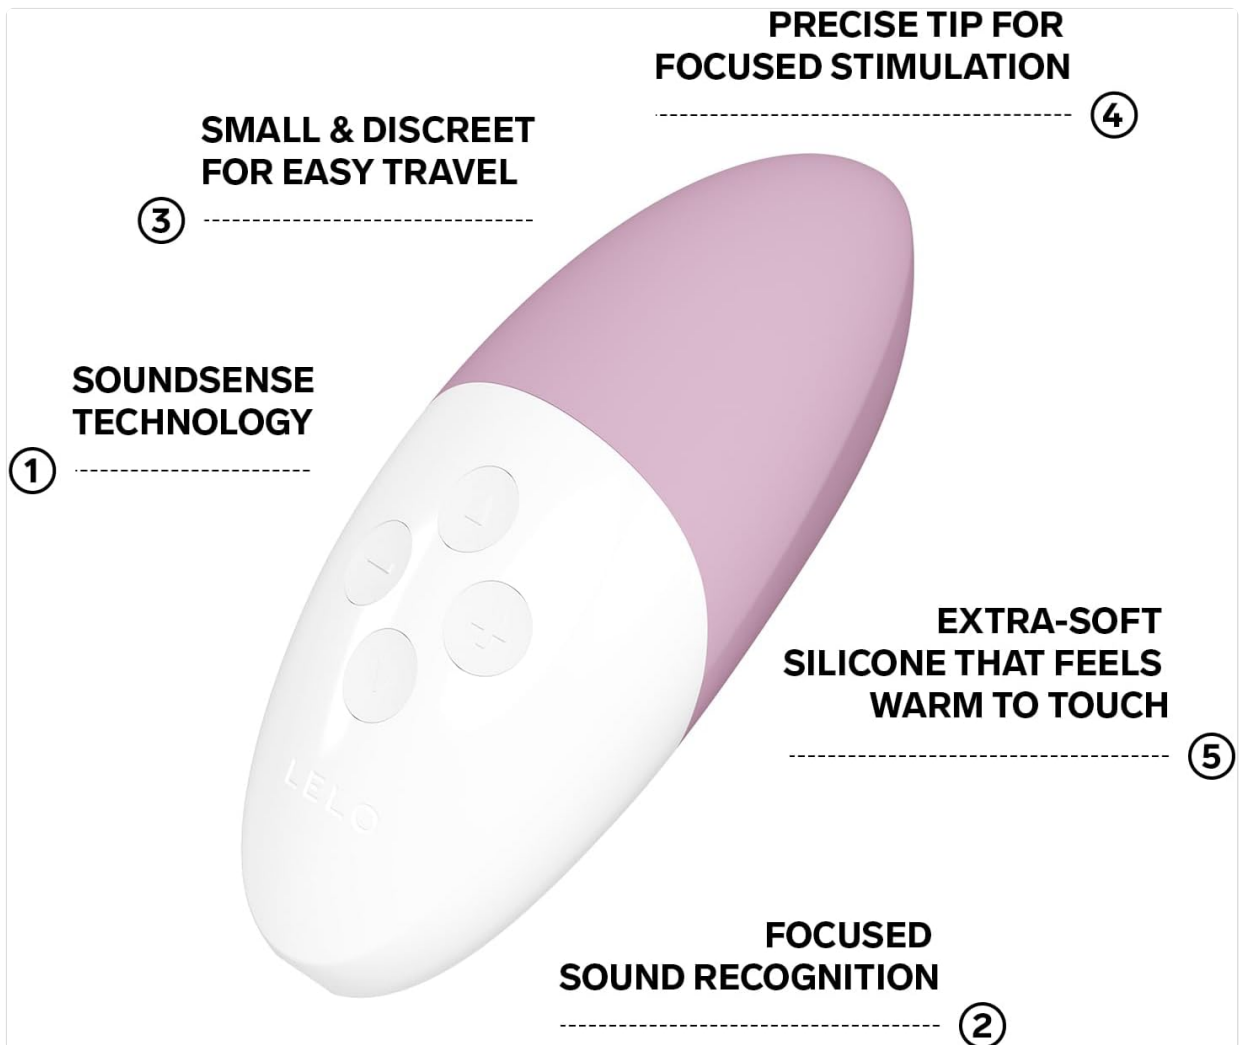 


Diagram illustrating the key features of the LELO SIRI 3.

SETUP

Initial Charging

Before first use, fully charge your LELO SIRI 3 for 2 hours. Connect the provided USB charging cable to the charging port on the device and plug the other end into a USB power source (e.g., computer, USB wall adapter). The indicator light will show charging status.



The LELO SIRI 3 connected to its USB charging cable.

First Use Preparation

Clean the device thoroughly before its first use. Apply a water-based lubricant for optimal comfort and experience.

OPERATING INSTRUCTIONS

The LELO SIRI 3 features intuitive controls for easy operation.

- **To Turn On:** Press and hold the + button.
- **To Switch Between 8 Settings:** Press the ↑↓ buttons.
- **To Switch to Music Mode:** Press and hold the ↑↓ buttons for 3 seconds.
- **To Adjust Intensity:** In all modes, use the + and - buttons to increase or decrease vibration intensity.
- **To Turn Off:** Press and hold the + and the - buttons simultaneously.

Features



SOUNDSENSE TECHNOLOGY

focused sound recognition provides sound-activated stimulation



SOUND-CONTROLLED SETTING

music vibrator that moves in sync with ambient sound



 
8 POWERFUL PLEASURE SETTINGS

from a teasing murmur to a satisfying pulse



USB RECHARGEABLE & FULLY WATERPROOF

enjoy unlimited climaxes anytime and anyplace, including the bath or the shower

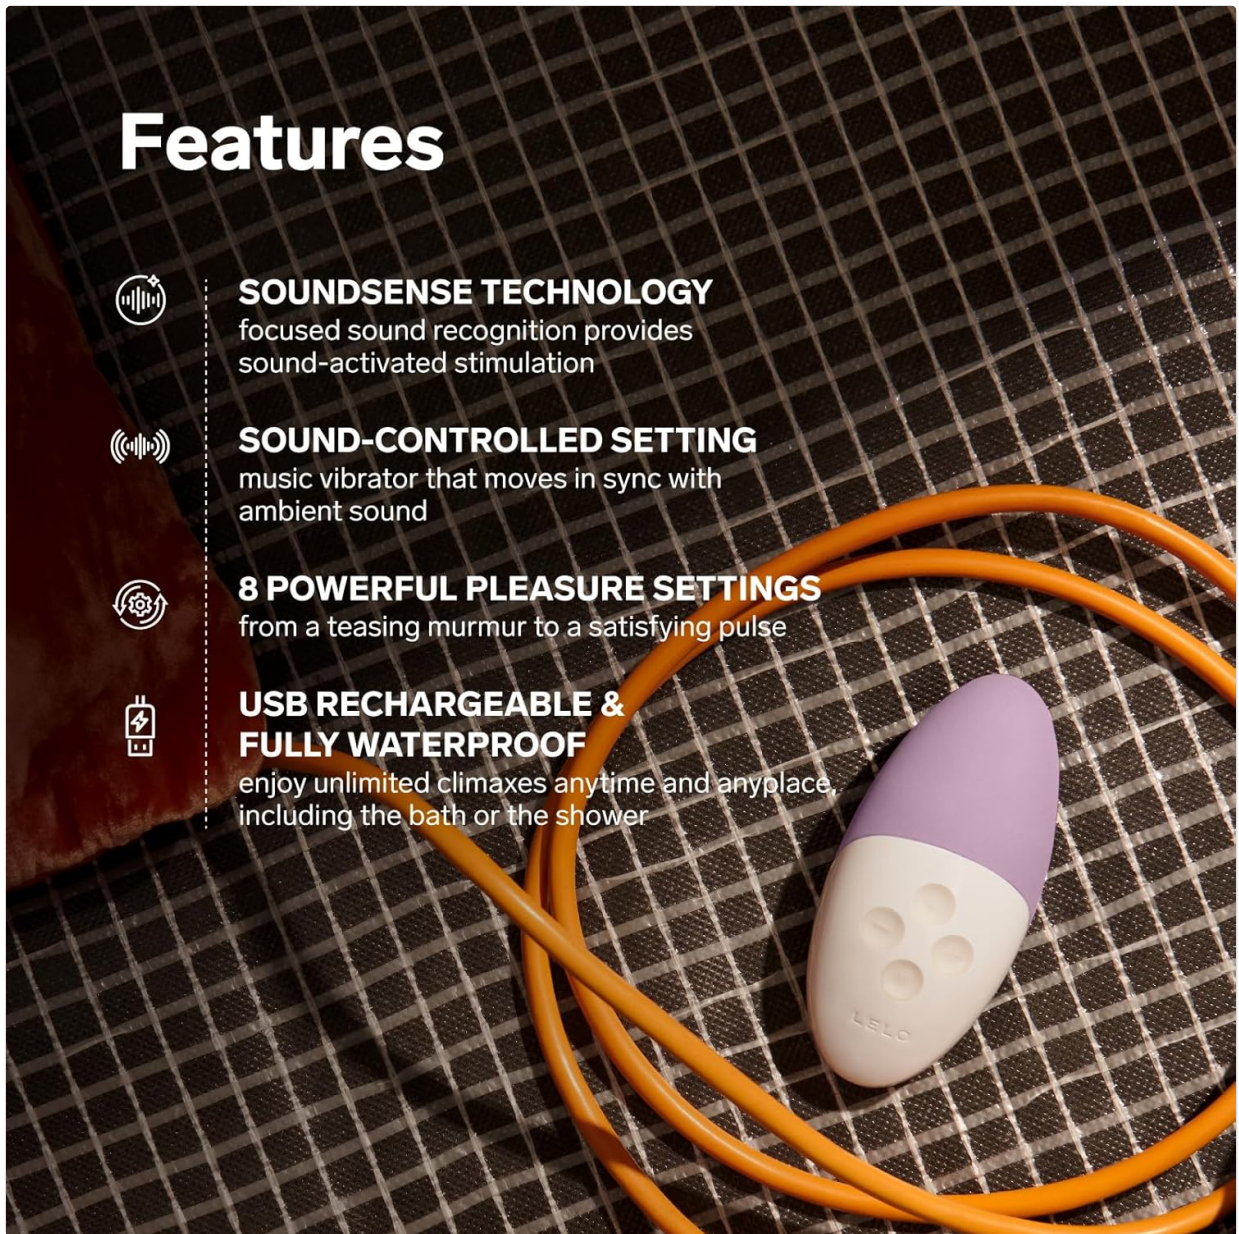

The control panel of the LELO SIRI 3.

Explore the LELOverse



Step-by-step visual guide for operating the LELO SIRI 3.

SoundSense Technology

In Music Mode, the SIRI 3 utilizes SoundSense Technology to respond to external sounds. This includes music, voices, or other ambient sounds, transforming them into unique vibration patterns. For best results, ensure the device is near the sound source.

MAINTENANCE

Cleaning

The LELO SIRI 3 is fully waterproof (IPX7 certified), making cleaning simple. Wash the device with warm water and a mild, antibacterial soap. Rinse thoroughly and pat dry with a lint-free cloth. Avoid using cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone material.

Storage

Store your LELO SIRI 3 in the provided satin pouch in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid storing it with other toys made of different materials to prevent potential damage or reactions.

TROUBLESHOOTING

If you encounter any issues with your LELO SIRI 3, please refer to the following common solutions:

- **Device Not Turning On:** Ensure the device is fully charged. Connect it to the USB charging cable and allow it to charge for at least 2 hours.
- **Buttons Unresponsive:** Press the buttons firmly and ensure your fingers are positioned correctly. If unresponsive, try fully charging the device.
- **Music Mode Not Working Effectively:** Ensure the device is close to the sound source and the volume is adequate. Some complex audio patterns may not translate as expected.
- **Reduced Battery Life:** Battery performance can decrease over time. Ensure you are charging the device for the recommended 2 hours. If the issue persists, contact LELO support.

If these steps do not resolve the issue, please contact LELO Customer Support for further assistance.

SPECIFICATIONS

Model Name	SIRI 3
Item Model Number	12005
Material	Body-safe silicone, ABS plastic
Dimensions	95 x 45 x 34 mm (3.74 x 1.77 x 1.34 inches)
Weight	68 g (2.4 ounces)
Battery	1 Lithium Ion battery (included)
Charging Time	2 hours
Use Time	Up to 2 hours
Standby Time	Up to 90 days
Water Resistance	IPX7 (fully waterproof)
Vibration Settings	8

WARRANTY AND SUPPORT

LELO products are manufactured to the highest quality standards. Your LELO SIRI 3 comes with a **1-year warranty** covering manufacturing defects from the date of purchase. Additionally, LELO offers a **10-year quality guarantee**, providing a 50% discount on a new device in case of a defect after the initial 1-year warranty period.

Please register your product using the included Warranty Registration Card to activate your warranty and receive important product updates.



LELO's commitment to quality, including warranty and guarantee details.

Customer Support

For further assistance, product inquiries, or warranty claims, please visit the official LELO support website or contact their customer service team:

- **LELO Official Website:** www.lelo.com
- **Support Contact:** Refer to the contact information provided on the LELO website or your warranty card.