

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [OKP Life](#) /
- › [OKP Life Robot Vacuum and Mop K5P Pro Instruction Manual](#)

OKP Life K5P Pro

OKP Life Robot Vacuum and Mop K5P Pro Instruction Manual

Model: K5P Pro | Brand: OKP Life

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your OKP Life Robot Vacuum and Mop K5P Pro. Please read it thoroughly before first use and retain it for future reference. The OKP Life K5P Pro is a 2-in-1 robot vacuum and mop designed for effective cleaning of hard floors and pet hair. It features 5000Pa suction, extended battery life, advanced navigation, versatile cleaning modes, and smart home compatibility.

PRODUCT OVERVIEW & COMPONENTS

Familiarize yourself with the main components of your K5P Pro robot vacuum.

- Robot Vacuum Unit
- Charging Base
- Power Adapter
- Mop Pad Holder (with attached mop pad)
- Side Brushes
- HEPA Filter (pre-installed in dustbin)
- Cleaning Tool
- Remote Control (requires 2 AAA batteries, included)



Figure 1: OKP Life K5P Pro Robot Vacuum and Mop. This image displays the main robot unit, a mop pad holder, and a smartphone showing the control app interface.

SETUP

1. Charging Base Placement

Place the charging base against a wall in an open area, ensuring there are no obstacles within 1 meter (3 feet) to either side and 2 meters (6 feet) in front. Plug the power adapter into the charging base and then into a wall outlet.

2. Initial Charging

Place the robot vacuum onto the charging base. Ensure the charging contacts on the robot align with those on the base. The indicator lights on the robot will illuminate to show charging status. Fully charge the robot before first use (approximately 3 hours).

Quiet Operation at Night

OKP Life, the quiet technology is 20% lower than other companies.



45dB

55dB

60dB

65dB

70dB

Figure 2: The robot vacuum automatically returns to its charging base when its battery is low or a cleaning cycle is complete. The charging base should be placed in an accessible area.

3. Attaching Side Brushes

Snap the side brushes onto the posts on the bottom of the robot until they click into place.

4. Mop Pad Holder Attachment

Attach the mop pad to the mop pad holder. The K5P Pro features an innovative mop holder design that allows for the use of disposable face towels as mop pads. Secure the chosen mop material to the holder. Slide the mop pad holder into the slot at the rear of the robot until it clicks.

Say Goodbye to Washing Mop. One Pcs Used 0 Cost Facial Washcloth 100% Free Your Hands



Figure 3: This image illustrates the process of attaching a mop pad to the robot vacuum. The mop pad is secured to the holder, which then slides into the back of the robot.

5. App Installation & Connection

Download the OKP Life app from your smartphone's app store. Follow the in-app instructions to connect your robot vacuum to your home Wi-Fi network. The app allows for remote control, scheduling, and customization of cleaning modes and suction levels.

OPERATING INSTRUCTIONS

1. Starting a Cleaning Cycle

- **Via App:** Open the OKP Life app, select your device, and choose a cleaning mode (Auto, Spot, Edge, Smart).
- **Via Remote Control:** Use the provided remote control to select a cleaning mode or start/pause cleaning.
- **Via Voice Control:** The K5P Pro is compatible with Alexa and Google Assistant. Use simple voice commands like "Alexa, ask K5P Robot to clean."
- **Manual Start:** Press the "Clean" button on the top of the robot to start an automatic cleaning cycle.

Your browser does not support the video tag.

Video 1: This video demonstrates how to start the robot vacuum cleaner using various methods, including the remote control, the mobile app, and direct button press on the unit.

2. Cleaning Modes

- **Auto Mode:** The robot intelligently navigates and cleans your entire home.
- **Spot Clean:** Focuses on a specific dirty area, cleaning in a spiral pattern.
- **Edge Clean:** Cleans along walls and furniture edges.
- **Smart Mode:** Utilizes advanced navigation to precisely plan cleaning routes and avoid obstacles.



Figure 4: The smartphone app interface showing various cleaning modes: Auto Mode, Spot Clean, Edge Clean, and Quick Clean. The robot is visible on a wooden floor in the background.

3. Obstacle Avoidance & Anti-Fall

The K5P Pro is equipped with advanced sensors to detect and avoid obstacles, preventing collisions with furniture. Anti-fall sensors prevent the robot from falling down stairs or off elevated surfaces.

Smarter Avoid Obstacles

The robot vacuum would not hit the furniture anymore, it will avoid while detect obstacle.



Figure 5: The robot vacuum demonstrates its ability to intelligently avoid obstacles, such as table legs, by detecting them and altering its path. This prevents collisions and ensures smooth operation.

4. Suction Power & Quiet Operation

The robot features 5000Pa suction power for effective cleaning. Its quiet operation (as low as 55dB) allows for cleaning without significant disturbance, even at night.



Figure 6: The robot vacuum operates quietly in a living room setting, indicated by a 55dB noise level, allowing for undisturbed activities like sleeping or working.

MAINTENANCE

1. Emptying the Dust Bin

Regularly empty the dust bin after each cleaning cycle. Press the release button on the robot to remove the dust bin, open its lid, and discard collected debris. Clean the HEPA filter as needed.

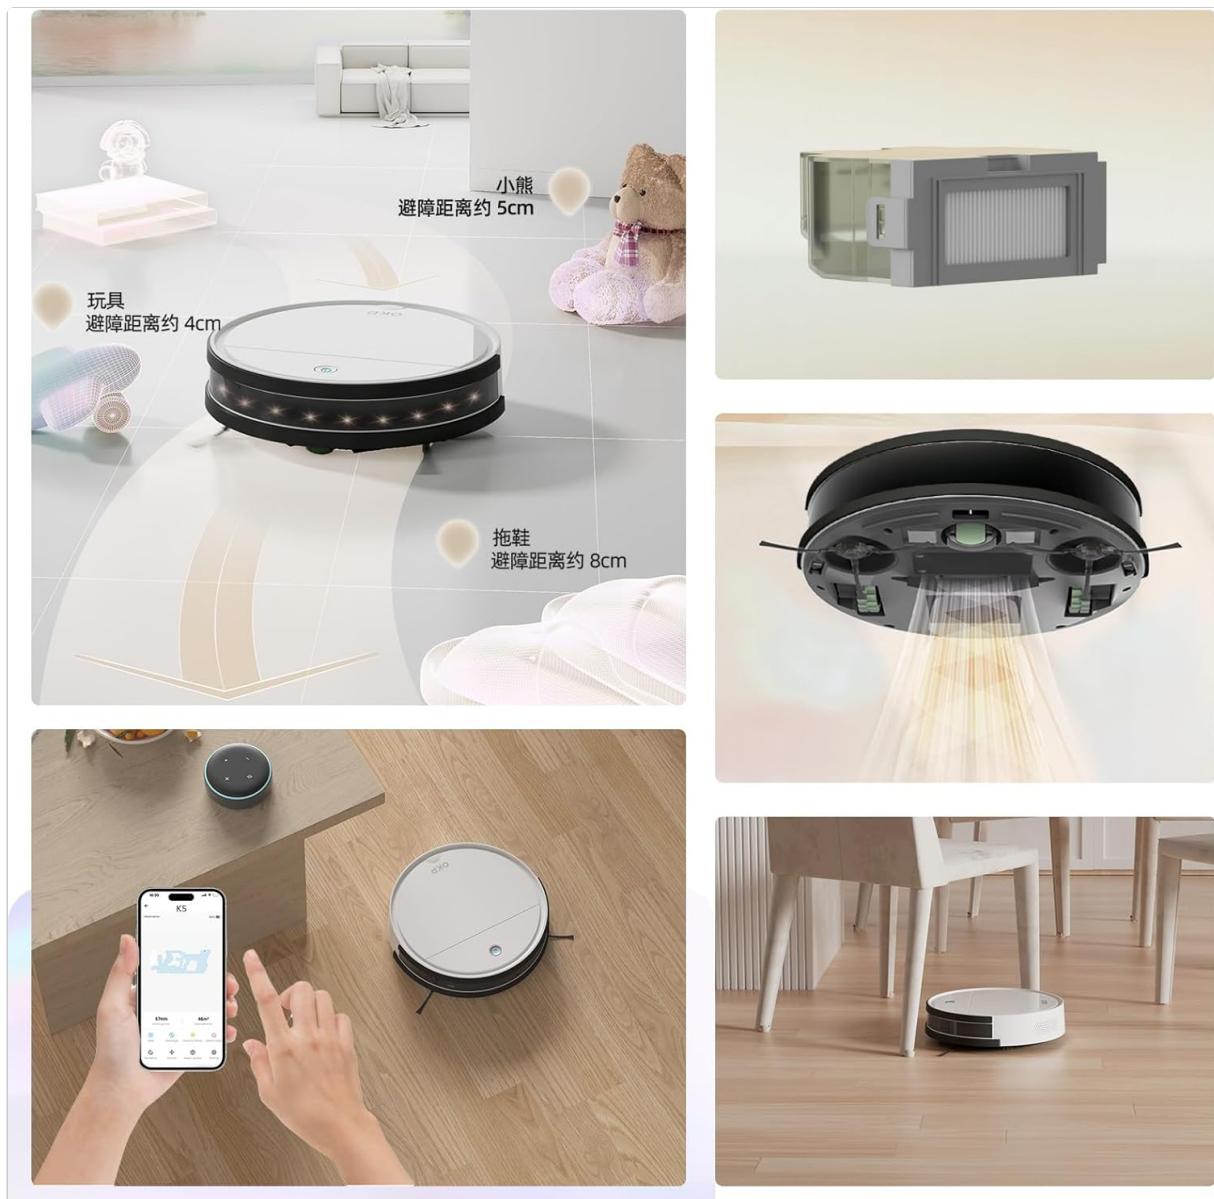


Figure 7: A hand demonstrates how to remove the dustbin from the robot vacuum and open it to dispose of collected debris. The HEPA filter is visible inside the dustbin.

2. Cleaning the Mop Pad Holder

After mopping, remove the mop pad holder. Dispose of the used disposable face towel or clean the reusable mop pad. Ensure the water tank is emptied and dried to prevent mildew.

3. Cleaning Side Brushes and Sensors

Periodically check and clean the side brushes for tangled hair or debris. Wipe the charging contacts and all sensors with a dry cloth to maintain optimal performance.

TROUBLESHOOTING

- **Robot not charging:** Ensure the charging base is plugged in and the robot's charging contacts are clean and properly aligned with the base.
- **Robot getting stuck frequently:** Clear obstacles like loose cables, rugs with long fringes, or small objects from the cleaning path.
- **Reduced suction power:** Empty the dust bin, clean or replace the HEPA filter, and check the main brush for obstructions.
- **App connectivity issues:** Ensure your Wi-Fi network is 2.4GHz, the robot is within Wi-Fi range, and

the app is updated to the latest version.

SPECIFICATIONS

Feature	Detail
Brand	OKP Life
Model Name	K5P Pro
Special Features	Anti-Fall, Edge Cleaning, Low Noise, Pet Hair Pick Up, Scheduling
Product Dimensions	11"L x 11"W x 3"H
Filter Type	HEPA Filter
Battery Life	3 Hours (150 minutes continuous cleaning)
Power Source	Battery Powered
Compatible Devices	Amazon Echo, Google Home
Item Weight	7.39 pounds
UPC	780627998392

WARRANTY & SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the contact details provided in the product packaging or visit the official OKP Life website. Keep your purchase receipt as proof of purchase.