

[Manuals.plus](#) /

> [GOLDEN HOUR](#) /

> GOLDEN HOUR Digital Sport Watch Instruction Manual

## GOLDEN HOUR GH-1317-White

# GOLDEN HOUR Digital Sport Watch

## INSTRUCTION MANUAL

### 1. INTRODUCTION

---

Thank you for choosing the GOLDEN HOUR Digital Sport Watch. This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your new watch. Designed for durability and functionality, this watch is an ideal companion for daily wear and various outdoor activities.

Key features include:

- **Shock-Resistant and Durable:** Constructed with high-quality materials for robust performance.
- **Multiple Functions:** Stopwatch, calendar, backlight, alarm, and more for enhanced convenience.
- **Easy to Read:** Clear digital display with large, legible numbers, even in low light.
- **Comfortable to Wear:** Soft and comfortable silicone strap designed for a secure fit.
- **Water Resistant:** Water resistance up to 50 meters, suitable for swimming and snorkeling (not for diving).





Image: Front view of the GOLDEN HOUR Digital Sport Watch in white with rose gold accents, displaying the time 10:36 and date.

## 2. SETUP AND INITIAL USE

---

### 2.1. Button Functions

Your watch features four buttons:

- **LIGHT (Top Left):** Activates the backlight for visibility in dark conditions.
- **MODE (Bottom Left):** Cycles through different modes: Time, Stopwatch, Alarm, and Date Setting.
- **ST/STP (Top Right):** Start/Stop button for the stopwatch; also used for adjusting settings.

- **RESET (Bottom Right)**: Resets the stopwatch; also used for confirming settings or moving to the next adjustment item.

## 2.2. Setting Time and Date

1. From the Time Display mode, press the **MODE** button three times to enter the Time Setting mode. The seconds will begin to flash.
2. Press the **RESET** button to cycle through the settings: Seconds > Hour > Minute > Month > Date > Day of the Week.
3. Use the **ST/STP** button to adjust the flashing value.
4. Once all settings are correct, press the **MODE** button to exit the Time Setting mode and return to the normal time display.

## 2.3. Adjusting the Strap

The silicone strap is designed for comfort and adjustability. To adjust, simply move the buckle to the desired hole on the strap to ensure a snug yet comfortable fit on your wrist. The watch fits wrist sizes from 5.47 inches (139mm) to 8.19 inches (208mm).



Image: Diagram illustrating the adjustable wrist size range of the watch strap, from 5.47 inches (139mm) to 8.19 inches (208mm).

## 3. OPERATING INSTRUCTIONS

---

### 3.1. Stopwatch Function

1. From the Time Display mode, press the **MODE** button once to enter Stopwatch mode. The display will show 00:00:00.
2. Press **ST/STP** to start the stopwatch.
3. Press **ST/STP** again to pause the stopwatch.
4. Press **RESET** to reset the stopwatch to 00:00:00.
5. Press **MODE** to return to the Time Display mode.

### 3.2. Alarm Function

1. From the Time Display mode, press the **MODE** button twice to enter Alarm mode.
2. Press **RESET** to select the hour or minute to set.
3. Use **ST/STP** to adjust the flashing value (hour or minute).
4. To activate/deactivate the alarm, press **ST/STP** while in Alarm mode (without any value flashing). An alarm icon will appear/disappear on the display.
5. Press **MODE** to return to the Time Display mode.

### 3.3. Backlight

Press the **LIGHT** button (top left) at any time to illuminate the display. The backlight will remain on for a few seconds, providing clear visibility in low-light conditions.



Image: A close-up view of the watch face with its green backlight activated, showing the digital time and date clearly in the dark.

### 3.4. Water Resistance

The GOLDEN HOUR Digital Sport Watch is water resistant up to 50 meters (5 ATM). This means it is suitable for daily use, hand washing, rain, and short periods of swimming or snorkeling. **It is not suitable for diving, hot water activities (like showering or saunas), or prolonged underwater activities. Do not press any buttons while the watch is submerged in water.**



Image: A person washing their hands with the GOLDEN HOUR watch on their wrist, illustrating its water resistance for everyday activities.

## 4. MAINTENANCE AND CARE

---

### 4.1. Cleaning

To keep your watch in good condition, wipe it regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by drying thoroughly. Avoid using harsh chemicals or abrasive cleaners, as these can damage the watch's finish or strap.

### 4.2. Battery Replacement

The watch is powered by a CR2025 battery. When the display becomes dim or the watch stops functioning, it may be time to replace the battery. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

# Fits a Wide Range of Wrist Sizes From 5.47"(139mm) to 8.19" (208mm)



Image: Rear view of the GOLDEN HOUR watch, showing the stainless steel case back engraved with "GOLDEN HOUR," "WATER RESISTANT 5ATM," and "BATTERY CODE CR2025."

## 4.3. Storage

When not in use, store your watch in a cool, dry place away from direct sunlight and extreme temperatures. Avoid exposing the watch to strong magnetic fields, as this can affect its accuracy.

## 5. TROUBLESHOOTING

---

### 5.1. Display is Blank or Dim

- **Cause:** Low battery.

- **Solution:** Replace the battery (CR2025). It is recommended to have this done by a professional.

## 5.2. Buttons are Unresponsive

- **Cause:** Watch may be in a locked state or internal issue.
- **Solution:** Try pressing all buttons firmly. If unresponsive, the battery might be completely drained. If the issue persists after battery replacement, contact customer support.

## 5.3. Time is Inaccurate

- **Cause:** Time not set correctly, or exposure to strong magnetic fields.
- **Solution:** Re-set the time following the instructions in Section 2.2. Keep the watch away from strong magnets.

## 5.4. Water Inside the Display

- **Cause:** Water resistance compromised due to improper use (e.g., pressing buttons underwater, exposure to hot water/steam) or damage.
- **Solution:** Immediately stop using the watch. Do not attempt to dry it yourself. Seek professional repair to prevent further damage.

## 6. SPECIFICATIONS

---

<b>Brand</b>	GOLDEN HOUR
<b>Model Number</b>	GH-1317-White
<b>Color</b>	White
<b>Special Features</b>	Water Resistant, Chronograph, Alarm, Backlight
<b>Water Resistance</b>	50 Meters (5 ATM)
<b>Movement Type</b>	Digital
<b>Strap Material</b>	Silicone
<b>Battery Type</b>	CR2025
<b>Country of Origin</b>	China



Image: The GOLDEN HOUR watch displayed next to a US half-dollar coin, illustrating its compact size. Dimensions are indicated as 1.5 inches in height and 0.63 inches in width.

## 7. WARRANTY AND SUPPORT

---

Your GOLDEN HOUR Digital Sport Watch is manufactured with high standards of quality and durability. For specific warranty information, please refer to the documentation provided at the time of purchase or contact your retailer.

If you encounter any issues not covered in this manual or require further assistance, please contact GOLDEN HOUR customer support through the seller's contact information provided with your purchase. Please have your model number (GH-1317-White) and purchase details ready when contacting support.

