

FOLLOWM MES-B2

MESWAO 2025 Tablet User Manual

Model: MES-B2

1. INTRODUCTION

This manual provides comprehensive instructions for the operation, maintenance, and troubleshooting of your MESWAO 2025 Tablet (Model: MES-B2). Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage.

The MESWAO 2025 Tablet is a high-performance 14-inch device running on Android 14, designed for a wide range of applications from entertainment to productivity. It features a powerful Helio G99 Octa-Core CPU, a vibrant 1920x1200 WUXGA touch screen, ample storage, and a long-lasting 12000mAh battery.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x MESWAO 14-inch Android Tablet
- 1 x Power Adapter
- 1 x Type-C Cable
- 1 x User Manual (this document)

If any items are missing or damaged, please contact customer support immediately.

3. DEVICE OVERVIEW

Familiarize yourself with the physical components of your MESWAO Tablet.



Figure 3.1: Front view of the MESWAO 14-inch Tablet, highlighting its large display and expandable storage capabilities.

Experience the Power and Precision of Android 14



Figure 3.2: The MESWAO Tablet in a desktop setup, demonstrating its Android 14 operating system and compatibility with external accessories like a keyboard.

3.1. Physical Buttons and Ports

- **Power Button:** Located on the side, used to turn the tablet on/off or put it to sleep/wake it up.
- **Volume Buttons:** Adjust audio volume.
- **USB Type-C Port:** For charging and data transfer.
- **MicroSD Card Slot:** For expanding storage up to 1TB.
- **Headphone Jack:** 3.5mm audio output.
- **Front Camera:** 5MP camera for video calls and selfies.
- **Rear Camera:** 32MP camera for high-resolution photos and videos.

4. SETUP

4.1. Initial Charge

Before first use, fully charge the tablet. Connect the provided Type-C cable to the tablet's charging port and the power adapter to a wall outlet. The charging indicator will show the charging status.

Tilt Sensitivity

Adjust comfortable angle with a tilt of your nib

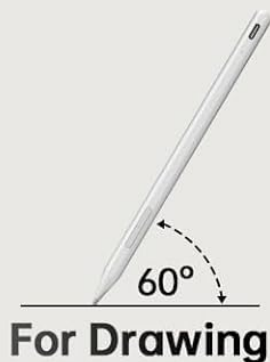


Figure 4.1: Visual representation of the tablet's long-lasting 12000mAh battery and Type-C charging port.

4.2. Powering On/Off

- **To Power On:** Press and hold the Power button until the MESWAO logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears, then select "Power

off".

- **To Restart:** Press and hold the Power button until the power options menu appears, then select "Restart".

4.3. Initial Setup Wizard

Upon first power-on, the Android 14 setup wizard will guide you through:

- Language selection
- Wi-Fi network connection
- Google account sign-in or creation
- Date and time settings
- Security settings (PIN, pattern, password)

4.4. Inserting a MicroSD Card

To expand storage, locate the MicroSD card slot on the side of the tablet. Gently insert a MicroSD card (up to 1TB, sold separately) into the slot until it clicks into place. Ensure the card is oriented correctly.



Figure 4.2: Illustration of the tablet's 6GB RAM, 128GB ROM, and 1TB expandable memory, suitable for storing various media and

5. OPERATING THE TABLET

5.1. Navigation

- **Touch Gestures:** Tap, swipe, pinch-to-zoom are standard Android gestures.
- **Home Screen:** The central hub for your apps and widgets.
- **App Drawer:** Swipe up from the home screen to access all installed applications.
- **Notification Panel:** Swipe down from the top of the screen to view notifications and quick settings.

5.2. Connecting to Wi-Fi

1. Go to *Settings > Network & internet > Internet*.
2. Turn on Wi-Fi.
3. Select your desired Wi-Fi network from the list.
4. Enter the password if prompted and tap *Connect*.

5.3. Bluetooth Connectivity

The tablet supports Bluetooth 5.0 for connecting wireless accessories such as headphones, keyboards, and mice.

1. Go to *Settings > Connected devices > Connection preferences > Bluetooth*.
2. Turn on Bluetooth.
3. Ensure your Bluetooth device is in pairing mode.
4. Select the device from the "Available devices" list to pair.



Figure 5.1: The tablet's connectivity features, including Bluetooth 5.0 and dual-band Wi-Fi, enabling seamless connection to various accessories.

5.4. Camera Usage

The tablet is equipped with a 5MP front camera and a 32MP rear camera.

1. Open the *Camera* application.
2. Tap the camera switch icon to toggle between front and rear cameras.
3. Tap the shutter button to take a photo or start/stop video recording.

12000 mAh Long-lasting Battery


Dawn-to-Dusk Productivity

8^H
Video

12^H
Music

10^H
Browsing

720^H
Standby

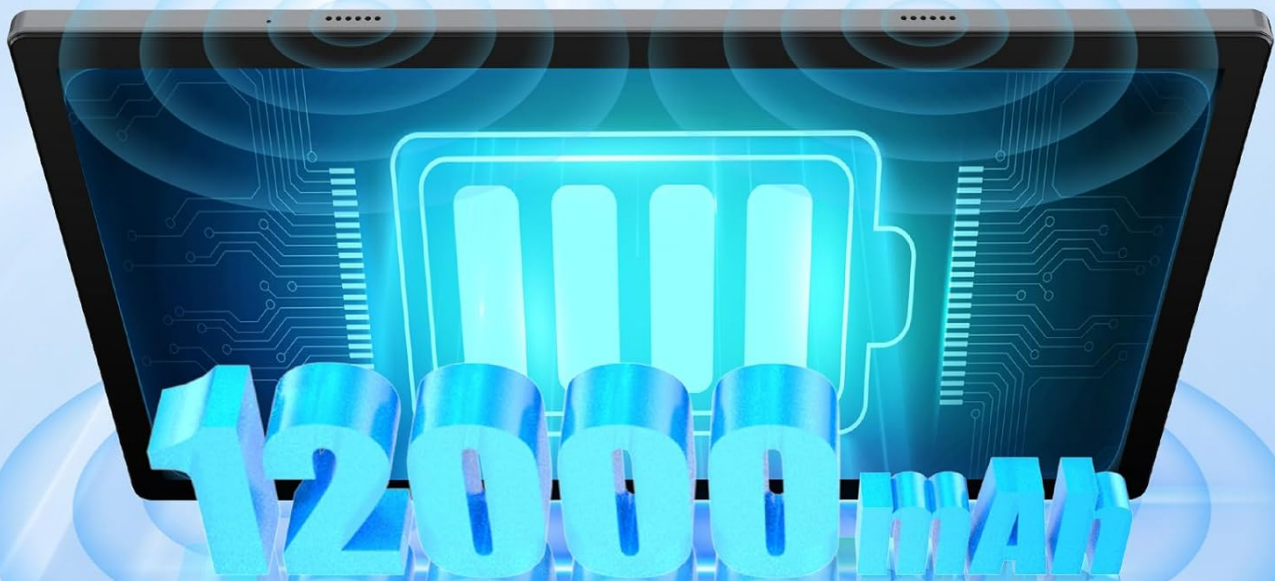

 **Type-C**
Connection

 **5V/3A**
Support 18W Fast Charging

 **4 Stereo**
Speakers

Figure 5.2: The tablet's camera system, featuring a 32MP rear camera for detailed photos and a 5MP front camera for video calls.

5.5. Stylus Compatibility (Stylus Sold Separately)

The MESWAO 14-inch tablet is compatible with an active stylus, offering 4096 levels of pressure sensitivity for precise input. This is ideal for note-taking, drawing, and professional work.

Store All Your Favorite

6GB RAM with 128GB ROM +1TB Expand Memory



Figure 5.3: The tablet's support for an active stylus, illustrating its tilt sensitivity for accurate note-taking and artistic drawing.

6. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive cleaners or solvents.
- **Battery Care:** Avoid extreme temperatures. Do not fully discharge the battery regularly.
- **Software Updates:** Keep your Android 14 system updated for optimal performance and security. Go to *Settings > System > System update*.
- **Storage Management:** Regularly clear unnecessary files and apps to maintain performance.
- **Protection:** Consider a screen protector and a protective case to prevent physical damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Tablet does not turn on.	Low battery; system crash.	Charge the tablet for at least 30 minutes. Press and hold the Power button for 10-15 seconds to force restart.
Wi-Fi connection issues.	Incorrect password; router issue; out of range.	Verify password. Restart router. Move closer to the Wi-Fi source.
Apps are slow or crashing.	Too many apps running; low storage; outdated app.	Close background apps. Clear app cache. Update apps from Google Play Store. Free up storage.
Battery drains quickly.	High screen brightness; background apps; excessive usage.	Reduce screen brightness. Close unused apps. Limit background data usage.

8. SPECIFICATIONS

Feature	Detail
Model Name	MES-B2
Operating System	Android 14
Display Size	14 Inches
Screen Resolution	1920 x 1200 WUXGA IPS
Processor	Helio G99 Octa-Core (up to 2.2GHz)
RAM	6 GB DDR3 SDRAM
Internal Storage	128 GB
Expandable Storage	Up to 1 TB via MicroSD card (sold separately)
Rear Camera	32 MP
Front Camera	5 MP
Battery Capacity	12000 mAh
Battery Life (Average)	Up to 8 hours video playback
Connectivity	Wi-Fi 5 (802.11ac), Bluetooth 5.0
Ports	USB Type-C, 3.5mm Headphone Jack, MicroSD Card Slot
Dimensions (LxWxH)	14.56 x 9.8 x 2.12 inches
Item Weight	4 pounds

Feature	Detail
Color	Space Gray




9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included in your product packaging or visit the official FOLLOWM/MESWAO website. Keep your purchase receipt for warranty claims. For common questions and troubleshooting, you may also refer to the [product page on Amazon](#).



© 2025 FOLLOWM. All rights reserved.

Related Documents - MES-B2

	<p>MESWAO MES-B3 User Manual</p> <p>User manual for the MESWAO MES-B3 tablet, covering introduction, specifications, getting started, user interface, basic operations, apps and features, connectivity, settings, safety, warranty, and disclaimer.</p>
	<p>Masterbuilt Digital Electric Smoker Manual and Safety Guide</p> <p>Comprehensive safety instructions and operating guidelines for Masterbuilt Digital Electric Smokers, covering models MES 130B, 130C, 130S, 135B, 135S, 140B, 140G, and 140S.</p>
	<p>Masterbuilt MES 130B/130C/130S/135B/135S/140B/140G/140S Digital Electric Smoker Manual</p> <p>This manual provides essential safety warnings, operating instructions, and maintenance guidelines for the Masterbuilt MES 130B, 130C, 130S, 135B, 135S, 140B, 140G, and 140S Digital Electric Smokers. Learn how to safely assemble, use, and care for your smoker to ensure optimal performance and longevity.</p>

