

FOLLOWM MES-B3

MESWAO 15.6 Inch Android 14 Tablet User Manual

Model: MES-B3

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your MESWAO 15.6 Inch Android 14 Tablet (Model: MES-B3). Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience.



Image: Front and back view of the MESWAO 15.6 Inch Android 14 Tablet, highlighting its large display and rear camera.

2. WHAT'S IN THE Box

Verify that all items are present in the package:

- 1 x MESWAO 15.6 inch Android Tablet
- 1 x Power Adapter
- 1 x Type-C Cable
- 1 x User Manual (this document)

3. SETUP GUIDE

3.1 Initial Charging

Before first use, fully charge the tablet. Connect the provided Type-C cable to the tablet's Type-C port and the power adapter. Plug the adapter into a wall outlet. The charging indicator will show the charging status.

3.2 Power On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the screen lights up.
- **To Power Off:** Press and hold the Power button until a power-off menu appears on the screen. Select 'Power off' to shut down the device.
- **To Restart:** From the power-off menu, select 'Restart'.

3.3 Initial Setup Wizard

Upon first power-on, the Android 14 setup wizard will guide you through essential configurations, including:

- Language selection
- Wi-Fi network connection
- Google account sign-in or creation
- Date and time settings
- Security settings (PIN, pattern, password)

4. OPERATING INSTRUCTIONS

4.1 Display and Visuals

The MESWAO tablet features a 15.6-inch Ultra HD IPS display with a resolution of 1920 x 1080 pixels, providing clear and vibrant visuals for various applications.

Experience Supreme Visual Comfort

Ultra-Fast and Fluid Display



Full HD 1920x1080



Bigger Screen



IPS



Eye Protection

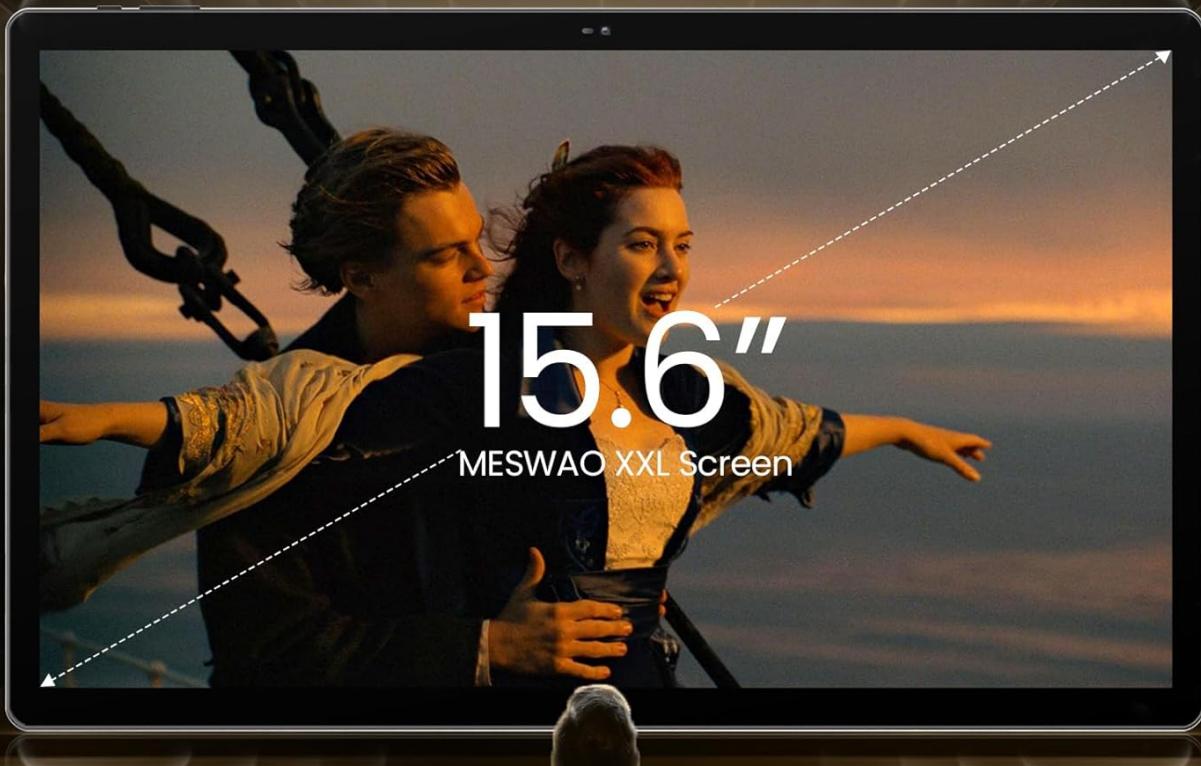


Image: Visual representation of the 15.6-inch Full HD IPS display with eye protection features.

4.2 Performance and Storage

Equipped with an MTK Helio G99 Octa-Core processor, 6GB RAM, and 128GB internal storage, the tablet ensures smooth performance. Storage is expandable up to 1TB via a TF card (sold separately, FAT32 format).

Store All Your Favorite

6GB RAM with 128GB ROM +1TB Expand Memory



Image: Diagram illustrating the 6GB RAM, 128GB ROM, and 1TB expandable memory capacity.

Super Large Capacity

Super Powerful and Efficient



Helio G99

CPU



6GB+128GB

RAM ROM



Image: Internal view highlighting the Helio G99 Octa-Core CPU, 6GB RAM, and 128GB ROM components.

4.3 Android 14 Operating System

The tablet runs on Android 14, offering enhanced security, privacy controls, and a user-friendly interface for efficient multitasking and app management.

Experience the Power and Precision of Android 14



Image: Screenshot of the tablet's home screen displaying various applications and the Android 14 interface.

4.4 Camera Usage

The tablet includes a 5MP front camera for video calls and a 32MP rear camera with flash for capturing photos and videos.

Seize Every Precious Life Memory

5MP Front camera + **32MP** Rear camera



Image: Depiction of the tablet's 5MP front camera and 32MP rear camera, with example photos taken by the cameras.

4.5 Connectivity

The tablet supports Wi-Fi 5 (802.11ac) for internet access and Bluetooth 5.0 for connecting wireless accessories.



Image: Visual representation of the tablet's Bluetooth 5.0 and Wi-Fi 5G capabilities, showing seamless streaming and browsing.

4.6 Battery Life and Charging

The 12000mAh battery provides extended usage times. Battery performance varies based on usage patterns. Use the provided power adapter and Type-C cable for optimal charging.

12000 mAh Long-lasting Battery

Dawn-to-Dusk Productivity

10^H

Video

12^H

Music

14^H

Browsing

720^H

Standby



Image: Infographic detailing the 12000mAh battery's estimated usage times for video, music, browsing, and standby.

4.7 Stylus Support

The tablet supports an active stylus for precise writing and drawing. The stylus is sold separately.

Tilt Sensitivity

Adjust comfortable angle with a tilt of your nib

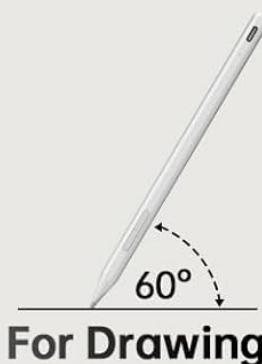


Image: Demonstration of stylus tilt sensitivity for note-taking at 90 degrees and drawing at 60 degrees.

4.8 Desktop Mode

The tablet offers a desktop mode for enhanced productivity, allowing for a more PC-like experience when connected to external accessories like a keyboard.



Image: A user interacting with the tablet in desktop mode, connected to an external keyboard.

4.9 Buttons & Connectors

Familiarize yourself with the physical layout of the tablet:

- Power Button:** Located on the top edge (when held in landscape), used for power on/off and screen lock/unlock.
- Volume Buttons:** Adjacent to the power button, used to adjust audio volume.
- Type-C Port:** Located on the side, used for charging and data transfer.
- TF Card Slot:** Located near the Type-C port, for expandable storage.
- Stereo Speakers:** Positioned on the sides for audio output.
- Front Camera:** Located on the top bezel (when held in landscape).
- Rear Camera with Flash:** Located on the back of the tablet.

5. MAINTENANCE

5.1 Cleaning

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals, abrasive cleaners, or aerosol sprays directly on the device.

5.2 Storage

Store the tablet in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If storing for an extended period, ensure the battery is charged to approximately 50% to prolong its lifespan.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your tablet.

Problem	Possible Cause	Solution
Tablet does not power on.	Low battery; software crash.	Charge the tablet for at least 30 minutes. Perform a forced restart by holding the power button for 10-15 seconds.

Problem	Possible Cause	Solution
Wi-Fi connection issues.	Incorrect password; router issue; signal interference.	Verify Wi-Fi password. Restart your router. Move closer to the Wi-Fi source. Forget and reconnect to the network.
Apps are slow or crashing.	Too many apps running; insufficient storage; outdated app.	Close background apps. Clear app cache. Free up storage space. Update apps from Google Play Store. Restart the tablet.
Screen is unresponsive.	Temporary software glitch.	Perform a forced restart. If the issue persists, consider a factory reset (backup data first).

7. SPECIFICATIONS

Feature	Detail
Display Size	15.6 Inches
Screen Resolution	1920 x 1080 pixels (FHD IPS)
Processor	MTK Helio G99 Octa-Core (2.2 GHz)
RAM	6GB
Internal Storage	128GB
Expandable Storage	Up to 1TB (TF card, FAT32 format)
Operating System	Android 14
Rear Camera	32MP with Flash
Front Camera	5MP
Wireless Connectivity	Wi-Fi 5 (802.11ac), Bluetooth 5.0
Battery Capacity	12000mAh Lithium Ion
Item Weight	4.4 pounds (approx. 2 kg)
Product Dimensions	14.5 x 8.8 x 0.4 inches (approx. 36.8 x 22.4 x 1.0 cm)

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official FOLLOWM website. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, please contact customer support through the channels provided on the official product page or your purchase platform.

© 2025 FOLLOWM. All rights reserved.