

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [pofoto](#) /

> [pofoto PD07 7.5-inch Portable DVD Player Instruction Manual](#)

pofoto PD07

pofoto PD07 7.5-inch Portable DVD Player Instruction Manual

Model: PD07 | Brand: pofoto

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your pofoto PD07 7.5-inch Portable DVD Player. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.



The pofoto PD07 Portable DVD Player features a 7.5-inch swivel screen for an enhanced viewing experience.

PACKAGE CONTENT

Verify that all items are included in your package:

- 7.5" Portable DVD Player
- Remote Controller
- Car Charger
- AC Adapter
- 3-in-1 AV Cable

Versatile Connectivity Options

- ① **USB**
- ② **SD CARD**
- ③ **3.5mm Audio port**
- ④ **AV OUT**
- ⑤ **AV IN**
- ⑥ **ON/OFF**
- ⑦ **DC IN 12V**



All accessories included with your pofoto PD07 Portable DVD Player.

SETUP

1. Initial Charging

Before first use, fully charge the DVD player. The built-in 2500mAh battery provides approximately 4-6 hours of playback on a full charge. Use the provided AC adapter or car charger.



Enhanced Movie Experience

Enjoy your favorite movies on a bigger screen



Sync to Similar Player



Sync to TV



Sync to Projector

Connect the AC adapter to the DC IN 12V port for charging.

2. Powering On/Off

Locate the slide power switch on the side of the device. Slide it to the 'ON' position to power on the player. Slide to 'OFF' to power off.

3. Inserting a DVD

1. Open the disc cover by gently pressing the 'CLOSE' button.
2. Place the DVD disc onto the spindle with the label side facing up.
3. Gently press the disc down until it clicks into place.
4. Close the disc cover.

Guaranteed Service

-  12-Hour Quick Response
-  24 Months Free Warranty
-  30 Days Money Back



The player supports CD, DVD, CD-R/RW, DVD±R/±RW, VCD/SVCD discs (Blu-ray and MP4 discs are not supported).

4. Using USB/SD Card

Insert a USB drive (up to 32GB) into the USB port or an SD card (up to 32GB) into the SD card slot. The player supports VOB, AVI, MPEG, MP3, WMA, JPEG formats.



USB and SD card slots for playing various media files.

5. Connecting to External Displays (TV/Projector)

Use the provided 3-in-1 AV cable to connect the DVD player to a TV or projector for a larger viewing experience. Connect the AV OUT port on the DVD player to the corresponding AV IN ports on your external display.

This video demonstrates connecting the pofoto PD07 Portable DVD Player to an external display for a larger screen experience.

OPERATING INSTRUCTIONS

1. Swivel Screen Functionality

The 7.5-inch screen can rotate 270° and flip 180°, allowing for multiple viewing angles. This feature is ideal for various setups, including mounting on car seat headrests or using it as a tablet-style display.

Support Region Free & Multiple DVD Formats

Disc Formats:

CD/ DVD, CD -R/ RW, DVD \pm R/ \pm RW, VCD/ SVCD
(Not support Blu-Ray and pirated discs)

USB & SD Card (Max 32GB):

Video: AVI/ VOB/ MPG1,2,4/ FLV

Audio: MP3/ WMA/ OGG/ ACC

Image: JPG



Demonstration of the screen's swivel and fold capabilities.

2. Basic Playback Controls

Use the control buttons on the player or the remote controller for playback functions:

- **PLAY/PAUSE:** Start or pause playback.
- **STOP:** Stop playback.
- **NEXT/PREV:** Skip to the next or previous track/chapter.
- **FWD/REV:** Fast forward or rewind.
- **VOL+/VOL-:** Adjust volume.
- **MODE:** Switch between DVD, USB, SD, and AV IN modes.
- **SETUP/MENU:** Access system settings or disc menu.

Last Memory Function

The movie resumes from where you last stopped



The included remote control for convenient operation.

3. Last Memory Function

The player features a 'last memory' function, which automatically resumes playback from where you last stopped, even after powering off the device.



The player remembers your last playback position for seamless viewing.

4. Volume Control

The pofoto PD07 is equipped with dual speakers providing high volume and stereo sound. Adjust the volume using the VOL+ and VOL- buttons on the player or remote. For private listening, connect headphones to the 3.5mm audio port.

MAINTENANCE

To ensure the longevity and optimal performance of your pofoto PD07 Portable DVD Player, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the screen and exterior of the player. Avoid using liquid cleaners or abrasive materials.
- **Disc Care:** Handle discs by their edges to prevent fingerprints and scratches. Store discs in their cases when not in use.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** For extended storage, ensure the battery is partially charged (around 50%) to maintain battery health.

TROUBLESHOOTING

If you encounter any issues with your pofoto PD07 Portable DVD Player, refer to the following common solutions:

Problem	Possible Cause	Solution
Player does not power on	Low battery or power switch is off.	Charge the player using the AC adapter or car charger. Ensure the power switch is in the 'ON' position.

Problem	Possible Cause	Solution
No disc detected	Disc is dirty, scratched, or inserted incorrectly. Unsupported disc format.	Clean the disc with a soft cloth. Reinsert the disc correctly. Ensure the disc is a supported format (not Blu-ray or MP4).
No sound	Volume is too low or muted. External speakers/headphones not connected properly.	Increase the volume. Check headphone/speaker connections.
No picture on external display	AV cable not connected correctly. Incorrect input selected on TV/projector.	Verify AV cable connections. Select the correct AV input source on your TV/projector.
USB/SD card not reading	Unsupported file format or card capacity. Card not inserted correctly.	Ensure files are in supported formats (VOB, AVI, MPEG, MP3, WMA, JPEG). Check card capacity (max 32GB). Reinsert the card/USB drive.

SPECIFICATIONS

Feature	Detail
Product Dimensions	8.3 x 6.1 x 1.7 inches
Item Weight	2.4 pounds
Item Model Number	PD07
Batteries	1 Lithium Polymer battery required (included)
Media Type	CD, DVD, CD-R/RW, DVD±R/±RW, VCD/SVCD (Not support Blu-Ray); AVI, VOB, MP3, WMA, OGG, ACC, JPG
Screen Size	7.5 Inches
Display Type	LCD

WARRANTY & SUPPORT

Your pofoto PD07 Portable DVD Player comes with a 24-month after-sales service. For any questions or issues, please contact customer support. We aim to respond within 24 hours.

For fast assistance, please reach out to us via the contact information provided with your purchase or on the official pofoto website.