

**Brita 1052251**

# BRITA Sports Water Filter Bottle Model Active User Manual

Model: 1052251

## INTRODUCTION

---

The BRITA Sports Water Filter Bottle Model Active is designed for on-the-go hydration, providing great-tasting filtered water wherever you are. This squeezable, BPA-free bottle features an integrated MicroDisc filter that reduces chlorine, microparticles, impurities, hormones, and pesticides, ensuring clean and refreshing water. This manual provides essential information for the proper setup, operation, and maintenance of your BRITA water filter bottle.



Image: The BRITA Sports Water Filter Bottle Model Active in dark green, shown with its cap, body, and a detached base cup. Two MicroDisc filters are displayed next to the bottle, highlighting the product's filtration capability.

## SETUP

---

### Unpacking

Carefully remove all components from the packaging. Ensure the following items are present:

- 1x BRITA Water Filter Bottle Model Active (Dark Green)
- 2x BRITA MicroDisc Water Filters

## Preparing the MicroDisc Filter

1. Unwrap one BRITA MicroDisc filter from its protective packaging.
2. Rinse the MicroDisc under running water for approximately 30 seconds to remove any loose carbon particles.

## Assembling the Bottle

1. Unscrew the cap from the bottle.
2. Locate the filter housing inside the cap.
3. Insert the prepared MicroDisc filter into the filter housing, ensuring it sits securely and flat.
4. Screw the cap back onto the bottle until it is firmly closed.

## OPERATING INSTRUCTIONS

---

### Filling the Bottle

To fill the bottle, unscrew the cap and fill the bottle with tap water. Do not overfill. Ensure the water level is below the filter housing when the cap is screwed back on.

### Drinking from the Bottle

The BRITA Active bottle is designed for convenient drinking. Simply squeeze the bottle gently to dispense filtered water through the mouthpiece. The integrated MicroDisc filters the water as you drink.

### Filtration Process

The BRITA MicroDisc technology effectively reduces chlorine, microparticles, impurities, hormones, and pesticides from tap water, improving taste and odor. The filtration occurs instantly as water passes through the MicroDisc when you squeeze the bottle.

## MAINTENANCE

---

### Cleaning the Bottle

For optimal hygiene and performance, regular cleaning is recommended.

- The bottle (excluding the MicroDisc filter) is dishwasher-safe up to 55°C.
- Alternatively, wash all parts (except the MicroDisc) by hand with warm soapy water, then rinse thoroughly.
- Do not wash the MicroDisc filter with soap or in the dishwasher. Simply rinse it under running water if needed.

### Replacing the MicroDisc Filter

For optimal filtration performance, replace the MicroDisc filter every 4 weeks or after filtering approximately 60 liters of water, whichever comes first.

1. Unscrew the cap from the bottle.
2. Remove the used MicroDisc filter from its housing. Dispose of the used filter responsibly.
3. Insert a new, prepared MicroDisc filter (refer to "Preparing the MicroDisc Filter" in the Setup section).
4. Screw the cap back onto the bottle.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Water tastes unusual or still has chlorine taste.	Filter needs replacement or was not properly rinsed.	Replace the MicroDisc filter. Ensure new filter is rinsed thoroughly before first use.
Bottle leaks.	Cap not screwed on tightly, or seal is damaged/misplaced.	Ensure cap is securely tightened. Check silicone seals for proper placement and damage.
Difficulty squeezing water out.	Filter might be clogged or bottle is too full.	Replace the MicroDisc filter. Do not overfill the bottle.

## SPECIFICATIONS

Feature	Detail
Brand	Brita
Model Name	Water Filter Bottle Active Darkgreen
Model Number	1052251
Capacity	0.6 Liters (approx. 20.3 Ounces)
Color	Dark Green
Material	Plastic (BPA-free polypropylene)
Product Dimensions	2.99"W x 2.99"H
Item Weight	0.14 Kilograms (approx. 4.9 ounces)
Special Features	Squeezable, Silicone strap, Integrated MicroDisc filter, BPA free, Durable
Care Instructions	Dishwasher Safe (bottle only, up to 55°C)

## WARRANTY & SUPPORT

BRITA products are manufactured to high-quality standards. For specific warranty information regarding your BRITA Sports Water Filter Bottle Model Active, please refer to the official BRITA website or the warranty card included with your purchase. Generally, BRITA offers a 10-year EU spare part availability duration for their products.

For further assistance, troubleshooting, or to purchase replacement filters, please visit the official BRITA support website or contact their customer service directly. Contact details can typically be found on the BRITA website or product packaging.

You can find more information and support at the [Brita Store on Amazon](#).

