

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hape](#) /

› [Hape Dinosaur Railway Adventure Set Instruction Manual E3795](#)

Hape E3795

Hape Dinosaur Railway Adventure Set Instruction Manual

Model: E3795

1. INTRODUCTION

Welcome to your Hape Dinosaur Railway Adventure Set. This manual provides essential information for the assembly, operation, and care of your new toy. Please read these instructions carefully before use to ensure safe and enjoyable play.

2. SAFETY INFORMATION

Recommended Age: This product is suitable for children aged 18 months and up.

Warning: Adult supervision is recommended during play, especially during initial assembly. Ensure all parts are securely connected before use.

3. PACKAGE CONTENTS

Your Hape Dinosaur Railway Adventure Set includes a variety of components designed for an immersive play experience. Please verify that all items are present:

- 23 Beech Wood Tracks
- Over 30 Additional Accessories (including dinosaur figurines and gemstone blocks)
- Dinosaur Skull and Bone Structures (glow-in-the-dark)
- Train Engine and Wagons
- Crane
- Volcano Structure
- 1 CR2032 Battery (included for sound effects)

If any parts are missing or damaged, please contact Hape customer support.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your Dinosaur Railway Adventure Set:

- 1. Unpack Components:** Carefully remove all tracks, accessories, and the train from the packaging.
- 2. Connect Tracks:** Arrange the 23 beech wood tracks on a flat surface. Connect the track pieces by aligning the interlocking ends and pushing them together firmly. Refer to the image below for a suggested layout, or create your own unique design.
- 3. Assemble Structures:** Place the volcano, dinosaur skull, and bone rib cage structures onto the designated track sections. Ensure they are stable. The dinosaur skull is designed to lift, allowing the train to pass underneath.
- 4. Position Accessories:** Distribute the dinosaur figurines, gemstone blocks, and other accessories around the track layout to create an immersive prehistoric environment.
- 5. Crane Placement:** Position the crane near the track where cargo can be transported to the train wagons.



Figure 4.1: Overview of the fully assembled Hape Dinosaur Railway Adventure Set, showcasing the complete track layout with the train, volcano, and various dinosaur-themed elements.



Figure 4.2: The train engine passing through the dinosaur skull structure, which can be lifted to allow passage.

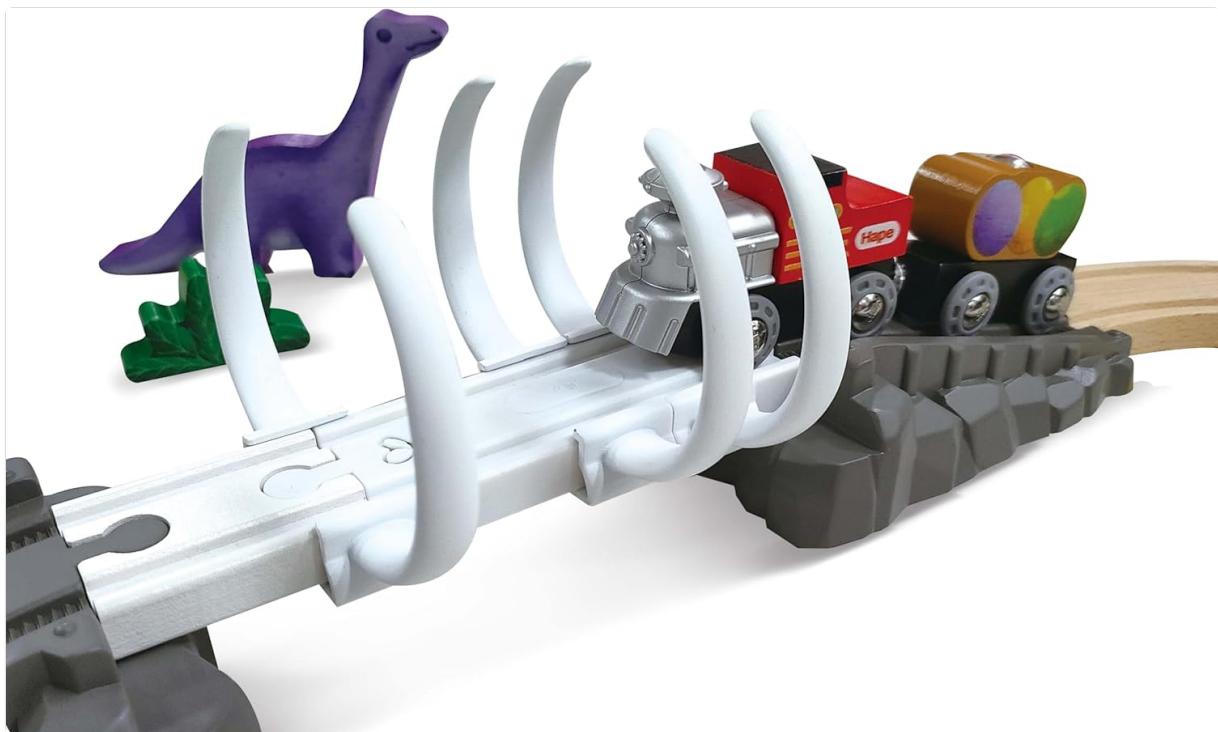


Figure 4.3: The train engine and wagons navigating through the dinosaur rib cage structure, which activates sound effects upon passage.

5. OPERATING INSTRUCTIONS

Once assembled, your Hape Dinosaur Railway Adventure Set offers various interactive play features:

- **Train Operation:** Place the train engine and wagons onto the tracks. Gently push the train to start its journey around the railway. The magnetic connectors allow for easy attachment and detachment of wagons.
- **Glow-in-the-Dark Features:** The dinosaur skull and bone structures are made from special plastic material that glows in the dark. Expose these elements to light, then observe their glow in a darkened room for an enhanced play experience.
- **Interactive Skull:** The dinosaur skull can be manually lifted and lowered, allowing the train to pass through or creating a barrier.
- **Crane Functionality:** Use the crane to lift and transport cargo pieces, loading them onto the train wagons for delivery.
- **Sound Effects:** When the train passes through the rib cage structure, exciting sound effects are activated, adding to the adventure. Ensure the CR2032 battery is correctly installed for sound functionality.



Figure 5.1: Children engaging with the railway set, demonstrating interactive play with the train and various elements.

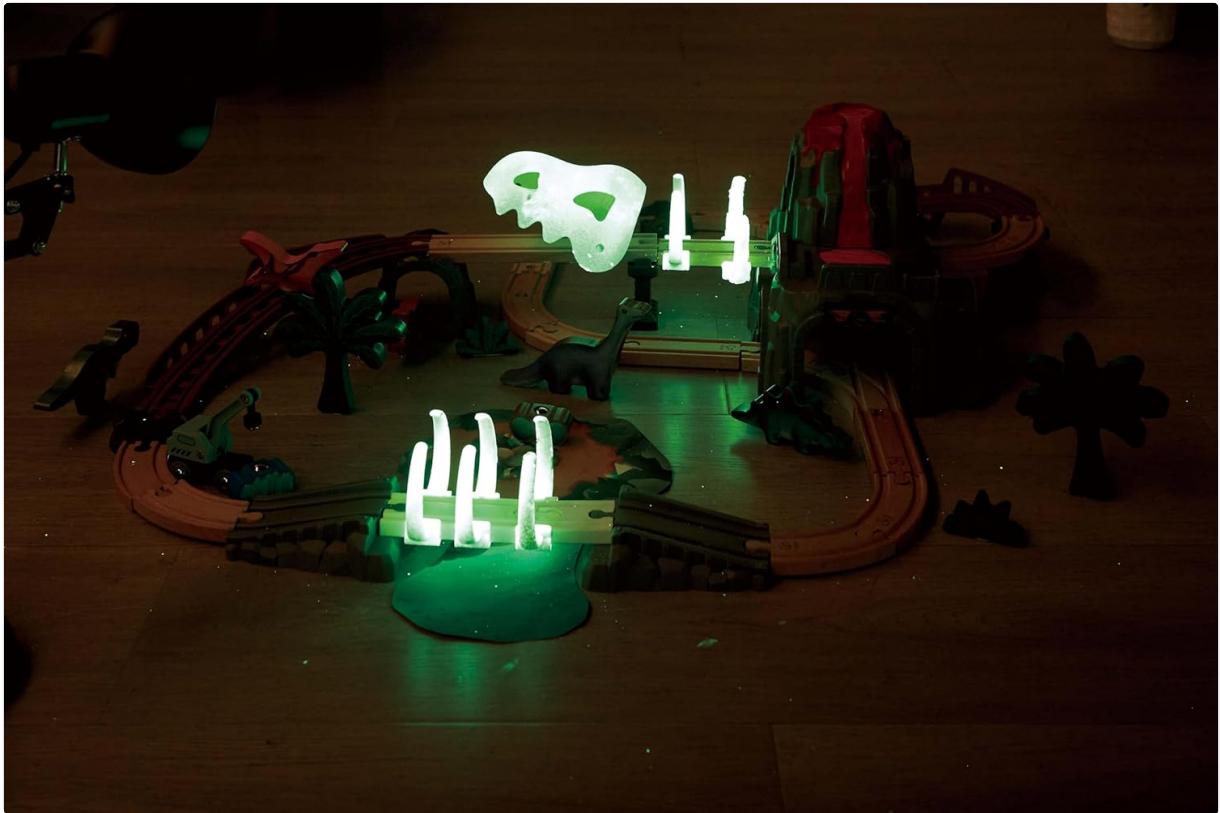


Figure 5.2: The railway set illuminated in the dark, showcasing the glow-in-the-dark dinosaur skull and bone elements after exposure to light.



Figure 5.3: A child playing with the glow-in-the-dark features of the railway set, demonstrating the interactive nature of the luminous components.

6. MAINTENANCE AND CARE

To ensure the longevity of your Hape Dinosaur Railway Adventure Set, follow these care guidelines:

- **Cleaning:** Wipe all wooden and plastic components with a damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the set in a dry place away from direct sunlight and extreme temperatures to prevent warping or fading.
- **Battery Replacement:** If sound effects diminish or stop working, replace the CR2032 battery located in the rib cage structure. Ensure correct polarity when inserting the new battery.
- **Inspection:** Periodically check all track connections and components for any signs of wear or damage. Replace any broken parts immediately.

7. TROUBLESHOOTING

If you encounter any issues with your railway set, consider the following:

- **Train Not Moving Smoothly:** Check track connections to ensure they are fully engaged and form a continuous, level path. Ensure no small objects are obstructing the wheels.
- **Sound Effects Not Working:** Verify that the CR2032 battery is correctly installed and has sufficient power. Replace the battery if necessary.
- **Glow-in-the-Dark Elements Not Glowing:** Ensure the glow-in-the-dark parts have been exposed to sufficient light (natural or artificial) before attempting to view them in the dark.
- **Loose Connections:** Re-examine all track and accessory connections to ensure they are secure.

If problems persist, please refer to the Warranty and Support section.

8. SPECIFICATIONS


Product Dimensions	33.86 x 30.91 x 8.62 inches
Item Weight	6.6 pounds
Item Model Number	E3795
Manufacturer Recommended Age	18 months and up
Batteries Required	1 CR2032 (included)
Manufacturer	Hape

9. WARRANTY AND SUPPORT

Hape products are manufactured to high-quality standards. For information regarding warranty coverage or to obtain support for your Dinosaur Railway Adventure Set, please visit the official Hape website or contact their customer service department. Keep your purchase receipt as proof of purchase.



© 2025 Hape. All rights reserved.

Related Documents - E3795

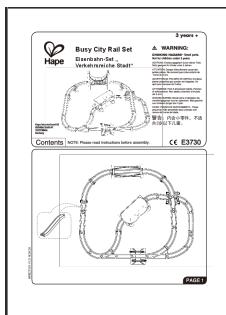

[Hape Busy City Rail Set - Toy Train Track Assembly Instructions and Warnings](#)

Comprehensive guide to the Hape Busy City Rail Set, including assembly notes, multilingual warnings about choking hazards, manufacturer details, and a visual description of the toy train track layout. Suitable for children aged 3 and up.

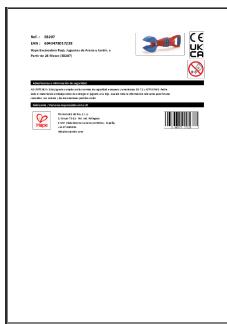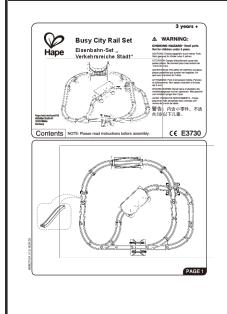	<p><u>Hape Red Excavator Toy (E8207) - Sand & Garden Play, Ages 24 Months+</u></p> <p>Information about the Hape Red Excavator toy (Model E8207), designed for sand and garden play for children aged 24 months and older. Complies with European and American safety standards EN 71 and ASTM F963. Includes manufacturer details for TOYNAMICS IBERIA, S.L.U.</p>
	<p><u>Hape Busy City Rail Set - Toy Train Track Assembly Instructions and Warnings</u></p> <p>Comprehensive guide to the Hape Busy City Rail Set, including assembly notes, multilingual warnings about choking hazards, manufacturer details, and a visual description of the toy train track layout. Suitable for children aged 3 and up.</p>
	<p><u>Hape Red Excavator Toy (E8207) - Sand & Garden Play, Ages 24 Months+</u></p> <p>Information about the Hape Red Excavator toy (Model E8207), designed for sand and garden play for children aged 24 months and older. Complies with European and American safety standards EN 71 and ASTM F963. Includes manufacturer details for TOYNAMICS IBERIA, S.L.U.</p>
	<p><u>BonoboBox Baby Toys for 9 Months: Rattles, Books, and Teethers</u></p> <p>This brochure from BonoboBox showcases a selection of developmental toys suitable for babies aged 9 months. It features rattles, a bath book, a wooden insect book, geo rattles, and teething toys, highlighting their benefits for coordination, sensory development, and learning.</p>
	<p><u>Catálogo Back to School 2025 - La Novia de Villa</u></p> <p>Descubre el Catálogo Back to School 2025 de La Novia de Villa, con una amplia selección de útiles escolares y juguetes de marcas como Crayola, LEGO, Play-Doh, Hape, Melissa & Doug, y más.</p>

Documents - Hape – E3795

no relevant documents