

[Manuals.plus](#) /

› [Kemei](#) /

› Kemei KM-680A Professional 8-in-1 Hair Clipper and Shaver Instruction Manual

## Kemei KM-680A

# Kemei KM-680A Professional 8-in-1 Hair Clipper and Shaver Instruction Manual

Model: KM-680A

---

## INTRODUCTION

---

Thank you for choosing the Kemei KM-680A Professional 8-in-1 Hair Clipper and Shaver. This versatile grooming kit is designed to provide a comprehensive solution for your hair trimming and shaving needs. Please read this manual carefully before first use to ensure safe and optimal performance of your device.



Image: The Kemei KM-680A 8-in-1 Hair Clipper and Shaver kit, showcasing the main unit, multiple attachment heads, and charging accessories in a tray.

## SAFETY INFORMATION

To reduce the risk of electric shock, injury, or fire, always follow these basic safety precautions:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance away from eyes and water sources.
- Do not use the appliance while bathing or in a shower.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Unplug this appliance before cleaning.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer.

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.

## PACKAGE CONTENTS

Your Kemei KM-680A grooming kit includes the following items:

- Main Clipper/Shaver Unit
- Precision Trimmer Head
- Body Shaver Head
- Foil Shaver Head
- Nose and Ear Trimmer Head
- 3 Guide Combs (3mm, 6mm, 10mm)
- Charging Cable (USB)
- Cleaning Brush
- Lubricating Oil
- Storage/Charging Base



Image: A complete view of the Kemei KM-680A kit, showing the main device, four interchangeable heads, three comb

attachments, a charging cable, cleaning brush, and oil.

## PRODUCT FEATURES

- **8-in-1 Versatility:** Includes attachments for precision trimming, body shaving, foil shaving, and nose/ear hair removal.
- **Advanced Shaving System:** Designed for sharp, clean cuts without snagging or pulling.
- **Corded/Cordless Operation:** Offers up to 40 minutes of cordless use or continuous power when plugged in.
- **Precision Comb Attachments:** Three guide combs (3mm, 6mm, 10mm) for customized cutting lengths.
- **Pivoting Head:** Adapts to facial contours for a comfortable and close shave.
- **Durable Blades:** Long-lasting sharpness and reliability.
- **Easy to Clean:** Water-resistant attachments and detachable blades for simple maintenance.



Image: A detailed diagram of the Kemei KM-680A main unit, pointing out key features such as the blade, control buttons, and charging port.

## SETUP AND CHARGING

1. **Initial Charge:** Before first use, fully charge the device for approximately 8 hours. Connect the USB

charging cable to the charging port on the device and a suitable USB power adapter (not included). The charging indicator light will illuminate.

2. **Attaching Heads:** To attach a desired grooming head, align the head with the main unit and press firmly until it clicks into place. To remove, gently pull the head away from the main unit.
3. **Attaching Guide Combs:** For trimming, select the desired guide comb (3mm, 6mm, or 10mm) and slide it onto the precision trimmer head until it locks.

Your browser does not support the video tag.

Video: This video demonstrates how to attach and detach the various grooming heads and guide combs to the Kemei KM-680A main unit, and shows the product in its charging base.

## OPERATING INSTRUCTIONS

---

Ensure the device is fully charged or connected to power before use.

1. **Power On/Off:** Press the power button to turn the device on or off.
2. **Using the Precision Trimmer:** Attach the precision trimmer head. For specific lengths, attach a guide comb. Hold the trimmer against the skin and move it slowly against the direction of hair growth.
3. **Using the Body Shaver:** Attach the body shaver head. Move the shaver gently over the desired area, ensuring full contact with the skin.
4. **Using the Foil Shaver:** Attach the foil shaver head. For a close shave, stretch the skin taut and move the shaver in short, circular motions.
5. **Using the Nose and Ear Trimmer:** Attach the nose and ear trimmer head. Carefully insert the trimmer tip into the nostril or ear canal and gently rotate to trim unwanted hair. Do not insert too deeply.
6. **Turbo Mode:** If available, press the turbo button for increased power for thicker hair.

# Kemei



Image: The four distinct attachment heads of the Kemei KM-680A, including the precision trimmer, nose/ear trimmer, foil shaver, and body shaver, ready for use.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your grooming kit.

1. **After Each Use:** Turn off and unplug the device. Remove the attachment head. Use the cleaning brush to remove any loose hairs from the blades and the inside of the main unit.
2. **Rinsing:** The attachment heads are water-resistant and can be rinsed under running water. Ensure the main unit is not submerged in water. Dry thoroughly before reattaching.
3. **Lubrication:** Periodically apply a small drop of the provided lubricating oil to the blades of the trimmer heads. This helps maintain blade sharpness and smooth operation.
4. **Storage:** Store the device and all attachments in the provided charging/storage base or a dry, safe place.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device for at least 8 hours.
Device runs slowly or pulls hair.	Blades are dull or clogged with hair.	Clean the blades and apply lubricating oil. Ensure the battery is fully charged.
Attachments do not fit securely.	Incorrect alignment or debris.	Ensure the attachment is correctly aligned and pressed firmly until it clicks. Check for any debris preventing a secure fit.

## SPECIFICATIONS

<b>Model Number:</b>	KM-680A
<b>Brand:</b>	Kemei
<b>Power Source:</b>	Battery Powered
<b>Blade Material:</b>	Foil
<b>Special Features:</b>	Water Resistant
<b>Minimum Cutting Length:</b>	3 millimeters
<b>Maximum Cutting Length:</b>	10 millimeters
<b>Item Dimensions (LxWxH):</b>	19 x 6 x 8 cm
<b>Item Weight:</b>	540 grams
<b>Batteries Required:</b>	Yes

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Kemei website. Keep your proof of purchase for any warranty claims.