

Sealy 805112114382

SEALY Coffee Mug Warmer USB Powered User Manual

Model: 805112114382 | Brand: Sealy

INTRODUCTION

Thank you for purchasing the SEALY Coffee Mug Warmer. This device is designed to keep your beverages warm, ensuring you can enjoy your coffee, tea, or other drinks at an optimal temperature. Please read this manual carefully before use to ensure proper operation and safety.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Do not immerse the warmer in water or any other liquid.
- Do not touch hot surfaces. Use handles or knobs.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- This appliance is for household use only.
- Keep out of reach of children.

PACKAGE CONTENTS

Verify that all items are included in your package:

- 1 x Coffee Mug (if included in your specific set)
- 1 x Mug Warmer

- 1 x User Manual



Image: Front view of the product packaging, displaying the coffee mug and warmer.



Image: Back view of the product packaging, illustrating features such as the safe gravity switch and USB power.



Image: Side view of the product packaging, highlighting key features and specifications.

SETUP

1. Place the mug warmer on a flat, stable, and heat-resistant surface.
2. Connect the USB cable from the mug warmer to a compatible USB power source (e.g., computer USB port, USB wall adapter, power bank). Ensure the power source provides sufficient voltage (5V).
3. The warmer is now ready for use.

OPERATING INSTRUCTIONS

The SEALY Coffee Mug Warmer is designed for simple and efficient operation:

1. Pour your desired beverage into a suitable mug. For best results, use a flat-bottomed mug made of ceramic, glass, or stainless steel.
2. Place the mug directly onto the heating plate of the warmer. The warmer features a gravity switch; it will automatically activate when a mug is placed on it.
3. The warmer will maintain your beverage at a constant warm temperature (approximately 45°C / 113°F).
4. To turn off the warmer, simply lift the mug off the heating plate. The gravity switch will deactivate the heating element.

Note: The warmer is designed to keep warm beverages warm, not to heat cold beverages to a hot temperature. For optimal performance, place already warm beverages on the warmer.

MAINTENANCE

Proper care will ensure the longevity of your mug warmer:

- Always unplug the warmer from the power source before cleaning.
- Allow the heating plate to cool completely before cleaning.
- Wipe the surface of the warmer with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- Ensure the warmer is completely dry before plugging it back in.

TROUBLESHOOTING

If you encounter issues with your mug warmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Warmer is not heating.	Not plugged in or loose connection. Mug not placed correctly on the gravity switch. USB power source is insufficient.	Ensure the USB cable is securely plugged into both the warmer and a working USB port. Ensure the mug is centered and fully depressing the gravity switch. Try a different USB port or a wall adapter with adequate power output (e.g., 5V/2A).
Beverage is not warm enough.	Mug material or thickness is not suitable. Beverage was too cold initially.	Use a flat-bottomed mug made of ceramic, glass, or stainless steel. Thicker mugs may reduce heat transfer. The warmer is designed to maintain temperature, not to heat cold liquids. Start with an already warm beverage.

SPECIFICATIONS

Feature	Detail
Model Number	805112114382
Brand	Sealy
Colour	White
Material	Acrylonitrile Butadiene Styrene (ABS)
Power Source	Corded Electric (USB)
Voltage	5 Volts
Rated Power	10W
Constant Temperature	45°C
Item Weight	454 g (1 Pound)
UPC	805112114382

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided within this manual. For details regarding warranty coverage,

returns, or technical support, please contact the manufacturer, SEALY CARE, or your point of purchase. Please retain your proof of purchase for any warranty claims.

© 2024 Sealy. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question