

[Manuals.plus](#) /

› [slochi](#) /

› Slochi 54CM Ceiling Fan with Light and Remote Control User Manual

slochi CF14

Slochi 54CM Ceiling Fan with Light and Remote Control User Manual

Model: CF14

1. INTRODUCTION

Thank you for choosing the Slochi 54CM Ceiling Fan with integrated LED light and remote control. This product is designed to provide both cooling airflow and adjustable illumination for your indoor spaces. Please read this manual thoroughly before installation and operation to ensure safe and efficient use.



Image 1.1: Slochi 54CM Ceiling Fan with Light and Remote Control. This image shows the overall design of the white ceiling fan with three blades and an integrated LED light.

2. SAFETY INSTRUCTIONS

To reduce the risk of electric shock, fire, or injury, always follow these basic safety precautions:

- Ensure the power supply is disconnected before installation, maintenance, or cleaning.
- Installation must be performed by a qualified electrician in accordance with local electrical codes.
- Mount the fan securely to a ceiling joist or a suitable support structure capable of holding the fan's weight.
- Do not install on a sloped ceiling. The minimum recommended installation height is 2.3 meters (approximately 7.5 feet) from the floor to the fan blades.
- Keep hands, clothing, and other objects away from the fan blades when the fan is operating.
- Do not use the fan in damp or wet locations.
- Use only the remote control provided with the fan.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation. The package includes:

- LED light plates (1 set)
- Fan blades (3 pieces)
- Accessory kit (screws, connectors, etc.)
- Motor
- Installation disk
- Mounting base
- Power supply box
- Remote control
- Lifting head

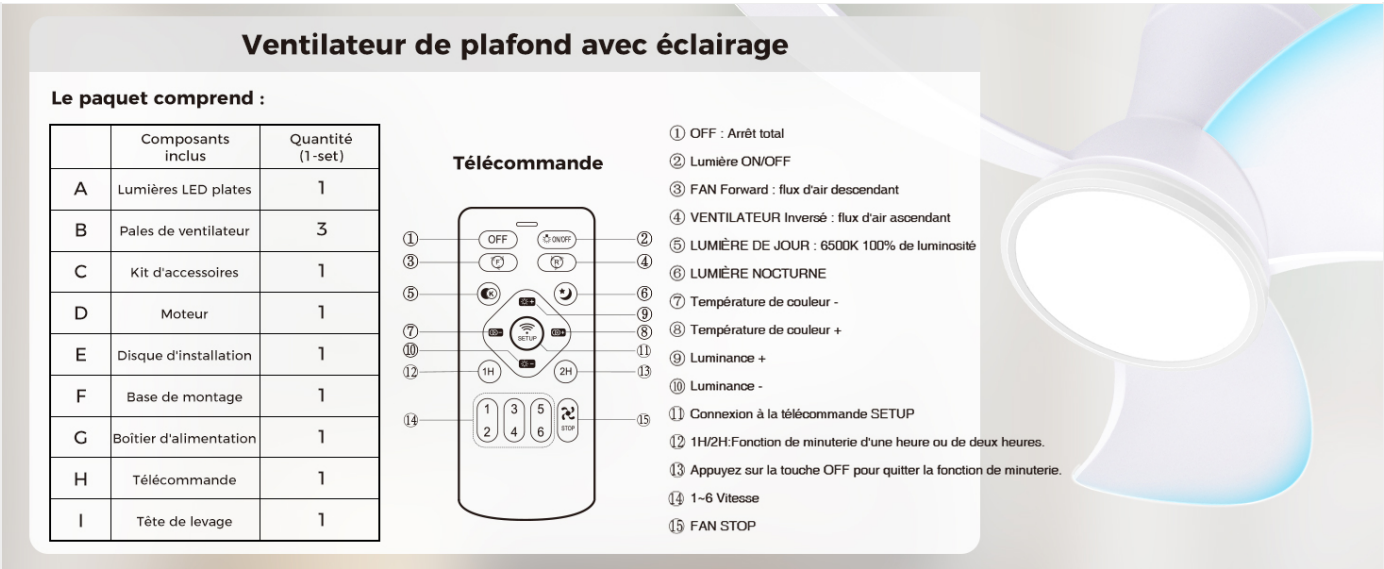 


Image 3.1: Diagram showing the included components and a detailed layout of the remote control buttons.

4. SETUP AND INSTALLATION

Installation of this ceiling fan with light is designed to be straightforward. Follow the instructions provided in the accessory kit for detailed steps. Ensure all electrical connections are secure and properly insulated.

- **Pre-installation Check:** Before starting, ensure the power is turned off at the circuit breaker.
- **Mounting:** Secure the mounting base to a ceiling joist or a structurally sound support. The fan requires 4 holes in the ceiling for mounting.
- **Wiring:** Connect the fan's electrical wires to your household wiring according to the provided wiring diagram.
- **Assembly:** Attach the fan blades, motor, and light fixture to the mounting base.
- **Final Check:** Double-check all connections and ensure the fan is securely mounted before restoring power.

Important: Do not install this ceiling fan on a sloped ceiling. The minimum recommended installation height from the floor to the fan blades is 2.3 meters.

5. OPERATING INSTRUCTIONS

The Slochi ceiling fan is operated using the included remote control. Familiarize yourself with the remote's functions:



Image 5.1: The remote control for the Slochi ceiling fan, highlighting its various functions including fan speeds, timer, airflow directions, and light controls.

5.1 Fan Operation

- **ON/OFF:** Press the fan ON/OFF button to turn the fan on or off.
- **Speed Control:** Use buttons 1-6 to select one of the six available fan speeds. '1' is the lowest speed, and '6' is the highest.
- **Airflow Direction (Reversible Motor):** Press the 'FAN FORWARD' button for downward airflow (summer mode) or 'FAN INVERTED' for upward airflow (winter mode). The reversible motor helps circulate air efficiently year-round.
- **Timer Function:** Press the '1H' or '2H' button to set the fan to turn off automatically after 1 or 2 hours. Press the 'OFF' button to cancel the timer.

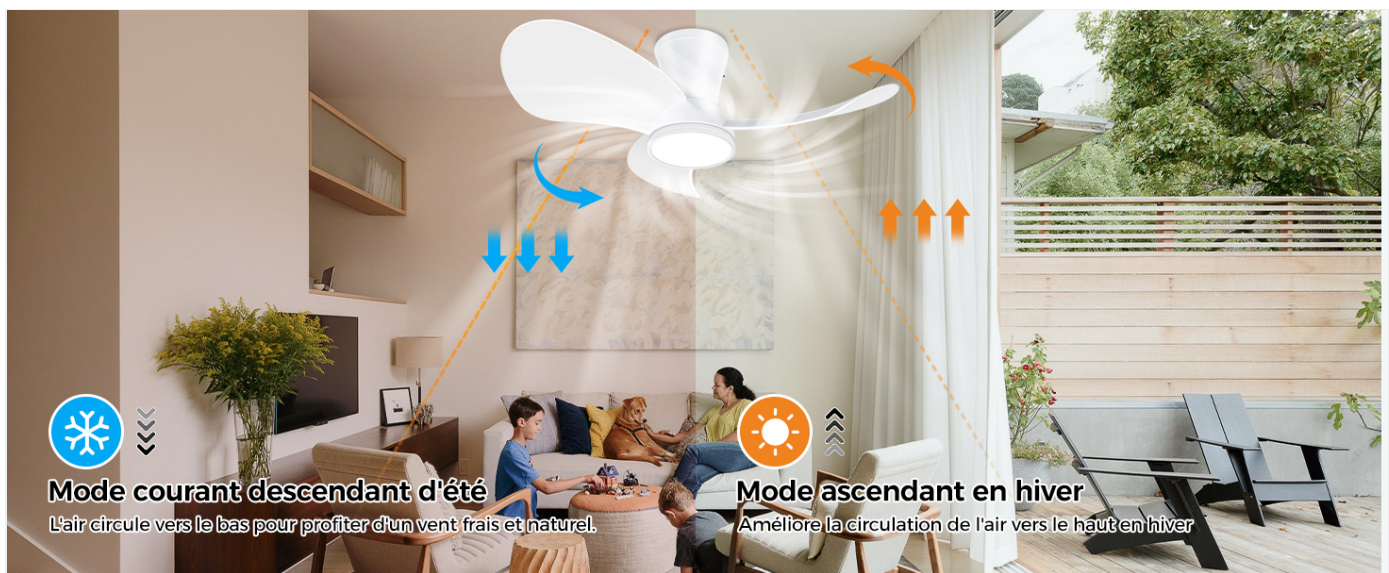


Image 5.2: Illustration of the fan's reversible motor function, showing downward airflow for summer cooling and upward airflow for winter heat circulation.

5.2 Light Operation

- **Light ON/OFF:** Press the light ON/OFF button to turn the light on or off.
- **Color Temperature Adjustment:** Use the 'Temperature +' and 'Temperature -' buttons to cycle through three color temperatures: 3000K (Warm Light), 4500K (Natural Light), and 6000K (White Light).
- **Brightness Adjustment (Dimmable):** Use the 'Luminance +' and 'Luminance -' buttons to adjust the brightness level of the light.
- **Daylight Mode:** Press the 'DAYLIGHT' button for 6500K 100% brightness.
- **Night Light Mode:** Press the 'NIGHT LIGHT' button for a softer, lower brightness setting.



Image 5.3: Three panels illustrating different light color temperatures (Warm, Natural, Cold) in a kitchen setting, demonstrating the adjustable color feature.

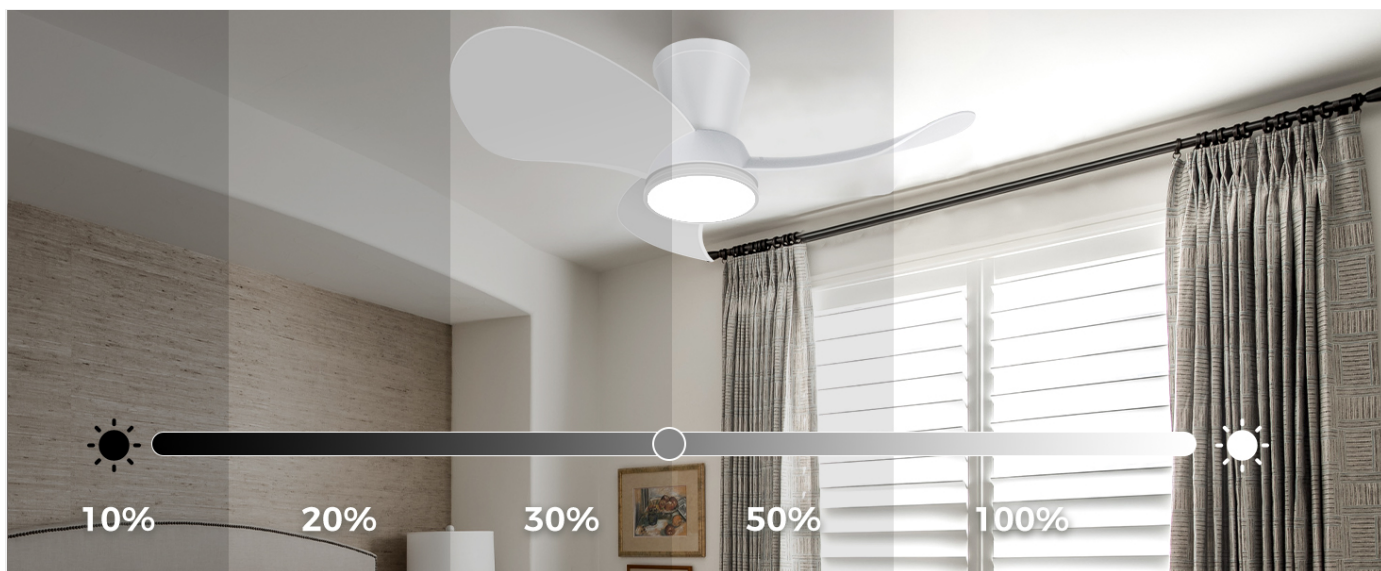


Image 5.4: A visual representation of the dimmable light feature, showing light intensity levels from 10% to 100% in a bedroom setting.

6. FEATURES

- **2-in-1 Design:** Combines a ceiling fan and an LED light fixture, providing both air circulation and illumination.
- **Quiet Operation:** Operates at an ultra-low noise level of 30 dB, ensuring a peaceful environment.
- **6 Fan Speeds:** Offers six adjustable fan speeds to suit various comfort preferences.
- **Reversible Motor:** Features a reversible motor for both downward airflow (summer cooling) and upward airflow (winter heat circulation).
- **Dimmable LED Light:** The integrated 15W 1800LM LED panel light is fully dimmable.
- **3 Color Temperatures:** Choose between 3000K (warm white), 4500K (natural white), and 6000K (cool white) light.
- **Timer Function:** Includes 1-hour and 2-hour timer settings for automatic shutdown.
- **Energy Efficient:** Designed with energy-saving components, including a 20W fan and 15W light.

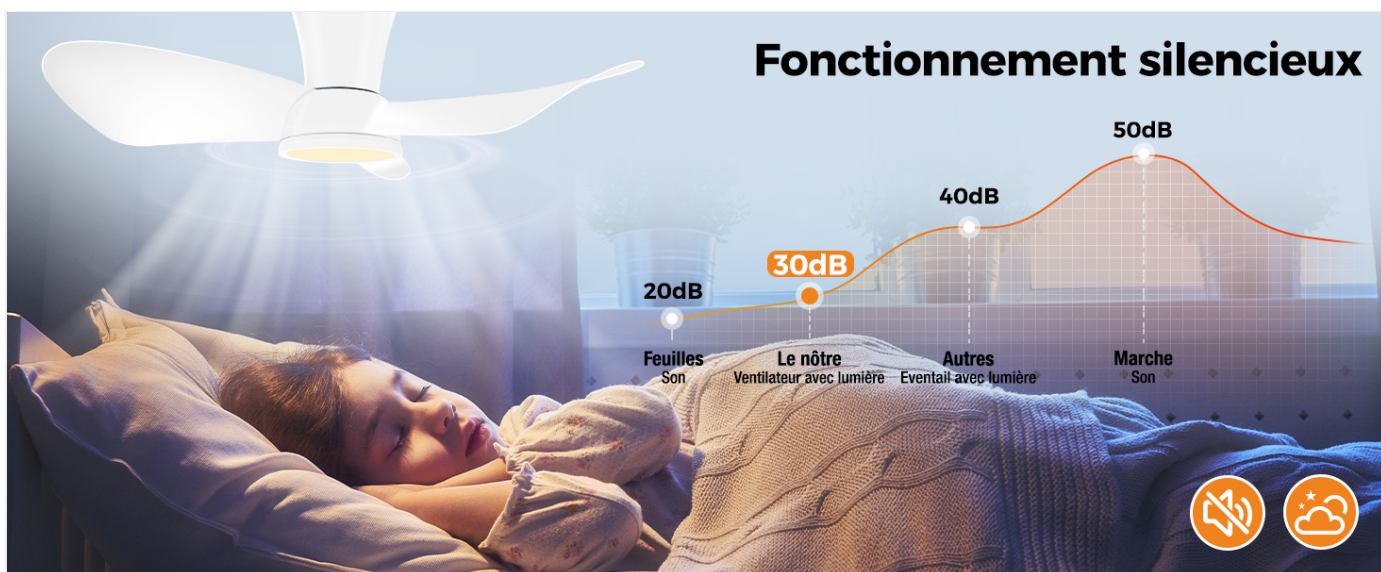


Image 6.1: A graphic illustrating the quiet operation of the Slochi fan at 30 dB, with a sleeping child in the foreground, emphasizing its suitability for bedrooms.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your ceiling fan.

- **Cleaning:** Turn off the power before cleaning. Use a soft, damp cloth to wipe down the fan blades and light fixture. Do not use abrasive cleaners or solvents.
- **Blade Balance:** If the fan wobbles, check that all blade screws are tightened.
- **Light Source:** The LED light source is integrated and not user-replaceable. If the light fails, contact customer support.

8. TROUBLESHOOTING

If you encounter issues with your Slochi ceiling fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power supply; Loose wiring; Remote control battery low.	Check circuit breaker; Verify wiring connections; Replace remote control battery.
Light does not turn on	No power supply; Loose wiring; Remote control battery low; LED failure.	Check circuit breaker; Verify wiring connections; Replace remote control battery; Contact customer support if LED is faulty.
Fan wobbles	Loose mounting screws; Unbalanced blades.	Ensure all mounting screws are tight; Check blade screws and ensure they are securely fastened.
Remote control not working	Battery low or incorrectly inserted; Remote not paired.	Replace battery, ensuring correct polarity; Refer to remote control pairing instructions (if applicable, usually automatic).

If the problem persists after attempting these solutions, please contact Slochi customer support for assistance.

9. SPECIFICATIONS

Feature	Specification
Brand	slochi
Model Number	CF14
Color	White
Material	Polyester
Style	Modern
Product Dimensions (L x W x H)	54L x 54l x 24H centimeters (22 inch diameter)
Usage	Indoor
Power Source	Corded Electric
Features	Color Changing, Dimmable, Energy Efficient

Feature	Specification
Control Method	Remote Control
Bulb Type	LED
Number of Bulbs	1 (integrated LED panel)
Light Color	White (adjustable 3000K/4500K/6000K)
Wattage	35 Watts (Fan: 20W, Light: 15W)
Luminous Efficacy	1800 Lumens (max)
Energy Label	E
Mounting Type	Ceiling Mount (Semi-flush)
Assembly Required	Yes
Country of Origin	China

10. WARRANTY AND SUPPORT

Slochi products are manufactured to high-quality standards. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Slochi website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2024 Slochi. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question