

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› User Manual for ECONTROLLY VR3 Replacement TV Remote Commander

ECONTROLLY SENUO-VR3

User Manual for ECONTROLLY VR3 Replacement TV Remote Commander

Model: SENUO-VR3 (0980-0305-4010)

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY VR3 0980-0305-4010 Replacement TV Remote Commander. This remote is designed to be compatible with various VIZIO LED LCD Flat Panel Television models, offering a direct replacement for your original remote control.

Compatible VIZIO TV models include, but are not limited to: VP504FHDTV10A, VO22LFHDTV10A, VO22LHDTV10A, VOJ370F, VO32LFHDTV10A, VO37LHDTV10A, V022L FHDTV10A, VO37L HDTV10A, VO22L HDTV10A, VO32L FHDTV10A, VO32A, V032A, VO37L, VO37LF, VO42L, VOJ320F FHDTV10A, VOJ370F1A, VOJ320F1AC FHDTV20A, VOJ320M, VO37LFHDTV20A, VOJ320, VOJ3201A, VO37LFHDTV10A, VOJ370, VOJ320F1A, VO22LHDTV10A, VO22LFHDTV10A, VO22L FHDTV10A, V022L10A, VO22LF, VO42LFHDTV10A, VO32LFF.

2. PACKAGE CONTENTS

- 1 x ECONTROLLY VR3 0980-0305-4010 Replacement TV Remote Commander

Note: Batteries (2x AAA) and a user manual are NOT included in the package. This digital manual serves as your user guide.

3. SETUP

3.1. Battery Installation

The remote control requires two (2) 1.5V AAA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 3.1: Battery Compartment. Insert two AAA batteries as shown.

3.2. Initial Use

No programming or pairing is required for this replacement remote. Once the batteries are correctly installed, the remote is ready for immediate use with compatible VIZIO LED LCD TVs.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your new remote control. The layout is designed to be intuitive and similar to your original VIZIO remote.



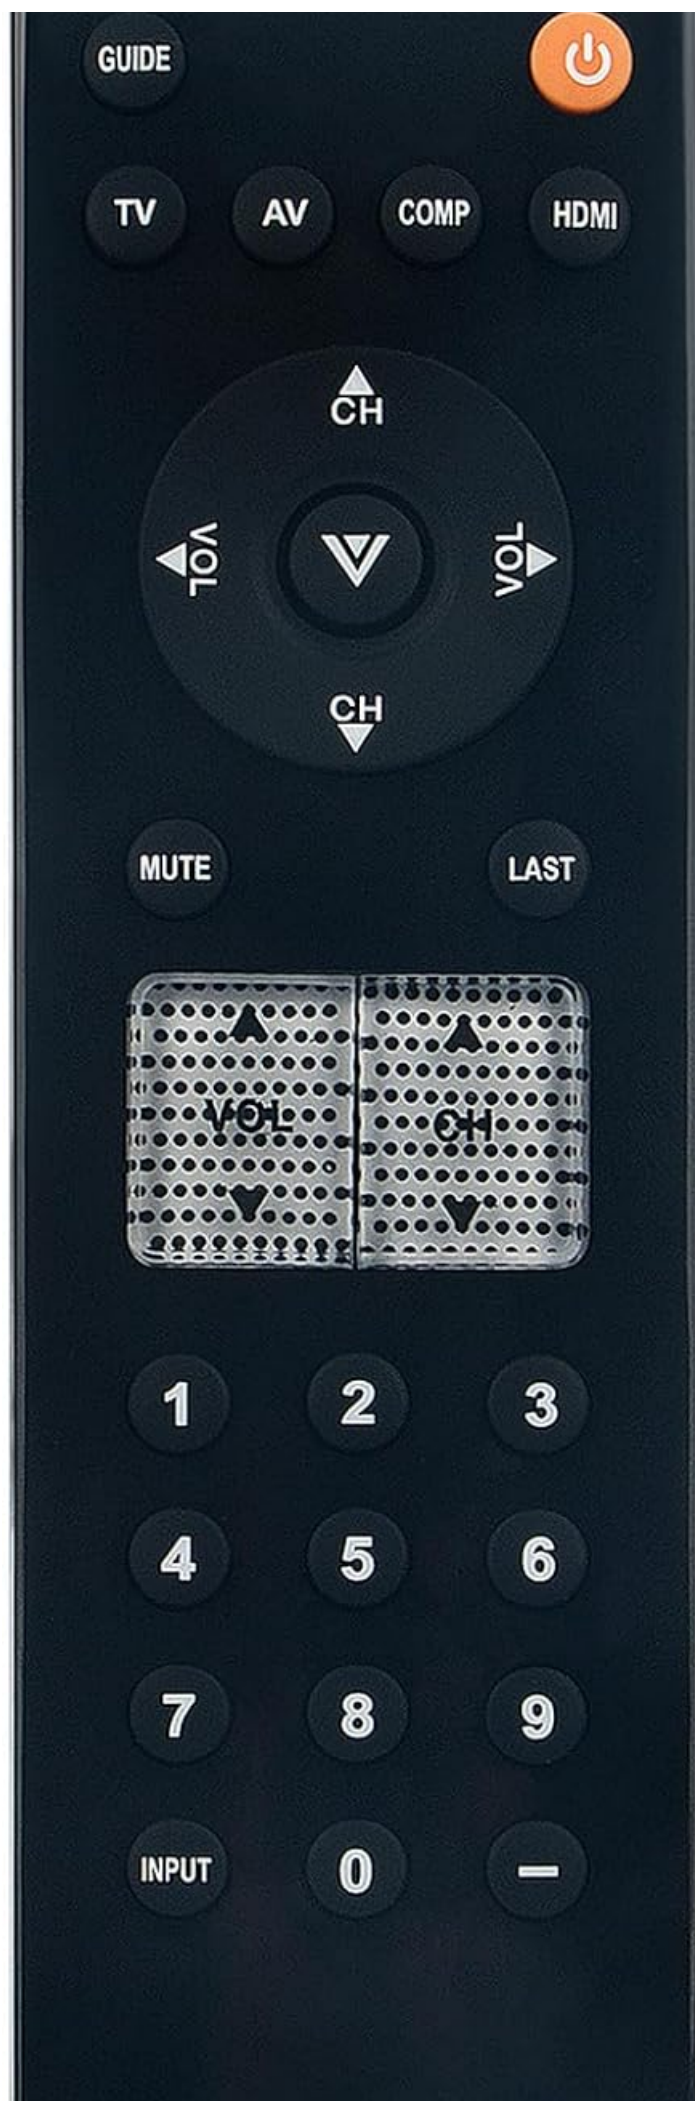




Figure 4.1: Front View of the Remote Control.

4.1. Button Functions

Button	Function
Power ()	Turns the TV On or Off.
GUIDE	Accesses the Electronic Program Guide (EPG).
TV	Switches to TV input mode.
AV	Selects Audio/Video input.
COMP	Selects Component input.
HDMI	Selects HDMI input.
CH ▲ / ▼	Changes channels up or down.
VOL ▲ / ▼	Adjusts volume up or down.
MUTE	Mutes or unmutes the TV sound.
LAST	Switches to the previously viewed channel.
Number Pad (0-9)	Directly enters channel numbers.
INPUT	Cycles through available input sources.
Navigation Buttons (Up, Down, Left, Right, OK)	Used to navigate menus and confirm selections.

5. MAINTENANCE

5.1. Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

5.2. Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the remote's surface or internal components.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.

- Point the remote directly at the TV's IR sensor.
- **Some buttons not working:**
 - Check if the button is stuck or dirty. Gently clean around the button.
 - Ensure the remote is compatible with your specific TV model. Refer to the "Introduction" section for compatible models.

7. SPECIFICATIONS

Feature	Detail
Model Number	SENUO-VR3 (VR3 0980-0305-4010)
Brand	ECONTROLLY
Product Dimensions	5.91 x 1.97 x 0.59 inches
Item Weight	2.11 ounces
Color	Black
Special Feature	Ergonomic
Max Number of Supported Devices	1 (Television)
Power Source	2 x AAA 1.5V Alkaline Batteries (not included)

8. WARRANTY AND SUPPORT

Information regarding specific warranty terms for this product is not provided in the product details. Please refer to the seller's or manufacturer's website for any applicable warranty information.

For technical support or further assistance, please contact the seller directly through the platform where the product was purchased. Ensure you have your order details and product model number (SENUO-VR3) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CT4WT9XP>

More documents and user manuals: <https://manuals.plus/>