



Manuals.plus /

› **DinoFire** /

› DinoFire Wireless Presenter User Manual

DinoFire B0CT53PXZR

DinoFire Wireless Presenter User Manual

Model: AAA-USB A/C (ASIN: B0CT53PXZR)

1. PRODUCT OVERVIEW

The DinoFire Wireless Presenter is a versatile tool designed to enhance presentations. It features a dual USB-A and USB-C receiver for broad compatibility, a red laser pointer, and intuitive controls for slide navigation, volume adjustment, window switching, and hyperlink activation. Its compact design and long control range make it ideal for various presentation environments.



Image: The DinoFire Wireless Presenter, a sleek black device with control buttons and a red laser pointer, shown alongside its dual USB-A and USB-C receiver.

2. PACKAGE CONTENTS

- DinoFire Wireless Presenter (1 unit)
- USB-A & USB-C 2-in-1 Receiver (1 unit)
- User Manual (this document)
- AAA Battery (1 unit, typically pre-installed or included)

3. SETUP GUIDE

3.1. Inserting the Battery

1. Locate the battery compartment on the back of the presenter.
2. Slide open the battery compartment cover.
3. Insert one AAA battery, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

3.2. Connecting the Receiver

The presenter comes with a 2-in-1 USB-A and USB-C receiver for versatile connectivity.

1. Retrieve the USB receiver from its storage slot inside the presenter (near the battery compartment).
2. Plug the receiver into an available USB-A or USB-C port on your computer (laptop or desktop).
3. The computer should automatically detect and install the necessary drivers. This is a plug-and-play device and typically requires no manual driver installation.



Image: A close-up view of the 2-in-1 USB receiver, demonstrating its compatibility with both USB-A and USB-C ports on different laptops.

3.3. Initial Pairing

Once the receiver is plugged in and the battery is inserted, the presenter should automatically pair with the receiver. No manual pairing steps are usually required.

3.4. Mac User Setup (Optional)

For Mac users, a simple one-time setup may be required for full functionality:

1. Connect the USB receiver to your Mac.
2. When prompted by the Keyboard Setup Assistant, follow the on-screen instructions.
3. Press the button next to the left Shift key and the button next to the right Shift key on the presenter as instructed.
4. Select the appropriate keyboard type (e.g., ANSI) if prompted.

4. OPERATING INSTRUCTIONS

4.1. Button Functions



Image: A detailed diagram illustrating the various buttons on the DinoFire Wireless Presenter, including the LED indicator, volume controls, power switch, USB receiver storage, battery compartment, and presentation control buttons (Switch Windows, Page Up/Down, Full Screen, Black Screen, Light Control).

- **Switch On/Off:** Located on the side of the presenter. Slide to turn the device on or off.
- **LED Indicator:** Displays connection status and low battery warning.
- **Page Up (▲):** Single press to advance to the next slide.
- **Page Down (▼):** Single press to go back to the previous slide.
- **Full Screen (■):** Single press to enter full screen mode in presentation software.
- **Black Screen (■):** Press and hold the Full Screen button to black out the screen. Press again to resume.
- **Switch Windows (☐):** Press to cycle through open application windows.
- **Volume Up (+):** Located on the side. Press to increase system volume.

- **Volume Down (-):** Located on the side. Press to decrease system volume.
- **Light Control (*):** Activates the red laser pointer. Press and hold to keep the laser on.



Image: Four panels demonstrating the presenter's functions: Page Up/Down for slide navigation, Switch Windows for multitasking, Open Hyperlink for interactive presentations, and Volume Control for audio management.

4.2. Long Control Range

The DinoFire Wireless Presenter offers an extended control range, allowing you to move freely during your presentation.

- **Wireless Control Range:** Up to 98-165 feet (30-50 meters).
- **Red Laser Pointer Range:** Up to 328 feet (100 meters).

Light distance ≤ 628 ft

Control distance ≤ 98 ft

LONG CONTROL RANGE

Allows you move around the room and still control the slides

Image: A visual representation of the presenter's long control range, indicating a light distance of up to 628 ft and a control distance of up to 98 ft, allowing presenters to move around the room.

4.3. Low Power Indicator

The LED indicator on the presenter will blink or change color to notify you when the battery level is low. Replace the AAA battery promptly to ensure uninterrupted operation.

5. COMPATIBILITY

The DinoFire Wireless Presenter is designed for wide compatibility with various operating systems and presentation software.

5.1. Operating Systems

- Windows (all versions)
- macOS (Mac)
- Android

- Linux

5.2. Software Compatibility

- Microsoft PowerPoint
- Microsoft Word
- Microsoft Excel
- Google Slides
- Keynote
- Prezi
- ACDSee
- Photos
- Pages
- Numbers
- OneNote
- And other similar presentation/document software.

WIDELY COMPATIBILITY

Compatible with multiple systems
and softwares

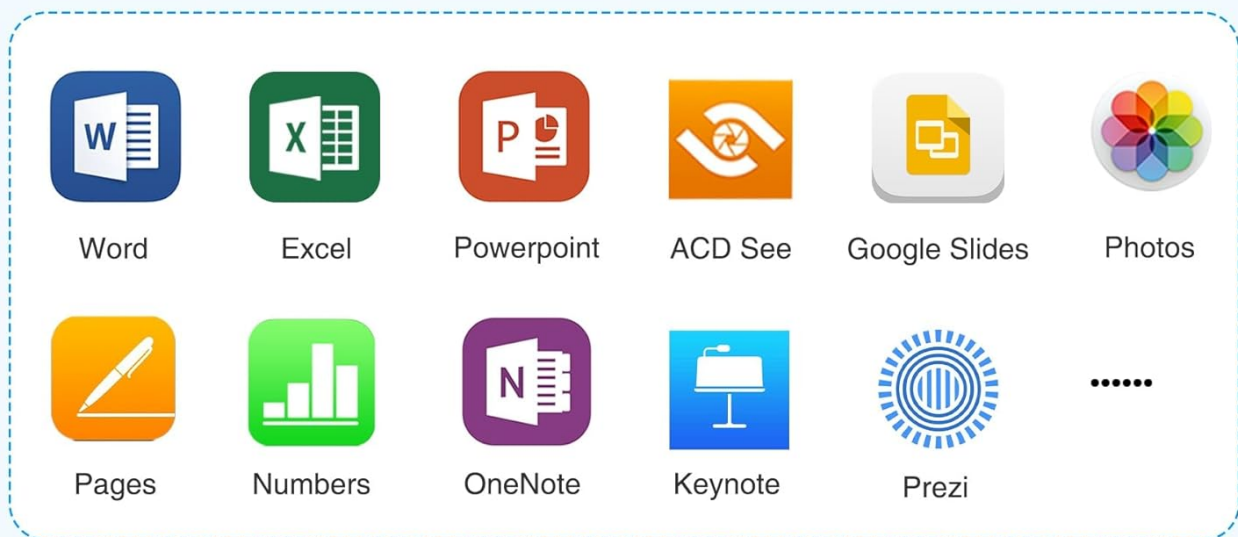
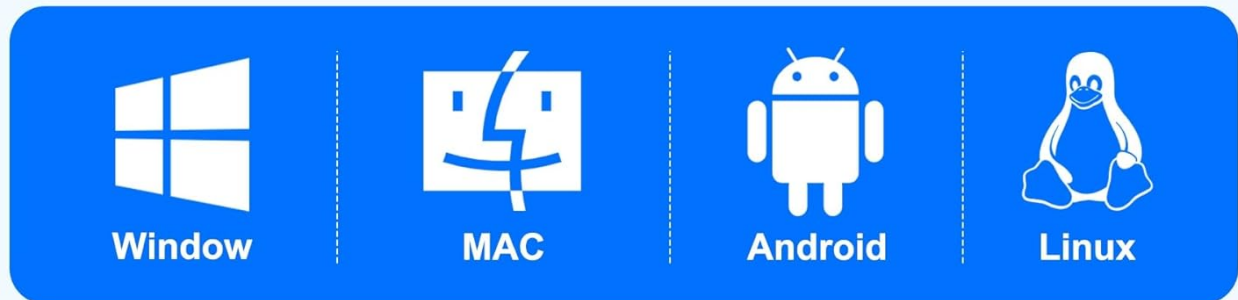


Image: A comprehensive chart illustrating the wide compatibility of the presenter with operating systems like Windows, Mac, Android, and Linux, as well as various software applications including Word, Excel, PowerPoint, Google Slides, Keynote, and more.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the presenter. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the presenter in a cool, dry place. Ensure the USB receiver is securely stored in its designated slot within the presenter to prevent loss.
- **Battery Replacement:** Replace the AAA battery when the low power indicator is active or when performance degrades. Remove the battery if the presenter will not be used for an extended period to prevent leakage.
- **Avoid Drops:** Handle the presenter with care to prevent damage from drops or impacts.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Presenter not responding	Low battery; Receiver not connected; Presenter turned off; Pairing issue.	Replace battery; Ensure receiver is fully plugged in; Turn presenter on; Re-plug receiver to re-establish connection.
Laser pointer not working	Presenter off; Low battery; Laser button not pressed/held.	Turn presenter on; Replace battery; Press and hold the laser button. Note: Not recommended for LED/LCD screens.
Buttons not working on Mac	Mac setup not completed.	Follow the Mac user setup instructions in Section 3.4.
Limited control range	Obstructions; Interference; Low battery.	Ensure clear line of sight to receiver; Avoid strong electromagnetic interference; Replace battery.

8. SPECIFICATIONS

Feature	Detail
Model	AAA-USB A/C
Connectivity	2.4GHz Wireless Technology
Receiver Type	USB-A & USB-C 2-in-1
Wireless Control Range	98-165 feet (30-50 meters)
Laser Pointer Type	Red Laser
Laser Range	Up to 328 feet (100 meters)
Battery Type	1 x AAA Battery
Dimensions	7.64 x 6.93 x 0.87 inches (Package Dimensions)
Item Weight	0.352 ounces
Manufacturer	Shenzhen Kangson Electronic Co., Ltd.

9. WARRANTY AND SUPPORT

DinoFire products are designed for reliability and performance. For information regarding warranty coverage, technical support, or service inquiries, please refer to the contact information provided with your purchase or visit the official DinoFire website. Please retain your proof of purchase for warranty claims.

For further assistance, you may also visit the DinoFire Store on Amazon: [DinoFire Amazon Store](#)

