

vidaXL 3204927

vidaXL Electric Massage Recliner Chair - Model 3204927

User Instruction Manual

WELCOME

Thank you for choosing the vidaXL Electric Massage Recliner Chair. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new recliner. Please read it thoroughly before use and retain it for future reference.

SAFETY INFORMATION

Please observe all safety instructions provided in this user manual. Ensure the product is correctly assembled and used according to these guidelines. Pay close attention to the maximum load capacity of 110 kg (242 lbs). Only use the electrical functions after carefully reading and understanding all instructions related to electrical operation.

SETUP: ASSEMBLY INSTRUCTIONS

Assembly is required for this recliner chair. Please follow the steps below carefully. It is recommended to have two people for assembly to ensure safety and ease.

1. Unpack all components and verify against the parts list (not provided in this document, refer to packaging).
2. Attach the backrest to the seat base, ensuring all connection points are securely fastened.
3. Connect the footrest mechanism to the main frame.
4. Securely attach the legs to the base of the chair.
5. Connect all electrical cables for the reclining and massage functions as indicated in the separate wiring diagram (not provided in this document, refer to packaging).
6. Ensure all screws and bolts are tightened before use.

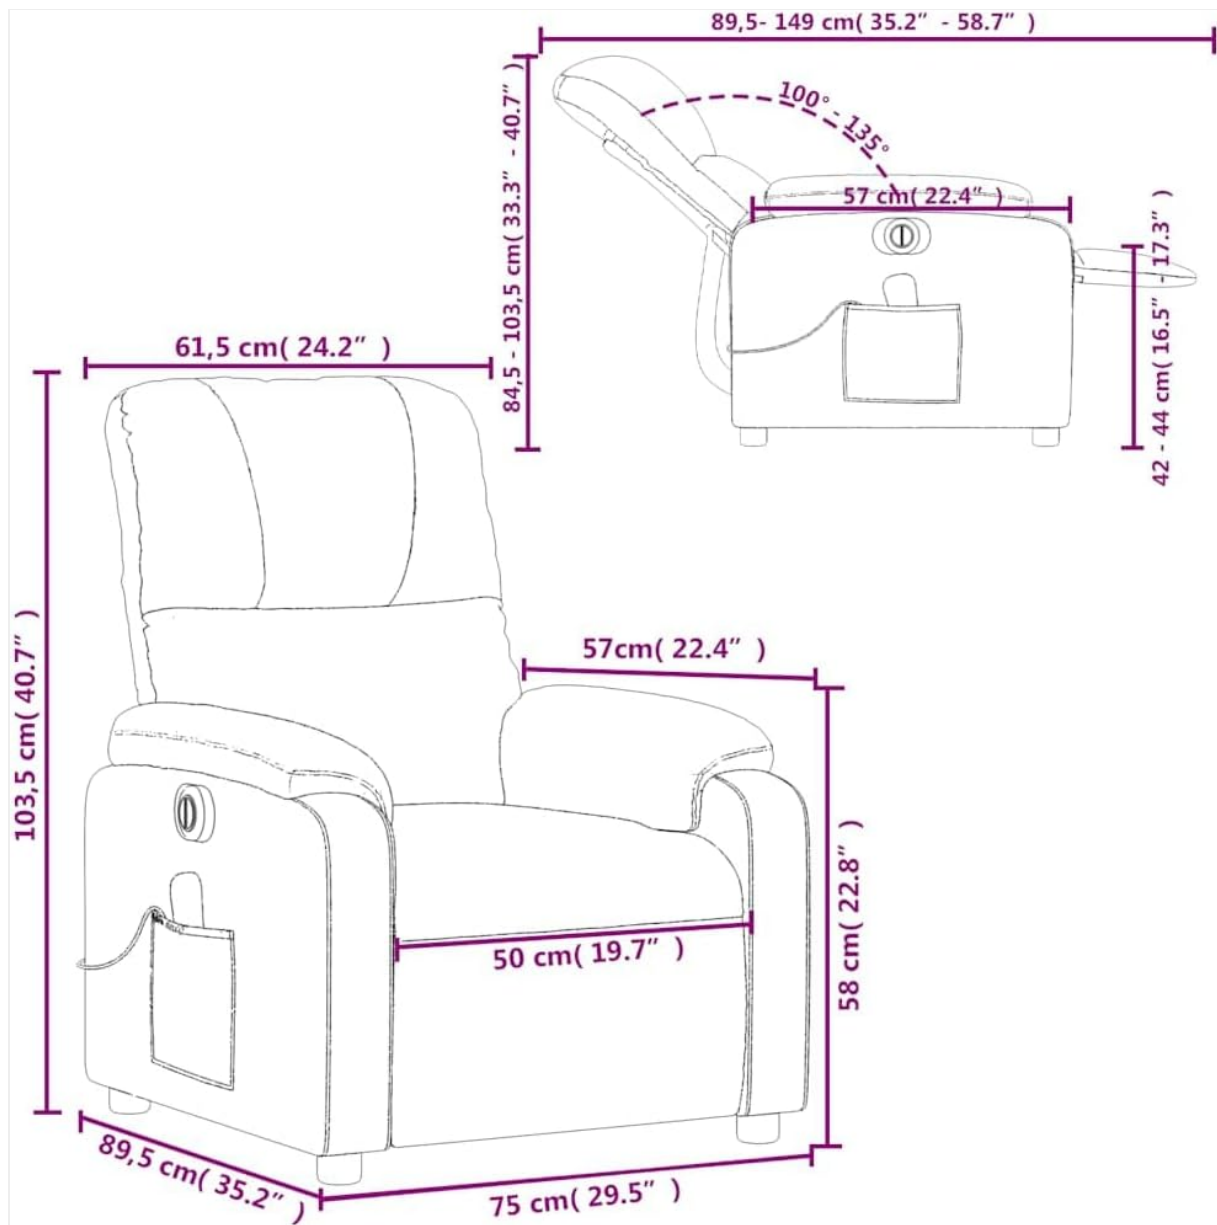


Image: Technical diagram illustrating the dimensions of the recliner in both seated and fully reclined positions.



Image: The vidaXL Electric Massage Recliner Chair in beige, showcasing its design and appearance in a home environment.

OPERATING INSTRUCTIONS

Electric Reclining Function

The recliner is equipped with an electric motor for automatic adjustment of the backrest and footrest. To recline, press the button located on the side of the chair. The chair can recline up to a maximum of 135 degrees. To return to the upright position, press the button again. This function allows you to find your preferred position for optimal comfort.

Design courbé ergonomique

inclinaison à l'angle de votre choix



Image: Diagram illustrating the ergonomic design and various recline positions for reading, watching TV, and sleeping.

Massage Function

The chair features a 6-point vibration massage function. Use the included remote control to select different massage programs, intensity levels, and positions. The massage function is powered via a USB connector, which requires a certified 5V USB power source (not supplied).

- **Intensity Levels:** Choose from 3 levels of intensity.
- **Massage Positions:** Select from 3 different massage positions.
- **Massage Modes:** Utilize 5 distinct massage modes for varied experiences.

Fonction de massage automatique

se détendre de la manière la plus confortable



3 niveaux d'intensité



3 positions



5 modes



Image: Remote control for the massage function, displaying options for intensity, positions, and modes.

MAINTENANCE

Care and Cleaning

The recliner is upholstered in microfiber fabric, known for its durability and ease of maintenance. For general cleaning, spot clean any spills or stains immediately. For a more thorough cleaning, the fabric can be machine washed at 30 °C. Always ensure the fabric is completely dry before reassembly or use.

Fibre micro-soie



Toucher doux



séchage rapide



Respirant

Image: Close-up view of the microfiber fabric, emphasizing its soft texture, quick-drying capability, and breathability.

TROUBLESHOOTING

If you encounter any issues with your recliner, please refer to the following common troubleshooting steps:

- **Reclining Function Not Working:** Check if the power adapter is securely plugged into both the chair and a working wall outlet. Ensure all electrical connections within the chair are firm.
- **Massage Function Not Activating:** Verify that the USB power source for the massage function is connected and providing 5V DC. Check the remote control batteries if applicable (remote control power source not specified, assume wired or internal).
- **Unusual Noises:** Inspect the chair for any loose components or obstructions in the reclining mechanism. Tighten any loose screws.
- **Stability Issues:** Ensure the chair is placed on a flat, stable surface and that all legs are securely attached and level.

If problems persist after attempting these steps, please contact customer support.


SPECIFICATIONS

Feature	Detail
Brand	vidaXL
Model Number	3204927
Color	Beige
Material	Microfiber fabric (100% polyester), plywood, metal
Filling Material	Foam, polypropylene fiber
Seated Dimensions (W x D x H)	75 x 89.5 x 103.5 cm (29.5 x 35.2 x 40.7 inches)
Reclined Dimensions (W x D x H)	75 x 149 x 84.5 cm (29.5 x 58.7 x 33.3 inches)
Seat Width	50 cm (19.7 inches)
Seat Depth	57 cm (22.4 inches)
Seat Height from Floor	42-44 cm (16.5-17.3 inches)
Armrest Height from Floor	58 cm (22.8 inches)
Massage Type	6-point vibration massage (no heating)
Massage Input Voltage	5V DC
Massage Input Current	2A
Electric Motor Input	24V DC, 1.5A
Electric Motor Output	100-240 V~, 50-60 Hz
Maximum Load Capacity	110 kg (242 lbs)
Item Weight	20.2 kg (44.5 lbs)
Assembly Required	Yes
Recommended Use	Relaxation

Toujours robuste



Charge max 110 kg

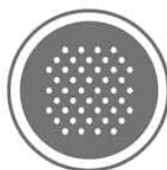

Éponge haute densité



Haut rebondissement

Image: A hand pressing into the chair's cushion, demonstrating the high-density foam and its robust, high-rebound properties.

WARRANTY AND SUPPORT

Warranty Information

Specific warranty details are not provided in this manual. Please refer to your purchase documentation or contact the retailer for information regarding the warranty period and terms for your vidaXL Electric Massage Recliner Chair.

Customer Support

For any questions, technical assistance, or to report issues not covered in this manual, please contact vidaXL customer support. Contact information can typically be found on the vidaXL official website or through your purchase platform.