

Haier HIL1901MBPB

Haier 19 L Inverter Technology Solo Microwave Oven HIL1901MBPB User Manual

Model: HIL1901MBPB

1. INTRODUCTION

Thank you for choosing the Haier 19 L Inverter Technology Solo Microwave Oven. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read these instructions thoroughly before use and retain them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure proper ventilation around the appliance.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only use utensils suitable for microwave ovens.
- Clean the oven regularly and remove any food deposits.

3. PRODUCT OVERVIEW

The Haier HIL1901MBPB is a 19-liter solo microwave oven designed for reheating, defrosting, and basic cooking. It features Inverter Technology for consistent heating, a lightweight design for easy placement, and simple knob controls.



Figure 3.1: Front view of the Haier HIL1901MBPB Solo Microwave Oven.

Key Features:

- **Inverter Technology:** Provides consistent power for even cooking and energy efficiency.
- **Lightweight Design:** Weighing approximately 6.6 kg, it is easy to move and position.
- **Defrost Function:** For efficient and uniform thawing of frozen foods.
- **5 Power Levels:** Offers flexibility for various cooking needs.
- **Compact Size:** Designed to fit in smaller kitchen spaces.
- **Easy Knob Control:** Two rotary knobs for power level and timer settings.
- **Steam Clean:** A feature to assist in cleaning the oven cavity.



Figure 3.2: Dimensions of the microwave oven. Width: 436 mm, Height: 241 mm, Depth: 328 mm.

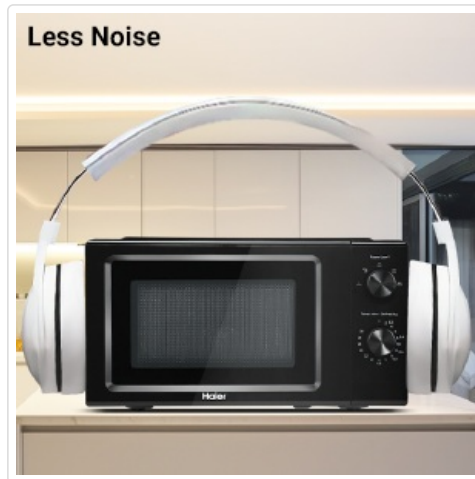


Figure 3.3: Inverter Technology ensures consistent and stable heating for optimal cooking results.



Figure 3.4: The defrost function allows for even and quicker thawing of various food items.

4. SETUP AND INSTALLATION

Your Haier microwave oven is designed for countertop installation.

Unpacking:

1. Carefully remove the microwave oven and all packing materials from the carton.
2. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.
3. Ensure all included components are present: 1 Microwave Oven, 1 Glass Tray, 1 Turntable Ring Assembly, 1 Instruction Manual.

Placement:

- Place the oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it.
- Maintain a minimum clearance of 10 cm (4 inches) around the sides, back, and top of the oven for adequate ventilation.
- Do not block any ventilation openings.
- Keep the oven away from heat sources and strong magnetic fields.

Electrical Connection:

- Ensure the voltage and frequency of your power outlet match the specifications on the oven's rating label (230 Volts).
- Plug the oven into a properly grounded electrical outlet. Do not use extension cords or adapters.

5. OPERATING INSTRUCTIONS

Your microwave oven features simple knob controls for power level and cooking time.

Control Panel:



Figure 5.1: The control panel features two rotary knobs: one for Power Level and one for Timer/Defrost.

- **Power Level Knob:** Selects one of the 5 available power levels.
- **Timer/Defrost Knob:** Sets the cooking time or defrost weight.

Basic Operation:

1. Place the food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Turn the **Power Level Knob** to select the desired power setting (e.g., High for quick heating, Medium for general cooking). There are 5 power levels available.
4. Turn the **Timer/Defrost Knob** to set the desired cooking time. The oven will start automatically once the timer is set.
5. When the cooking time is complete, a completion beeper will sound.

Defrost Function:

The defrost function allows you to thaw frozen food based on weight.

1. Place the frozen food on the glass turntable.

2. Turn the **Power Level Knob** to the defrost setting (usually indicated by a snowflake symbol or specific defrost power level).
3. Turn the **Timer/Defrost Knob** to select the appropriate weight for the food item. The oven will calculate the defrost time automatically.
4. During defrosting, it may be necessary to turn the food over to ensure even thawing.

6. MAINTENANCE AND CLEANING

Regular cleaning and proper maintenance will ensure the longevity and efficient operation of your microwave oven.

General Cleaning:

- Always unplug the oven before cleaning.
- Clean the oven cavity, door, and door seals regularly with a mild detergent and a soft cloth. Avoid abrasive cleaners or scouring pads.
- The glass turntable and turntable ring assembly can be removed and washed in warm soapy water or a dishwasher.
- Wipe the exterior surfaces with a damp cloth.

Steam Clean Feature:

The Steam Clean feature helps loosen food particles and makes cleaning the interior easier.

1. Place a microwave-safe bowl with water and a few drops of lemon juice (optional) inside the oven.
2. Set the oven to a high power level and run it for 5-10 minutes, or as recommended in specific instructions if available.
3. Allow the steam to sit in the oven for a few minutes after the cycle.
4. Carefully remove the bowl and wipe the interior with a soft cloth.

7. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|----------------------|---|---|
| Oven does not start | Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped. | Ensure power cord is securely plugged in; Close door firmly; Check household fuse or reset circuit breaker. |
| Food not heating | Incorrect power level or cooking time set; Utensil not microwave-safe. | Adjust power level and cooking time; Use microwave-safe cookware. |
| Sparking inside oven | Metal or foil in oven; Food residue on cavity walls. | Remove any metal objects; Clean oven interior thoroughly. |

| Problem | Possible Cause | Solution |
|------------------------|---|--|
| Turntable not rotating | Turntable or ring assembly not correctly placed; Obstruction. | Ensure turntable and ring are correctly seated; Remove any obstructions. |

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

| Feature | Specification |
|------------------------|--------------------------------|
| Brand | Haier |
| Model | HIL1901MBPB |
| Capacity | 19 litres |
| Oven Cooking Mode | Solo |
| Power Output | 700 Watts |
| Microwave Power Levels | 5 |
| Voltage | 230 Volts |
| Installation Type | Countertop |
| Defrost System | Defrost |
| Control Type | Easy Knob Control |
| Door Orientation | Left Side Swing |
| Material | Iron |
| Color | Black |
| Item Weight | 6 kg 600 g |
| Dimensions (LxWxH) | 32.9 x 43.4 x 24.1 Centimeters |

9. WARRANTY AND SUPPORT

Your Haier microwave oven comes with the following warranty:

- **Product Warranty:** 1 Year from the date of purchase.
- **Magnetron Warranty:** 3 Years from the date of purchase (Terms & Conditions Apply).

To avail warranty service, please retain your Amazon invoice as proof of purchase. For further assistance or to access the latest user manual, please visit the official Haier website or contact Haier customer support.

10. WHAT'S IN THE BOX

Upon unpacking, you should find the following items:

- 1 Microwave Oven
 - 1 Glass Tray
 - 1 Turntable Ring Assembly
 - 1 Instruction Manual
-