

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PERLESMITH](#) /

› [PERLESMITH Universal TV Stand Instruction Manual \(Models PSTVS11 & PSTVS02\)](#)

## PERLESMITH PSTVS11, PSTVS02

# PERLESMITH Universal TV Stand Instruction Manual

Models: PSTVS11 & PSTVS02

## INTRODUCTION

Thank you for choosing the PERLESMITH Universal TV Stand. This manual provides detailed instructions for the safe and proper assembly, operation, and maintenance of your TV stand. Please read this manual thoroughly before installation and keep it for future reference.

## IMPORTANT SAFETY INFORMATION

Please ensure all instructions are read and understood before assembly. If you have any doubts about the installation, please contact PERLESMITH customer service. Improper assembly or use may result in damage or serious injury.

- Do not exceed the maximum weight capacity specified for your TV stand model.
- Ensure the mounting surface (e.g., tabletop) can safely support the combined weight of the stand and your television.
- Use only the hardware provided by the manufacturer. Do not use damaged or missing parts.
- Keep children and pets away during assembly. Small parts may be a choking hazard.
- Periodically check that the stand is secure and stable.

## PRODUCT SPECIFICATIONS

This universal TV stand is designed to accommodate a wide range of television sizes and VESA patterns.

### Model PSTVS11

- **TV Size Compatibility:** Most 32" - 80" TVs
- **Weight Capacity:** Up to 99 lbs (45 kg)
- **VESA Compatibility:** 100x100mm (4"x4") up to 600x400mm (24"x16")
- **Base Dimensions:** 20.47" x 11.02" tempered glass

- **Material:** Alloy Steel, Tempered Glass

## ONE-PIECE INSTALLATION & CABLE MANAGEMENT



One-piece TV stand allow you to install in less than 15 Mins without any hassle!



Image: This image highlights the tempered glass base of the PERLESMITH PSTVS11 model, showing its dimensions as 20.47 inches in width and 11.02 inches in depth, emphasizing its robust design.

### Model PSTVS02

- **TV Size Compatibility:** Most 37" - 75" TVs
- **Weight Capacity:** Up to 88 lbs (40 kg)
- **VESA Compatibility:** 200x100mm (8"x4") up to 600x400mm (24"x16")
- **Base Dimensions:** 16.75" x 11.02" tempered glass
- **Material:** Alloy Steel, Tempered Glass

*Note: Always verify your TV's VESA pattern and weight before installation.*

# Larger Base, Stronger Stability



Image: This image illustrates the compatibility of the TV stand, showing it supports TVs from 37 to 75 inches, with a maximum load of 88 lbs, and various VESA mounting patterns including 600x400mm, 400x400mm, 400x300mm, 300x300mm, 300x200mm, 200x200mm, and 200x100mm.

# 9

## Height Settings

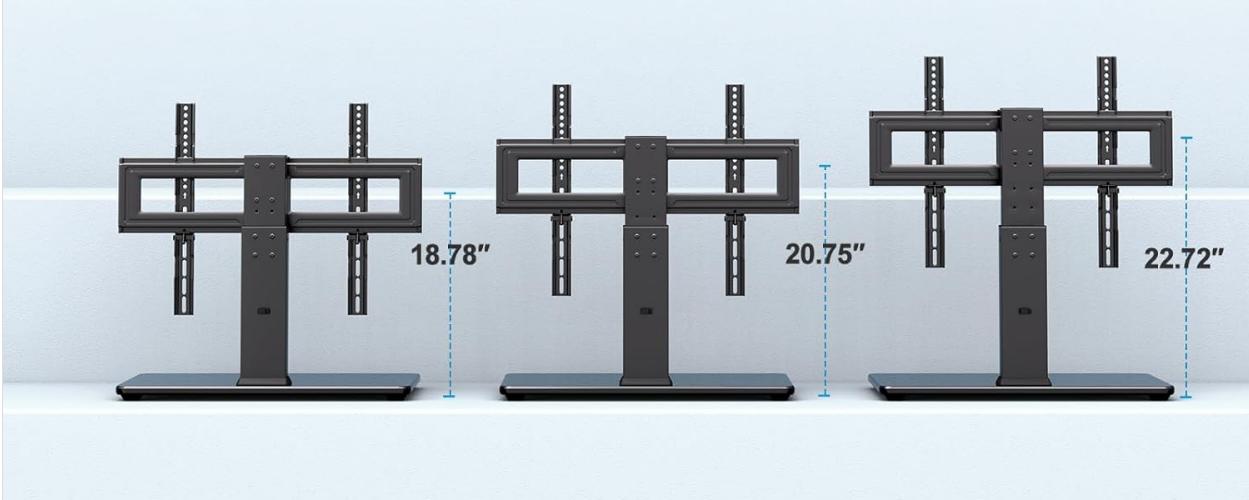


Image: This image highlights the base design of the PSTVS02 model, indicating enhanced stability. The base dimensions are shown as 16.75 inches wide and 11.02 inches deep.

### SETUP AND ASSEMBLY INSTRUCTIONS

The PERLESMITH Universal TV Stand features a one-piece design for simplified assembly. Follow these steps for quick and easy installation.

#### Step 1: Unpack and Verify Components

Carefully unpack all components and hardware. Refer to the included parts list (usually a diagram in the physical manual) to ensure all items are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

#### Step 2: Assemble the Stand Base and Pillar

The main pillar typically attaches to the tempered glass base. Ensure the pillar is securely fastened to the base using the provided screws and tools. Do not overtighten.

#### Step 3: Attach TV Brackets to Your Television

Identify the correct screws and spacers for your TV's VESA mounting holes. Attach the two vertical TV brackets to the back of your television. Ensure the brackets are level and securely fastened. The brackets should be positioned to allow for height adjustment later.

## Step 4: Mount the Television onto the Stand

With assistance, carefully lift your television and hook the attached brackets onto the main pillar's mounting plate. Ensure the TV is securely seated on the stand. Engage any safety locks or screws to prevent accidental dislodgement.



Image: This image demonstrates the one-piece installation process, highlighting that assembly can be completed in less than 15 minutes. It also shows integrated cable management, with cables routed neatly through the central pillar of the stand.

## OPERATING INSTRUCTIONS

### Height Adjustment

Your PERLESMITH TV stand offers multiple height settings to optimize your viewing experience. To adjust the height:

1. With assistance, carefully lift the television slightly to relieve pressure on the mounting hooks.
2. Adjust the position of the TV brackets on the main pillar to your desired height. The stand typically offers

9 height settings, with adjustments possible at the hook and the TV plate.

3. Ensure the TV is level and securely re-seated in the new position. Tighten any locking mechanisms if present.



Image: This image illustrates the 9 available height settings for the TV stand. It shows the TV mount mechanism with multiple adjustment points on the vertical brackets, allowing the television to be positioned at various heights.

# Swivel for a Better View



Image: This image provides a visual comparison, indicating that the PERLESMITH TV stand can offer a higher viewing position for televisions.

# HEIGHT ADJUSTABLE TV STAND

Larger height range to suit different viewing height or TV sizes



3 Height Adjustment of Hook



3 Height Adjustment of TV Plate

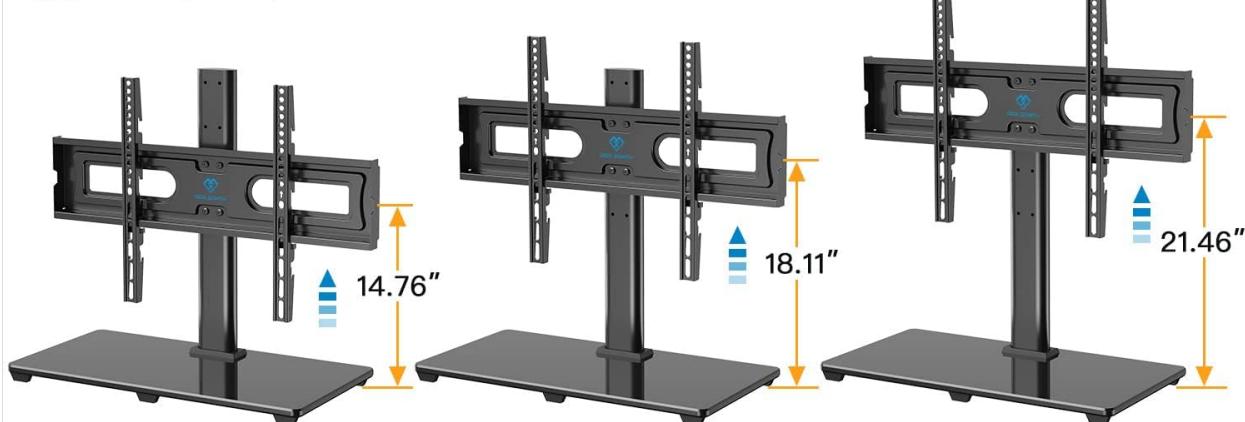


Image: This image details the height adjustment capabilities of the TV stand, showing three distinct height settings for the TV plate, ranging from 14.76 inches to 21.46 inches. It also indicates 3 height adjustments for the hook mechanism, each providing 2.17 inches of vertical movement.

## Swivel Function

Some models of the PERLESMITH Universal TV Stand offer a swivel feature, allowing you to rotate your television for optimal viewing angles.

- Gently grasp the sides of your television.
- Rotate the TV left or right to achieve your desired viewing angle. The stand typically allows for a swivel of up to  $\pm 35$  degrees.
- Avoid forcing the swivel beyond its intended range.

# BIGGER & SAFER TEMPERED GLASS BASE

## PERLESMITH



## OTHERS



Image: This image demonstrates the swivel capability of the PERLESMITH TV stand, showing a television rotated to an angle of  $\pm 35$  degrees. This feature allows for flexible viewing from different positions in a room.

## Cable Management

The stand includes integrated cable management features to keep your cables organized and out of sight. Route your TV and device cables through the central pillar to maintain a tidy appearance and prevent tripping hazards.

## MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the stand. For tempered glass surfaces, a mild glass cleaner can be used. Avoid abrasive cleaners or solvents that may damage the finish.
- Inspection:** Periodically check all screws and connections to ensure they remain tight and secure. Retighten if necessary.
- Stability:** Ensure the stand is always placed on a flat, stable surface. Avoid placing heavy objects on the stand's base that could compromise stability.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
TV is not level.	Brackets are not aligned or tightened evenly.	Loosen TV bracket screws, adjust TV to be level, then retighten securely. Ensure the stand is on a flat surface.
Stand feels unstable.	Screws are loose; stand is on an uneven surface; TV weight exceeds capacity.	Check and tighten all assembly screws. Move the stand to a flat, stable surface. Verify your TV's weight against the stand's capacity.
TV does not fit the stand.	Incorrect VESA pattern or TV size/weight.	Double-check your TV's VESA pattern, size, and weight against the specifications in this manual. Ensure you have the correct model stand for your TV.
Missing parts.	Packaging error.	Contact PERLESMITH customer support immediately for replacement parts. Do not attempt to substitute parts.

## WARRANTY AND CUSTOMER SUPPORT

PERLESMITH stands behind the quality of its products. For warranty information, technical assistance, or to report missing/damaged parts, please contact PERLESMITH customer support. Please have your product model number (PSTVS11 or PSTVS02) and purchase information ready when contacting support.

**Contact Information:** Please refer to the packaging or the official PERLESMITH website for the most current customer support contact details.

Website: [PERLESMITH Official Store](#)