



Manuals.plus /

› WUYJTIF /

› WUYJTIF X6 4.3-inch Handheld Portable Game Console User Manual

WUYJTIF X6

WUYJTIF X6 4.3-inch Handheld Portable Game Console User Manual

1. INTRODUCTION

This manual provides detailed instructions for the WUYJTIF X6 4.3-inch Handheld Portable Game Console. Please read this manual thoroughly before using the device to ensure proper operation and to maximize your experience.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1x WUYJTIF X6 Game Console
- 1x Charging Cable
- 1x User Manual (this document)

3. PRODUCT OVERVIEW AND FEATURES

The WUYJTIF X6 is a versatile handheld device designed for gaming and multimedia entertainment. Key features include:

- 4.3-inch LCD display
- Support for multiple game emulators
- Pre-loaded classic games
- Game archive function (save/load progress)
- Multimedia playback (music, video, e-books)
- TV-out support via AV cable
- Expandable storage via TF card (up to 64GB)
- Built-in rechargeable 1500mAh lithium battery



Figure 3.1: WUYJTIF X6 Handheld Game Console with its main menu interface.

More than appearance

Stronger performance



4.3-inch large screen



Photographing function



~~Camera function~~



Video playback



Music playing



E-book reading



Long endurance



Thousands of games



TF extension



Multiple controls



Recording function



Download games for free

Figure 3.2: Overview of the console's various functions including gaming, multimedia, and storage.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the console. Connect the provided charging cable to the console's charging port and a compatible USB power source (e.g., computer USB port, USB wall adapter). The charging indicator will illuminate during charging and turn off when fully charged.

Enjoy good music

Support mp3, wma / Ogg / ACC / WAV and APE / FLAC dual lossless music



Figure 4.1: Console charging indication and battery life.

4.2 Powering On/Off

To power on, press and hold the power button until the screen illuminates. To power off, press and hold the power button until the device shuts down.

4.3 Inserting a TF Card (Optional)

The console supports TF card expansion up to 64GB. Locate the TF card slot on the device. Gently insert the TF card with the metal contacts facing down until it clicks into place. To remove, push the card in slightly until it springs out.

5. OPERATING INSTRUCTIONS

5.1 Navigation

Use the directional pad (D-pad) or the analog stick (rocker) to navigate through menus and select options. The A/B/X/Y buttons and SELECT/START buttons are used for in-game actions and menu confirmations.

The two operations of key + rocker have different experience

Easy to make even tricks, long time playing without getting tired

Key + shake two kinds of control, different experience, smooth operation, help you easily kill the enemy, big moves come at hand

Direction key

Rocker



Figure 5.1: Directional keys and analog rocker for control.

5.2 Playing Games

From the main menu, navigate to the "Game Center" or the specific emulator icon to browse pre-loaded games. Select a game to start playing.



Figure 5.2: Console in use, demonstrating comfortable grip during gameplay.

5.2.1 Game Archiving (Save/Load Progress)

During gameplay, press the **SELECT** button to access the in-game menu. From this menu, you can save your game progress, quit the game, or restart. To continue a saved game, select the "Load" option from the in-game menu or the game selection screen.

5.2.2 Adding/Deleting Games

To manage games, connect the console to a computer using the provided USB cable. The console will appear as a removable storage device. Navigate to the "GAME" folder. You can add new game ROMs (compatible with supported emulators) or delete existing ones. You can also create new folders within the "GAME" directory to organize your titles.

Not just game consoles

There is more to be done



Mp3 music



Video playback



e-book



Take pictures
and videos



Figure 5.3: Supported game emulators on the console.

5.3 Multimedia Functions

The X6 console supports various multimedia functions:

- **Music Player:** Supports APE, MP3, WMA, ACC, FLAC audio formats. Navigate to the "Music" icon to access your audio files.
- **Video Player:** Supports AV, RMVB, MP4, and other video formats. Navigate to the "Movie" icon to watch videos.
- **E-book Reader:** Access and read e-books.
- **Recording:** Utilize the built-in recording function.

Support twelve simulators

Pre-installed to download massive resources and play immediately



Arcade



Boxing series



FC



GBA



MD



NEOGEO



NES



NES_CS



SFC



SMC



GB



GBC

Figure 5.4: Music playback feature with earphones.

5.4 TV Output

Connect the console to a television using an AV cable (not included, but supported). This allows you to play games or watch videos on a larger screen. Ensure your TV is set to the correct AV input channel.

6. MAINTENANCE

6.1 Cleaning

Wipe the console with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

6.2 Battery Care

The console contains a built-in rechargeable lithium battery. For optimal battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

6.3 Storage

Store the console in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

- **Console does not power on:** Ensure the battery is charged. Connect the charging cable and try again.
- **Screen is blank or frozen:** Press and hold the power button for 10-15 seconds to force a shutdown, then restart the console.
- **Games are not loading:** Verify that the game files are in a supported format and located in the correct directory. If using a TF card, ensure it is properly inserted and not corrupted.
- **No sound:** Check the volume settings on the console. Ensure headphones are properly connected if in use.
- **Cannot connect to TV:** Ensure the AV cable is securely connected to both the console and the TV. Verify the TV is set to the correct AV input source.

8. SPECIFICATIONS

Feature	Detail
Product Model	X6
Screen Size	4.3 inches
Game Formats	Supports twelve simulators (e.g., Arcade, FC, GBA, MD, NEOGEO, NES, SFC, GB, GBC)
Video Formats	AV, RMVB, MP4, and others
Battery Capacity	1500mAh
Storage Expansion	Supports TF card capacity 1GB-64GB
Multimedia Functions	Games, music, movies, e-books, recording
Music Formats	APE, MP3, WMA, ACC, FLAC
Connectivity	USB for computer connection, TV-out (AV cable)
Archive Function	Breakpoint memory (save/load game progress)
Dimensions	Approximately 1 x 1 x 1 inches
Weight	260g (including packaging)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's policy or contact the manufacturer directly. Keep your purchase receipt for warranty claims.