

Easytry22652

Generic Remote Control Instruction Manual for Poyank TP-01 M10 PJ0451 V6 Projector

Model: Easytry22652

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your new Generic replacement remote control. This remote is designed to be compatible with Poyank TP-01, M10, PJ0451, and V6 Mini LED LCD Portable Projectors. Please read this manual thoroughly before use to ensure proper functionality and longevity of your device.

Important Note: This is an infrared (IR) replacement remote. Ensure your original remote has the same appearance and button layout as shown in this manual for guaranteed compatibility. If your projector model is not listed, this remote may not be fully compatible.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Rear view of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.



Figure 2: Rear view of the remote control with the battery cover securely closed.

2. Initial Use

Once batteries are installed, point the remote control directly at the infrared receiver on your Poyank projector. The remote should function immediately without any additional pairing steps.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control. Below is a general overview of common functions:



Figure 3: Front view of the remote control, highlighting the button layout.

- **Power Button (●):** Located at the top right. Press to turn the projector ON or OFF.
- **Menu Button:** Accesses the projector's main menu for settings adjustments.
- **Source Button:** Cycles through available input sources (e.g., HDMI, USB, AV).
- **Navigation Buttons (Up, Down, Left, Right):** Used to navigate through menus and options.
- **OK Button:** Confirms selections within menus.
- **Play/Pause Button:** Controls media playback.
- **Previous/Next Track Buttons:** Skips to the previous or next media file.
- **Volume Up/Down Buttons:** Adjusts the audio output level.
- **Mute Button:** Toggles audio mute ON or OFF.
- **Exit Button:** Exits current menu or function.

For specific functions related to your projector model, please refer to your projector's original user manual.

MAINTENANCE

Cleaning

- Wipe the remote control with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface and markings.

Battery Replacement

- Replace batteries when the remote's range decreases or it becomes unresponsive.
- Always replace both AAA batteries at the same time.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

Storage

Store the remote control in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote has short range or intermittent response.	Weak batteries; Obstruction between remote and projector; Remote not pointed correctly.	Replace batteries. Ensure a clear line of sight to the projector's IR receiver. Point the remote directly at the projector.
Some buttons do not work.	Incompatibility with specific projector functions; Remote malfunction.	Verify the remote is the correct replacement for your projector model. Some advanced functions might not be supported by a generic replacement. If issues persist, contact support.

SPECIFICATIONS

- **Model:** Easytry22652
- **Connectivity Technology:** Infrared (IR)
- **Compatible Projectors:** Poyank TP-01, M10, PJ0451, V6 Mini LED LCD Portable Projector
- **Power Source:** 2 x AAA Batteries (not included)
- **Maximum Range:** 8 Meters (approx. 26 feet)
- **Color:** Black
- **Special Feature:** Ergonomic, Replacement

WARRANTY AND SUPPORT

Warranty Information

This product comes with a 90-day warranty, offering hassle-free returns. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, troubleshooting assistance, or warranty claims, please contact the seller directly through the platform where the purchase was made. Provide your order number and a detailed description of the issue for prompt support.

