

[Manuals.plus](#) /

> [warmiplanet](#) /

> warmiplanet 52 Inch Indoor Ceiling Fan User Manual

warmiplanet WICF15-1

warmiplanet 52 Inch Indoor Ceiling Fan User Manual

Model: WICF15-1

Brand: warmiplanet

PRODUCT OVERVIEW

The warmiplanet 52 Inch Indoor Ceiling Fan with Lights and Remote Control is designed to provide efficient air circulation and adjustable lighting for indoor spaces. It features a silent reversible DC motor, 6-speed settings, and a 3-color dimmable LED light. The fan is equipped with a multi-function remote control and a memory function for convenience.



Image: warmiplanet 52 Inch Indoor Ceiling Fan, showcasing its sleek design and integrated LED light.

SAFETY INFORMATION

Please read and understand all instructions before beginning installation. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- Ensure the power is turned off at the circuit breaker before installation or maintenance.
- All wiring must be in accordance with national and local electrical codes.
- The fan must be mounted to a ceiling joist or a securely mounted outlet box capable of supporting the fan's weight.
- Do not operate the fan if any part is damaged. Contact customer support for assistance.
- Keep hands and objects clear of the fan blades during operation.

PACKAGE CONTENTS

Verify that all components listed below are included in your package:

- Up Canopy
- Down Rod
- Blades (5)

- Motor
- Light Plate
- Hanging Bracket
- Down Canopy
- Hardware Fitting (screws, washers, etc.)
- Remote Control
- Light Cover
- Blade Holder



Image: Various components of the ceiling fan, including the canopy, down rod, and blades.

INSTALLATION INSTRUCTIONS

For a detailed visual guide, please refer to the official installation video below. The following steps summarize the installation process:

Your browser does not support the video tag.

Video: Official warmiplanet 52 inch ceiling fan installation guide. This video provides step-by-step visual instructions for assembling and mounting the fan.

1. **Determine Your Ceiling Type:** Identify if your ceiling is concrete or wooden. For concrete ceilings, install the hanging bracket to the octagon box using 2 machine screws and iron washers. For wooden ceilings, use 2 wood screws and iron washers.
2. **Prepare the Downrod:** Loosen the two screws on the coupler. Pull out the R-pin from the rod and disassemble the downrod. Install the up canopy and down canopy to the downrod.
3. **Assemble Motor and Downrod:** Feed the wires through the downrod. Insert the cross-pin and fix it with the R-pin. Tighten the two screws on the coupler. Push the hemisphere upward and ensure the small rod falls into the groove of the hemisphere. Tighten the screws on the hemisphere.
4. **Hang the Fan:** Hang the fan to the hanging bracket. Ensure the bulge on the hanging bracket aligns with the notch on the hemisphere. Connect the wires from the motor to the receiver. Connect the wires on the other side of the receiver to the home circuit (Live, Neutral, Ground).
5. **Secure the Canopy:** Rotate the up canopy to cover the hanging bracket. Tighten the two screws to secure it.
6. **Install Blades:** Install each blade to its respective blade holder. Remove the screws used to install the blades from the motor. Install the blades onto the motor, tightening the screws securely.
7. **Install Light Plate and Cover:** Remove the three screws used to install the light plate. Connect the light power cord. Install the light plate. Rotate the light cover until it is fixed securely.

OPERATING INSTRUCTIONS

The warmiplanet ceiling fan is controlled via the included multi-function remote. Ensure batteries are installed correctly in the remote control.



Image: The multi-functional remote control, showing buttons for speed, light, and timer settings.

- **Power On/Off:** Use the power button on the remote to turn the fan and light on or off.
- **Fan Speed:** Select from 6 available speeds using the speed buttons (1-6) on the remote.
- **Light Control:**
 - **Color Temperature:** Cycle through 3 color temperatures (3000K Warm Light, 4000K Natural Light, 6000K Cool White Light) using the light color temperature button.
 - **Dimmable:** Adjust brightness from 10% to 100% using the dimming buttons (+/-).
- **Reversible Function:** The fan features a reversible DC motor. Use the reverse button on the remote to change the direction of airflow.
 - **Summer Mode:** Counter-clockwise rotation for downward airflow, creating a cooling effect.
 - **Winter Mode:** Clockwise rotation for upward airflow, circulating warm air.

Product Dimension



52 in

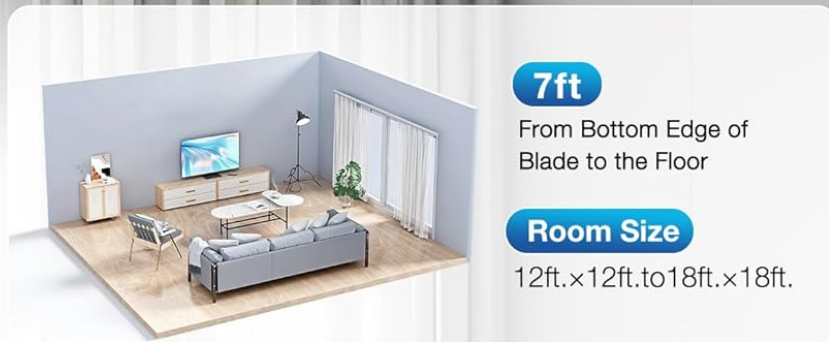


Image: Illustration of the fan's reversible function for summer (cooling) and winter (warming) air circulation.

- **Timer Function:** Set the fan to turn off automatically after 1, 3, or 6 hours using the timer buttons on the remote.
- **Memory Function:** The fan and light retain the last used speed and light settings when turned off and back on.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Dust the fan blades and motor housing regularly with a soft, damp cloth. Do not use abrasive cleaners or solvents.

- **Blade Balance:** If the fan wobbles, check that all blade screws are tightened. Ensure blades are not bent or damaged.
- **Light Source:** The LED light is replaceable. If replacement is needed, ensure power is off and follow the light plate installation steps in reverse.
- **General Check:** Periodically check all connections and screws to ensure they are secure.

TROUBLESHOOTING

If you encounter issues with your warmiplanet ceiling fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start.	No power to the fan; loose wire connections; remote control issues.	Check circuit breaker. Ensure all wire connections are secure. Replace remote control batteries.
Fan wobbles.	Loose blade screws; unbalanced blades; loose mounting bracket.	Tighten all blade screws. Check blade balance. Ensure hanging bracket is securely installed.
Light does not work.	Loose light wire connection; faulty LED light plate.	Check light power cord connection. Contact customer support for LED light plate replacement if necessary.
Remote control not working.	Dead batteries; receiver issue.	Replace batteries in the remote. Ensure the receiver is correctly wired.
Fan is noisy.	Loose screws; motor issue.	Check and tighten all screws. If noise persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	warmiplanet
Model Name	WICF15-1
Color	Black
Size	52 inch
Product Dimensions	52"D x 52"W x 12.6"H
Power Source	DC
Wattage	30.00 W
Voltage	120 Volts
Number of Blades	5
Blade Material	Wood

Feature	Detail
Air Flow Capacity	4038 Cubic Feet Per Minute
Light Type	LED (24-watt, 3-color dimmable)
Control Method	Remote
Room Type	Indoor
Special Features	Adjustable Color Temperature, Dimmable, Timer, Reversible DC Motor, Memory Function

Multi-functional Remote Control



6 Wind Speeds

3 Color Temperature

Dimmable

Reversible Function

Image: Diagram illustrating the dimensions of the warmiplanet 52 Inch Ceiling Fan.

WARRANTY AND SUPPORT

warmiplanet stands behind the quality of its products:

- **Motor Warranty:** 10 years
- **Whole Fan Warranty:** 2 years

For any questions, installation problems, or support needs, please feel free to contact warmiplanet customer

support. They are available 24 hours and aim to reply within 24 hours to assist you.

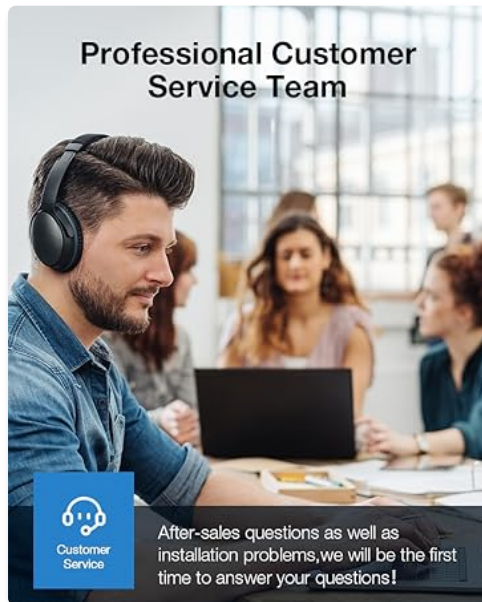


Image: A customer service representative, symbolizing available support.