



[Manuals.plus](#) /

› [CHIPEL](#) /

› CHIPEL Fully Automatic Sole Cleaning Machine Instruction Manual

## CHIPEL CHIPEL

# CHIPEL Fully Automatic Sole Cleaning Machine Instruction Manual

Model: CHIPEL

## 1. INTRODUCTION

Thank you for choosing the CHIPEL Fully Automatic Sole Cleaning Machine. This device is designed to efficiently clean the soles of various footwear, helping to maintain cleanliness in your environment. This manual provides essential information for the safe and effective use, setup, operation, and maintenance of your sole cleaning machine.



Image 1: Overview of the CHIPEL Automatic Sole Cleaning Machine.

## 2. SAFETY INFORMATION

Please read all safety instructions carefully before operating the device. Retain this manual for future reference.

- Ensure the device is placed on a stable, level surface.
- Do not immerse the device in water or expose it to excessive moisture.
- Keep the device out of reach of children and pets.
- Use only the provided charging cable and adapter.
- Do not attempt to disassemble or repair the device yourself. Contact qualified personnel for service.
- Avoid placing heavy objects on the device.
- Ensure hands are dry before handling the device or power cord.

## 3. PRODUCT OVERVIEW AND COMPONENTS

The CHIPEL Automatic Sole Cleaning Machine features a compact design with powerful cleaning capabilities. Key components include:

- **Main Unit:** Houses the motor, battery, and control electronics.
- **Rotating Brushes:** Multiple rows of specialized brushes for effective sole cleaning.
- **Induction Sensors:** Detect foot presence to activate cleaning.
- **Power Switch:** On/Off control.
- **Charging Port:** For recharging the internal battery.

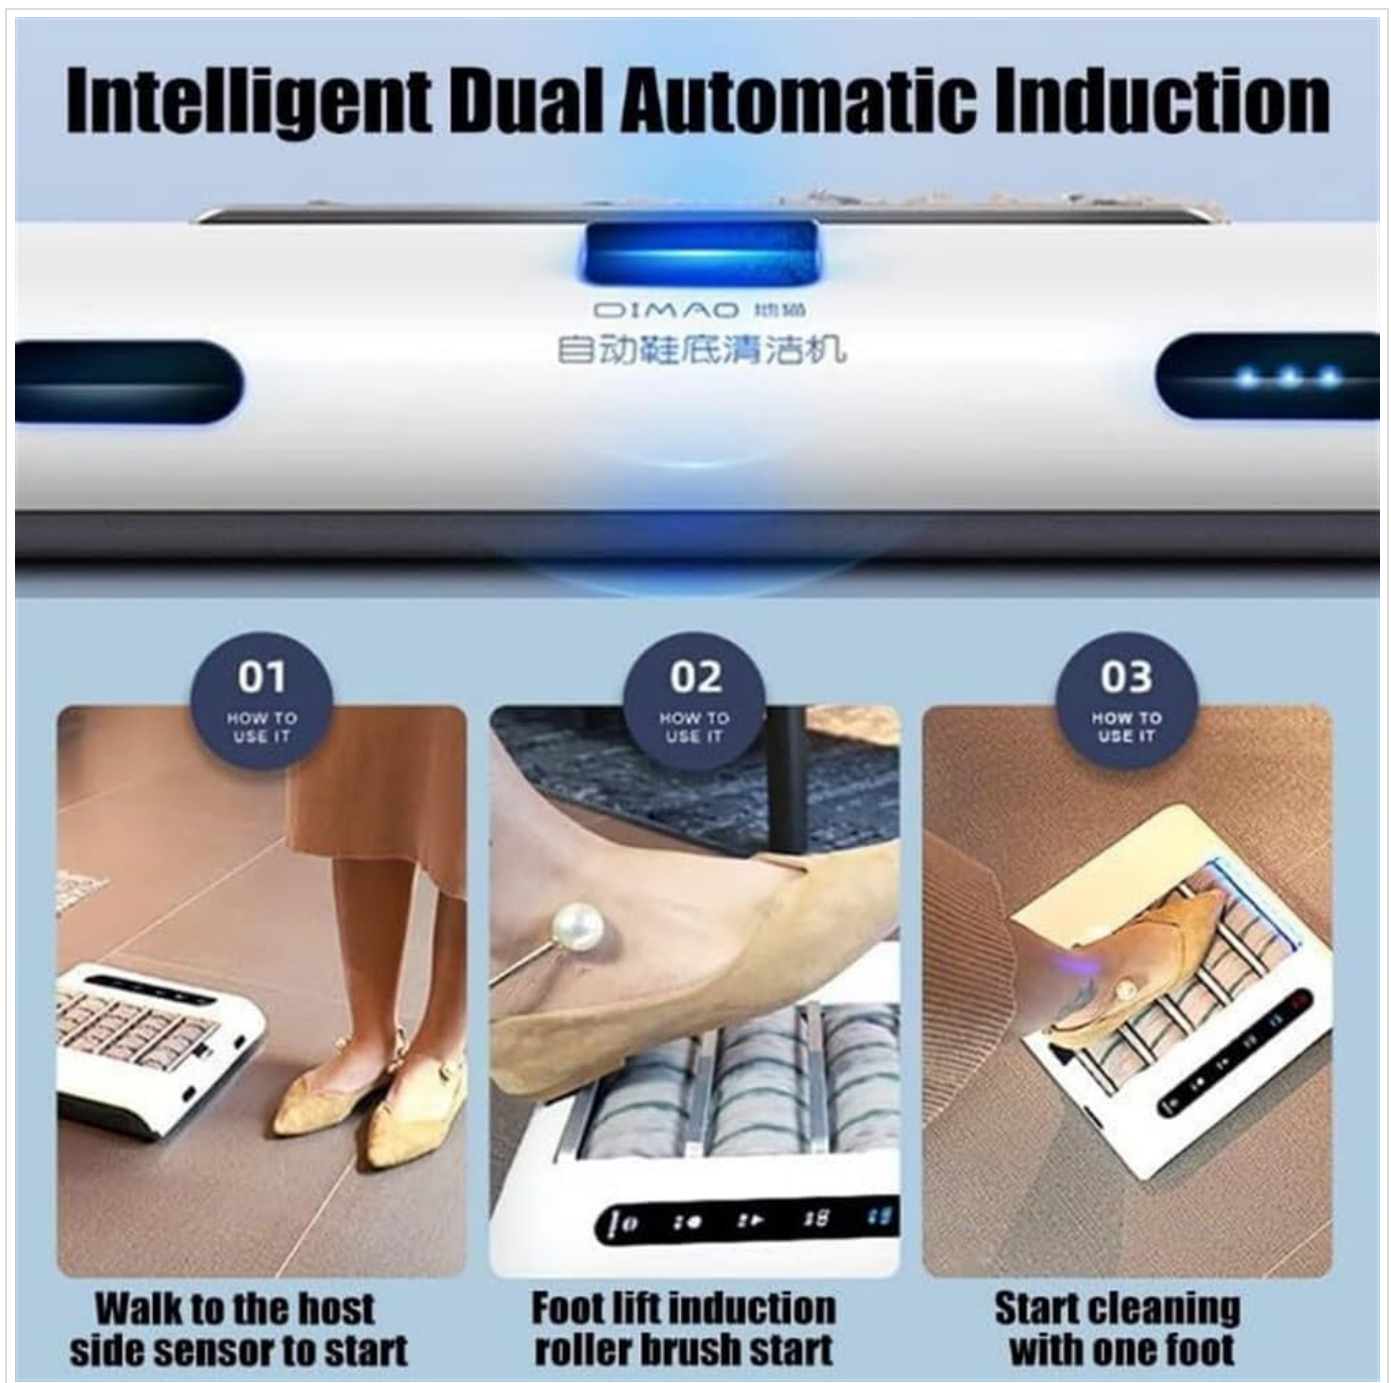


Image 2: Detail of the cleaning brushes and induction area.

The device operates with a speed of 260 rpm and features a 1000Pa suction for efficient dust removal. It is constructed from durable ABS polymer material.

## 4. SETUP

1. **Unpacking:** Carefully remove the sole cleaning machine from its packaging. Verify all components are present.
2. **Placement:** Place the machine on a flat, stable surface near an entrance or in a convenient location. Its compact size allows for flexible placement.

3. **Initial Charge:** Before first use, fully charge the device. Connect the charging cable to the charging port and plug it into a suitable power outlet. The battery capacity is 2600mAh.



Image 3: Charging the device.

## 5. OPERATION

The CHIPEL Sole Cleaning Machine features automatic induction for ease of use.

1. **Power On:** Locate the power switch (usually a red button on the side) and turn the device on.
2. **Initiate Cleaning:** Walk towards the machine. The intelligent dual detection system will sense your presence.
3. **Sole Cleaning:** Lift one foot and place its sole onto the rotating brushes. The brushes will automatically activate. Move your foot gently across the brushes to clean the entire sole.
4. **Repeat for Other Foot:** Once one sole is clean, lift that foot and repeat the process for the other foot.
5. **Completion:** The machine will stop automatically once your foot is lifted from the brushes.

# Automatic Sole Cleaning Machine



  
**dual  
induction**

  
**Healthy  
sterilization**

  
**powerful  
cleaning**

  
**Multiple  
shoes**

  
**Long-lasting  
battery**

  
**Outstanding  
appearance**

Image 4: Demonstrating foot placement for cleaning.

This water-free cleaning method uses high-frequency friction (20 times/second) and strong suction to remove dust and dirt effectively. It is suitable for various types of footwear, including leather shoes, sports shoes, high heels, and slippers.



Image 5: Versatility for various footwear.

## 6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your sole cleaning machine.

- **Brush Cleaning:** Periodically inspect the rotating brushes for accumulated debris. Gently remove any trapped dirt or fibers. The brushes are designed for water-free cleaning, so avoid using water directly on them unless specified by the manufacturer.
- **Exterior Cleaning:** Wipe the exterior of the machine with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place.

## 7. TROUBLESHOOTING

If you encounter any issues with your CHIPEL Sole Cleaning Machine, please refer to the following common solutions:

- **Device not turning on:**

- Ensure the power switch is in the "ON" position.
- Check if the battery is charged. Connect the device to power and allow it to charge.

- **Brushes not rotating:**

- Confirm the device is powered on and charged.
- Ensure your foot is properly placed over the induction sensors.
- Check for any obstructions or debris jamming the brushes.

- **Reduced cleaning performance:**

- Clean the brushes as described in the Maintenance section.
- Ensure the device is fully charged.

For issues not resolved by the above steps, please contact customer support.

## 8. SPECIFICATIONS

<b>Brand</b>	CHIPEL
<b>Model Number</b>	CHIPEL
<b>Dimensions (L x W x H)</b>	350mm x 353mm x 53mm (13.78"L x 13.9"W x 2.09"H)
<b>Product Weight</b>	4 Kg (approx. 8.8 lbs)
<b>Battery</b>	2600mAh
<b>Voltage</b>	12V
<b>Speed</b>	260 rpm
<b>Material</b>	ABS Polymer Material (Acrylonitrile Butadiene Styrene)
<b>Noise Level</b>	≤ 55 decibels
<b>Cleaning Suction</b>	1000Pa



Image 6: Product dimensions.

## 9. WARRANTY AND SUPPORT

Specific warranty information is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please refer to the purchase documentation or contact the retailer or CHIPEL customer service directly.

Please have your model number (CHIPEL) and purchase date available when contacting support.