

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [MIRASTON](#) /

> [MIRASTON 3.6QT Air Fryer Instruction Manual \(Model MS-1801-BLKN\)](#)

MIRASTON MS-1801-BLKN

MIRASTON 3.6QT Air Fryer Instruction Manual

Model: MS-1801-BLKN

1. INTRODUCTION

Thank you for purchasing the MIRASTON 3.6QT Air Fryer. This appliance utilizes advanced air circulation technology to cook a variety of foods with minimal oil, promoting healthier cooking. Please read this manual thoroughly before first use to ensure safe and efficient operation. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To prevent electric shock, fire, or injury, always follow basic safety precautions when using electrical appliances.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, level, heat-resistant surface.

- Do not block any ventilation openings.

3. PRODUCT OVERVIEW AND COMPONENTS

The MIRASTON 3.6QT Air Fryer is designed for compact use while offering ample cooking capacity. It features intuitive knob controls for temperature and time settings.



Figure 3.1: Main unit of the MIRASTON 3.6QT Air Fryer with its removable crisper tray.

Components:

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Features two rotary knobs for adjusting time and temperature.
- **Fry Basket:** Non-stick coated basket for holding food during cooking.
- **Crisper Tray:** Removable tray inserted into the fry basket to allow air circulation around food.
- **Handle:** For safely pulling out and inserting the fry basket.

Dimensions:

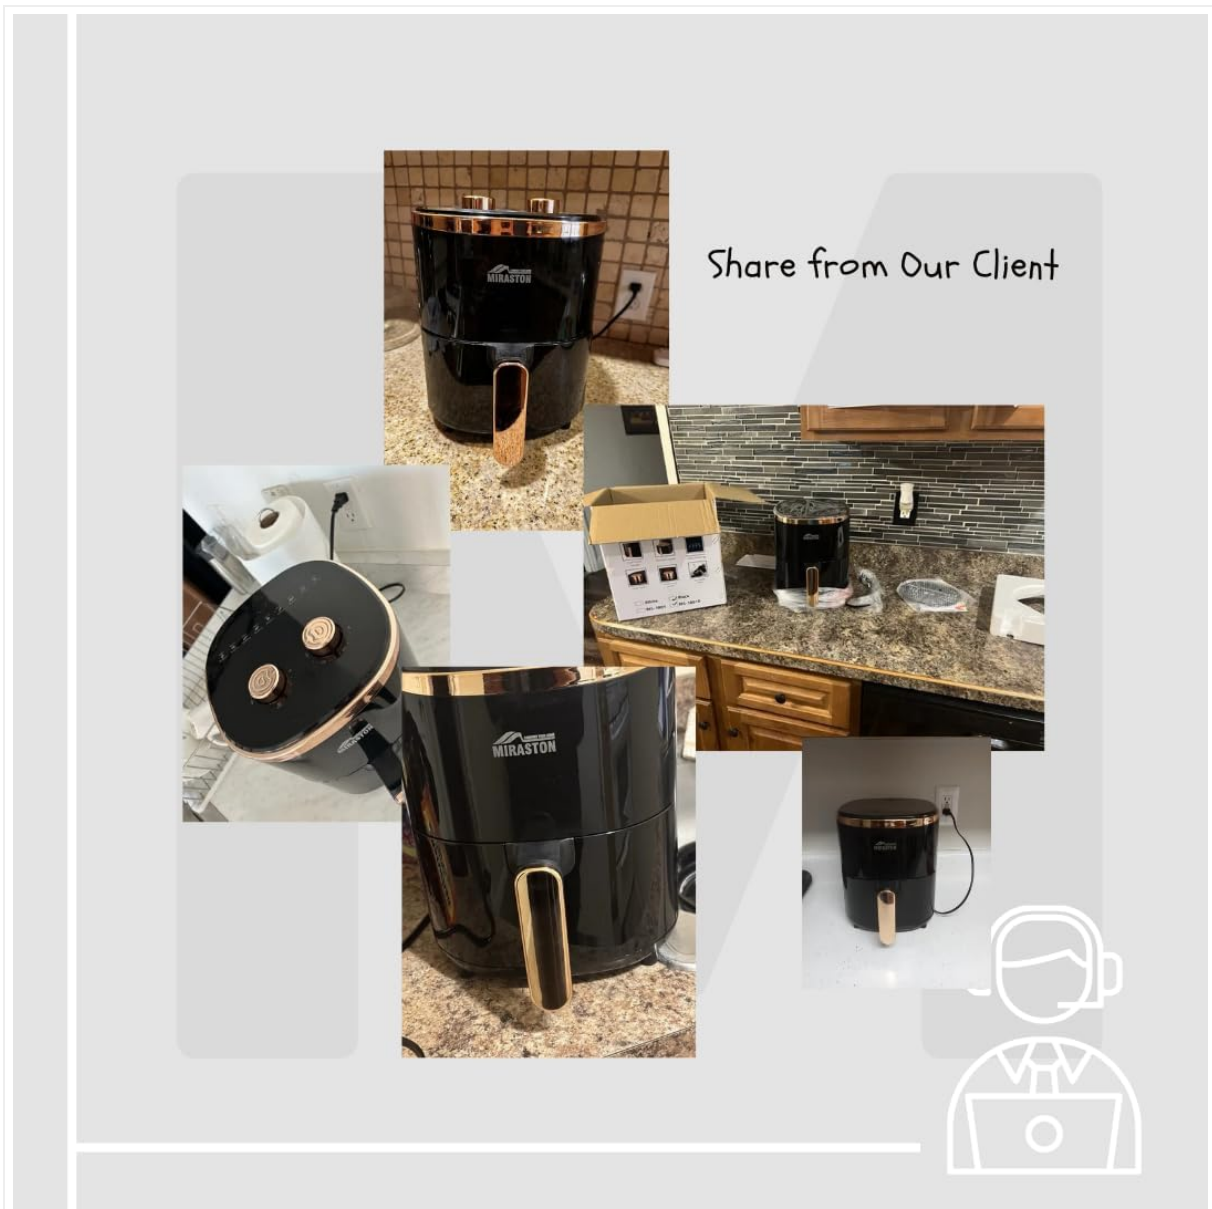


Figure 3.2: The air fryer measures approximately 10 inches deep, 12.2 inches wide, and 12.6 inches high.

- Product Dimensions: 10"D x 12.2"W x 12.6"H
- Nonstick Fry Basket: 6.7"D x 6.5"W x 3.9"H
- Removable Crisper Tray: 6.7"D x 6.3"W

4. SETUP AND FIRST USE

Unpacking:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Remove all accessories from the packaging.

Cleaning Before First Use:

1. Wipe the exterior of the main unit with a damp cloth.
2. Clean the fry basket and crisper tray with hot water, dish soap, and a non-abrasive sponge. These parts are also dishwasher safe.
3. Rinse thoroughly and dry all parts completely before use.

Placement:

1. Place the air fryer on a stable, level, and heat-resistant surface.
2. Ensure there is at least 4 inches (10 cm) of clear space around the back and sides of the appliance to allow for proper ventilation.
3. Do not place the appliance directly against a wall or under cabinets.

5. OPERATING INSTRUCTIONS

The MIRAOSTON 3.6QT Air Fryer features simple knob controls for adjusting cooking time and temperature.

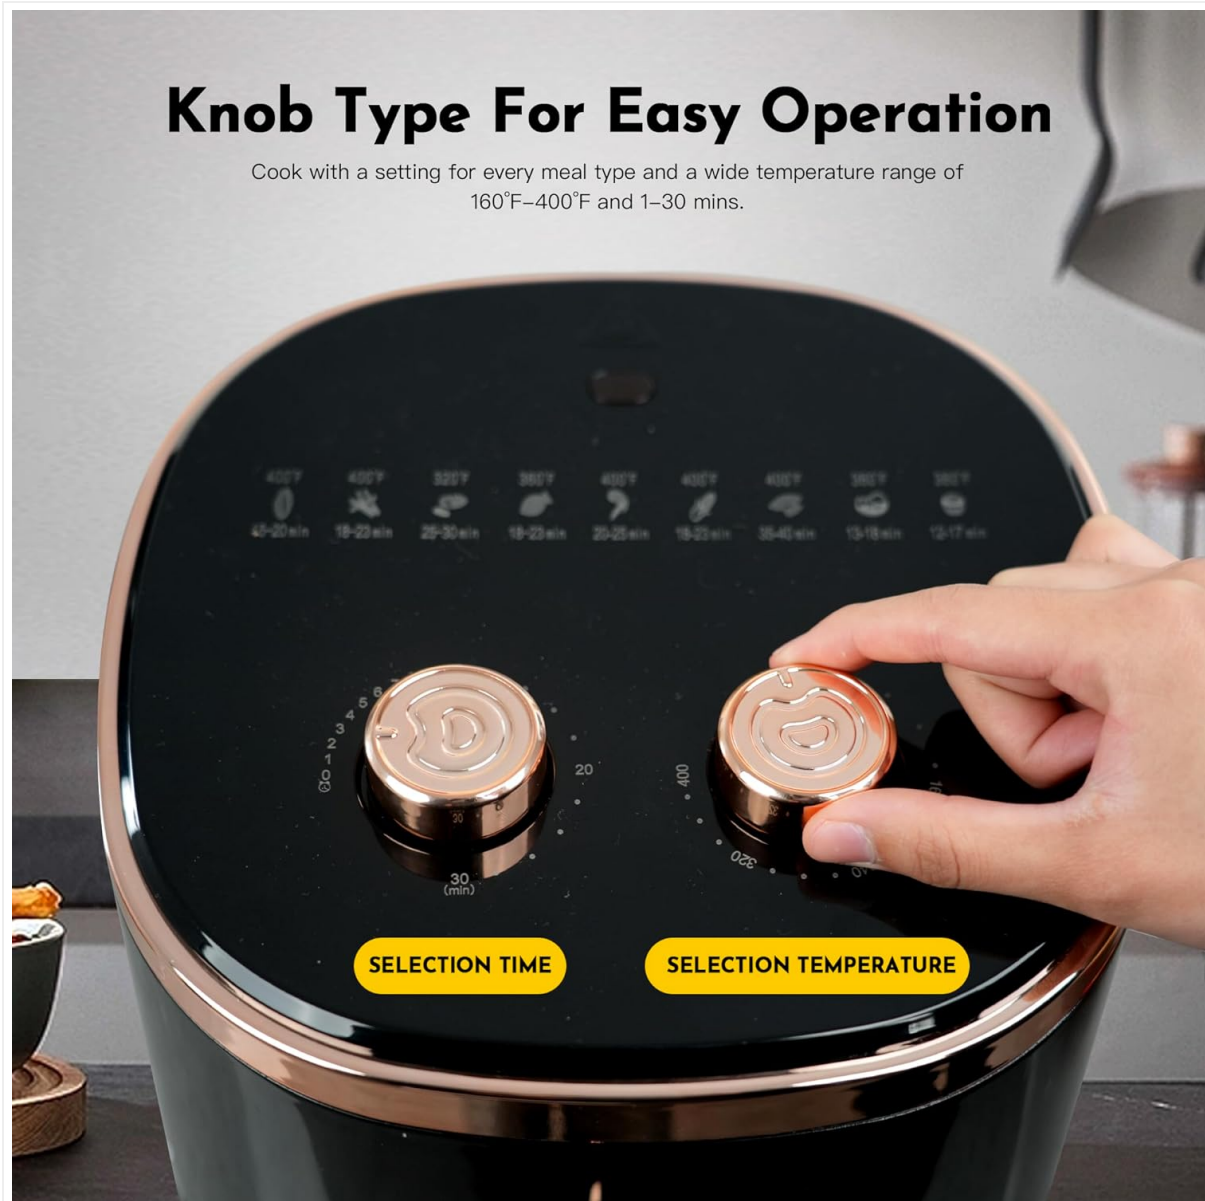


Figure 5.1: The control panel features two rotary knobs for time and temperature adjustment.

Basic Operation:

1. **Prepare Food:** Place your ingredients into the fry basket, ensuring not to overfill. For best results, do not exceed the MAX fill line.
2. **Insert Basket:** Slide the fry basket back into the main unit until it clicks securely into place.
3. **Plug In:** Connect the power cord to a grounded wall outlet.
4. **Set Temperature:** Turn the temperature knob (right knob) to your desired cooking temperature,

ranging from 160°F to 400°F.

5. **Set Time:** Turn the timer knob (left knob) to your desired cooking time, up to 30 minutes. The air fryer will automatically begin heating once the timer is set.
6. **Cooking Process:** The air fryer will heat up and circulate hot air. The indicator light will illuminate during operation.
7. **Shaking (Optional):** For even cooking, especially with smaller items like fries, pull out the basket halfway through the cooking time and shake the contents. Reinsert the basket to resume cooking.
8. **Completion:** The air fryer will automatically shut off when the timer reaches zero, and a bell will sound.
9. **Remove Food:** Carefully pull out the fry basket using the handle. Place it on a heat-resistant surface. Use tongs to remove cooked food.
10. **Cool Down:** Allow the appliance to cool completely before cleaning or storing.



Figure 5.2: Food being air-fried inside the basket, demonstrating the cooking process.

6. COOKING GUIDE

The following table provides general guidelines for cooking various foods. Cooking times and temperatures may vary based on food quantity, size, and desired crispness. Always ensure food is cooked to a safe internal temperature.



Figure 6.1: A visual guide for recommended cooking times and temperatures for common air fryer foods.

Recommended Cooking Settings

Food Item	Temperature	Time	Notes
French Fries (frozen)	400°F	18-23 min	Shake halfway
Chicken Wings	400°F	15-20 min	Flip halfway
Fish Fillets	360°F	18-23 min	
Potatoes (chunks)	360°F	20-25 min	Shake halfway
Steak	400°F	13-18 min	Depends on thickness/doneness
Vegetables	360°F	12-17 min	Shake halfway

7. MAINTENANCE AND CLEANING

Regular cleaning of your air fryer will ensure optimal performance and extend its lifespan.

Cleaning Procedure:

- Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
- Clean Fry Basket and Crisper Tray:**
 - Remove the fry basket and crisper tray.
 - Wash them in hot water with dish soap and a non-abrasive sponge.
 - Alternatively, these parts are dishwasher safe for convenient cleaning.
- Clean Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn food residue, use a mild detergent. Avoid abrasive cleaners or scouring pads.
- Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth.
- Heating Element:** If necessary, gently clean the heating element with a soft brush to remove any food particles.
- Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing the appliance.



MIRASTON
COMFORT YOUR HOME

Large 3.6QT Capacity

Air fryers are small but can hold up to 3.6 quart

Figure 7.1: The non-stick fry basket and crisper tray are dishwasher safe for easy cleaning.

Storage:

Store the air fryer in a cool, dry place, ensuring the power cord is neatly wrapped and not kinked.

8. TROUBLESHOOTING

If you encounter any issues with your MIRASTON Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on	Appliance not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
	Power outlet malfunction.	Test the outlet with another appliance or try a different outlet.
Food is not cooked evenly	Basket is overfilled.	Cook food in smaller batches.

Problem	Possible Cause	Solution
	Food not shaken/flipped.	Shake or flip food halfway through cooking.
Food is not crispy	Not enough oil (for certain foods).	Lightly spray or brush food with a small amount of oil.
	Temperature or time too low.	Increase temperature or cooking time as needed.
White smoke coming from appliance	Grease residue from previous use.	Clean the fry basket and crisper tray thoroughly after each use.
	Cooking fatty food.	This is normal for fatty foods. Ensure the basket is clean.

If the problem persists after trying these solutions, please contact customer support.

9. SPECIFICATIONS

Feature	Specification
Brand	MIRASTON
Model Name	MS-1801-BLKN
Capacity	3.6 Quarts (3.5 Liters)
Product Dimensions	10"D x 12.2"W x 12.6"H
Output Wattage	1350 Watts
Voltage	120 Volts
Control Method	Knob
Material	Plastic
Nonstick Coating	Yes
Dishwasher Safe Parts	Fry Basket, Crisper Tray
Item Weight	8 Pounds
Air Frying Technology	Air Circulation Technology

10. WARRANTY AND SUPPORT

Warranty Information:

MIRASTON offers a **12-month service repair and replacement warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.

Customer Support:

If you have any questions about your MIRAston 3.6QT Air Fryer, require technical assistance, or need to claim warranty service, please contact MIRAston customer support. Refer to your purchase documentation or the MIRAston official website for contact details.