

## Smart Tech 40FN10T1

# SMART TECH 40FN10T1 LED-TV User Manual

MODEL: 40FN10T1

## 1. INTRODUCTION

Welcome to your new SMART TECH 40FN10T1 LED-TV. This manual provides essential information for setting up, operating, and maintaining your 40-inch Full HD television. Please read this manual thoroughly before using the product and keep it for future reference.

## 2. SAFETY INFORMATION

Always observe the following safety precautions to avoid electric shock, fire, or damage to the TV.

- Do not expose the TV to rain or moisture.
- Do not open the TV casing; refer all servicing to qualified personnel.
- Ensure proper ventilation around the TV. Do not block ventilation openings.
- Protect the power cord from being walked on or pinched.
- Unplug the TV during lightning storms or when unused for long periods.
- Use only the specified voltage (2.3E+2 Volt AC).

## 3. PACKAGE CONTENTS

Please check that all items are present and in good condition:

- SMART TECH 40FN10T1 LED-TV Unit
- Remote Control
- AA Batteries (for remote control)
- Power Cable
- Stand Components (2 feet, screws)
- User Manual (this document)

## 4. SETUP

### 4.1 Unpacking

Carefully remove the TV from its packaging. It is recommended to keep the original packaging for future transport or servicing.

### 4.2 Stand Installation

If you are not wall-mounting the TV, attach the stand feet as follows:

1. Place the TV face down on a soft, clean surface to prevent screen damage.
2. Align each stand foot with the corresponding slots on the bottom of the TV.
3. Secure each foot with the provided screws.
4. Carefully lift the TV to an upright position on a stable, level surface.

### 4.3 Connecting Cables

Ensure the TV is unplugged before making any connections.

- **HDMI Devices:** Connect your Blu-ray player, game console, or set-top box to the HDMI ports. This TV supports HDMI signal format.
- **Antenna/Cable:** Connect your DVB-T2 antenna cable to the 'ANT IN' port for digital terrestrial broadcasting.
- **Power:** Once all other connections are made, plug the power cable into the TV and then into a wall outlet.



This image shows the front view of the SMART TECH 40FN10T1 LED-TV, featuring a slim black bezel and two V-shaped stand feet. The screen displays a scenic image of an ancient Asian building reflected in water.

## 4.4 First Time Setup Wizard

Upon first power-on, the TV will guide you through an initial setup wizard. This includes language selection, country, network connection (WLAN), and channel scanning for DVB-T2.

## 5. OPERATING

---

### 5.1 Remote Control Overview

The remote control allows you to access all TV functions. Insert the provided AA batteries into the remote control, ensuring correct polarity.

### 5.2 Basic Functions

- **Power:** Press the power button to turn the TV on or off.
- **Volume:** Use the VOL +/- buttons to adjust the sound level.
- **Channel:** Use the CH +/- buttons to change channels.
- **Input:** Press the INPUT button to select between connected devices (HDMI 1, HDMI 2, TV, etc.).

### 5.3 Smart TV Features

This TV supports various internet services via its WLAN connectivity. Access these features through the main menu to enjoy streaming apps, web browsing, and more.

### 5.4 Menu Navigation

Press the MENU button on your remote to access the TV's settings. Use the arrow keys to navigate and the OK button to confirm selections. Settings include Picture, Sound, Network, Channels, and System.

### 5.5 DVB-T2/H.264 Tuning

After connecting your antenna, navigate to the 'Channel' menu and select 'Auto Scan' to find available digital terrestrial channels (DVB-T2, H.264 compatible).

## 6. MAINTENANCE

---

To ensure the longevity of your TV, follow these maintenance guidelines:

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen cleaner specifically designed for TVs, applied to the cloth, not directly to the screen.
- **Cleaning the Body:** Use a soft, dry cloth to wipe the TV's casing. Do not use abrasive cleaners or solvents.
- **Ventilation:** Ensure the ventilation openings are clear of dust and debris.
- **Power Off:** Always unplug the TV before cleaning.

## 7. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
No Power	Power cable not connected; outlet not working.	Check power cable connection; test outlet with another device.
No Picture, but Sound is Present	Incorrect input source selected; external device issue.	Press INPUT button to select correct source; check external device connection.
No Sound	Volume too low or muted; external audio system issue.	Increase volume; check mute status; verify external audio connections.
Remote Control Not Working	Batteries depleted or incorrectly inserted; obstruction.	Replace batteries (AA-Batterien); ensure correct polarity; remove obstructions.
Cannot Connect to WLAN	Incorrect password; router issue; TV too far from router.	Re-enter password; restart router; move TV closer to router or use a Wi-Fi extender.

## 8. SPECIFICATIONS

Feature	Description
Brand	Smart Tech
Model Number	256068
Screen Diagonal	101.6 cm (40 Zoll)
Resolution	1080p (Full HD)
Special Feature	Flat
Connectivity Technology	HDMI, WLAN
Supported Internet Services	[VARIOUS]
Voltage	2.3E+2 Volt (AC)
Audio Output Mode	Surround
Battery Description (Remote)	AA-Batteries
Signal Format	HDMI
First Available on Amazon.de	10. April 2024

## 9. WARRANTY AND SUPPORT

Your SMART TECH 40FN10T1 LED-TV comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support or service inquiries, please contact your retailer or visit the official Smart Tech website.

You can visit the Smart Tech store on Amazon for more information:[Smart Tech Store](#)