

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Infinix](#) /
- › [Infinix Hot 40i X6528 Smartphone User Manual](#)

Infinix X6528

Infinix Hot 40i X6528 Smartphone User Manual

Model: X6528

[Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

PRODUCT OVERVIEW

The Infinix Hot 40i X6528 is a powerful and elegant smartphone designed for seamless daily use. It features a 6.6-inch HD display, 8GB RAM, 256GB internal storage, and a long-lasting 5000mAh battery. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.



Image: Rear view of the Infinix Hot 40i X6528 smartphone, highlighting the camera module and brand logo.

SETUP GUIDE

1. Unboxing and Initial Inspection

Carefully unpack your Infinix Hot 40i X6528 and check for all included accessories:

- Infinix Hot 40i X6528 Smartphone
- Charger
- USB Cable
- SIM Ejector Tool
- Quick Start Guide (if included)

2. SIM Card and Memory Card Installation

Your device supports dual SIM cards and expandable memory. Follow these steps to install them:

1. Locate the SIM card tray on the side of your phone.
2. Insert the SIM ejector tool into the small hole next to the tray and press gently until the tray pops out.
3. Place your Nano-SIM cards and/or microSD card into the designated slots on the tray. Ensure the gold contacts face downwards.
4. Carefully push the tray back into the phone until it clicks into place.



Image: Rear view of the Infinix Hot 40i X6528, indicating the position of the SIM card tray.

3. Charging the Device

Before first use, fully charge your phone. Connect the USB cable to the charger and then to your phone's charging port. Plug the charger into a power outlet. The battery indicator on the screen will show charging progress.

4. Powering On and Initial Setup

Press and hold the Power button until the Infinix logo appears. Follow the on-screen instructions to complete the initial setup, including language selection, Wi-Fi connection, Google account setup, and security settings.

OPERATING INSTRUCTIONS

1. Basic Navigation

- **Touchscreen Gestures:** Tap to select, swipe to scroll, pinch to zoom.

- **Power Button:** Press to wake/sleep the screen, press and hold to power off or restart.
- **Volume Buttons:** Adjust media volume, call volume, or notification volume.

2. Making Calls and Sending Messages

To make a call, open the Phone app, enter the number, and tap the call icon. To send a message, open the Messages app, tap the new message icon, enter the recipient and your message, then send.

3. Connecting to Networks

- **Wi-Fi:** Go to *Settings > Network & internet > Wi-Fi* Turn on Wi-Fi, select your network, and enter the password if required.
- **Bluetooth:** Go to *Settings > Connected devices > Bluetooth* Turn on Bluetooth, pair with a device, and confirm the pairing code.
- **Mobile Data:** Go to *Settings > Network & internet > Mobile network* Ensure mobile data is enabled for internet access via your SIM card.

4. Using the Camera

Open the Camera app. Tap the shutter button to take a photo. Swipe left or right to switch between modes like Video, Portrait, or Pro. Tap on the screen to focus on a specific area.

5. Security Features

Your Infinix Hot 40i X6528 includes Face Unlock and a Fingerprint Sensor for secure and quick access.

- **Fingerprint Sensor:** Register your fingerprints via *Settings > Security > Fingerprint*
- **Face Unlock:** Set up face recognition via *Settings > Security > Face Unlock*

MAINTENANCE

1. Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of your phone. Avoid using harsh chemicals or abrasive materials that could damage the device.

2. Battery Care

- Avoid extreme temperatures, as they can degrade battery life.
- Use only the original charger and cable provided with your device.
- Do not leave the phone charging for extended periods after it's fully charged.

3. Software Updates

Regularly check for software updates to ensure your device has the latest features and security patches. Go to *Settings > System > System update* to check for and install updates.

4. Storage Management

To optimize performance, regularly clear unnecessary files and apps. Go to *Settings > Storage* to view storage usage and manage files.

TROUBLESHOOTING

1. Device Not Turning On

Ensure the battery is charged. Connect the phone to its charger and wait a few minutes before attempting to power it on again. If the issue persists, contact customer support.

2. Apps Crashing or Freezing

Try restarting the app. If the problem continues, clear the app's cache and data via *Settings > Apps > [App Name] > Storage & cache*. As a last resort, uninstall and reinstall the app.

3. Network Connectivity Issues

Check if Wi-Fi or mobile data is enabled. Restart your phone. If using mobile data, ensure your SIM card is properly inserted and has an active plan. For Wi-Fi, try restarting your router.

4. Poor Battery Life

Reduce screen brightness, close unused apps running in the background, and disable features like GPS or Bluetooth when not in use. Check battery usage in *Settings > Battery* to identify power-hungry apps.

5. Performing a Factory Reset

Warning: A factory reset will erase all data on your phone. Back up important data before proceeding. Go to *Settings > System > Reset options > Erase all data (factory reset)* Follow the on-screen prompts.

SPECIFICATIONS

Feature	Detail
Model Name	Infinix Hot 40i X6528
Operating System	Android 13.0
RAM	8 GB
Internal Storage	256 GB
Screen Size	6.6 inches
Resolution	720 x 1600
Refresh Rate	60 Hz
CPU Model	Cortex A7
Battery Capacity	5000 mAh
Connectivity	USB, Bluetooth, Wi-Fi
Special Features	Dual SIM, Expandable Memory, Fast Charging Support
Rear Camera	13 MP (Main Lens)

Feature	Detail
Audio Jack	No headphone jack
Product Dimensions	15 x 10 x 5 cm
Item Weight	300 grams
Color	Black

WARRANTY & SUPPORT

1. Warranty Information

Your Infinix Hot 40i X6528 is covered by a limited manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

2. Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please visit the official Infinix support website or contact their customer service. You can typically find contact information on the Infinix official website or in your product documentation.

Online Support: www.infinixmobility.com/support (Example link, please verify official support page)