



Manuals.plus /

- › Shark /
- › SHARK VM200 VACMOP Cordless Multi-Surface Floor Cleaner User Manual

Shark VM200

SHARK VM200 VACMOP Cordless Multi-Surface Floor Cleaner User Manual

Model: VM200

INTRODUCTION

The Shark VM200 VACMOP is a cordless, lightweight cleaning system designed for multi-surface hard floors. It combines vacuuming and mopping functions to address both dry debris and wet messes. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your VACMOP.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your VACMOP. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the VACMOP is fully assembled before use.
- Do not immerse the VACMOP in water or other liquids.
- Use only Shark VACMOP cleaning solution and disposable pads.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not use on wet surfaces unless specifically designed for wet cleaning.
- Store the appliance indoors in a cool, dry place.
- Unplug the charger from the outlet when not in use and before cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

WHAT'S IN THE BOX

Upon opening your Shark VM200 VACMOP package, you should find the following components:

- 1 Shark VACMOP Unit

- 2 Disposable VACMOP Pads
- 1 Bottle of Cleaning Solution
- 1 Charger





Image: The Shark VM200 VACMOP unit, showing its full assembly.

SETUP AND ASSEMBLY

1. Assembling the VACMOP

1. Insert the handle into the main body of the VACMOP until it clicks securely into place.
2. Ensure all connections are firm before proceeding.

2. Attaching a Disposable Pad

1. Place a disposable VACMOP pad on the floor with the dirt chamber facing up.
2. Align the VACMOP head over the pad and press down firmly until the pad adheres securely to the head.

3. Filling the Cleaning Solution Reservoir

1. Locate the reservoir cap on the main body of the VACMOP.
2. Open the cap and carefully pour the Shark VACMOP cleaning solution into the reservoir. Do not overfill.
3. Close the cap securely.

4. Charging the Battery

1. Plug the charger into the charging port on the VACMOP unit.
2. Plug the charger into a standard electrical outlet.
3. Allow the unit to charge fully before first use. The indicator light will show charging status.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press the power button located on the handle to turn the VACMOP on or off.

2. Vacuuming Dry Debris

With a disposable pad attached, simply push the VACMOP over dry debris such as dirt, dust, and pet hair. The vacuum suction will draw the debris into the pad's dirt chamber.



Image: The VACMOP effectively collecting dry debris from a hard floor surface.

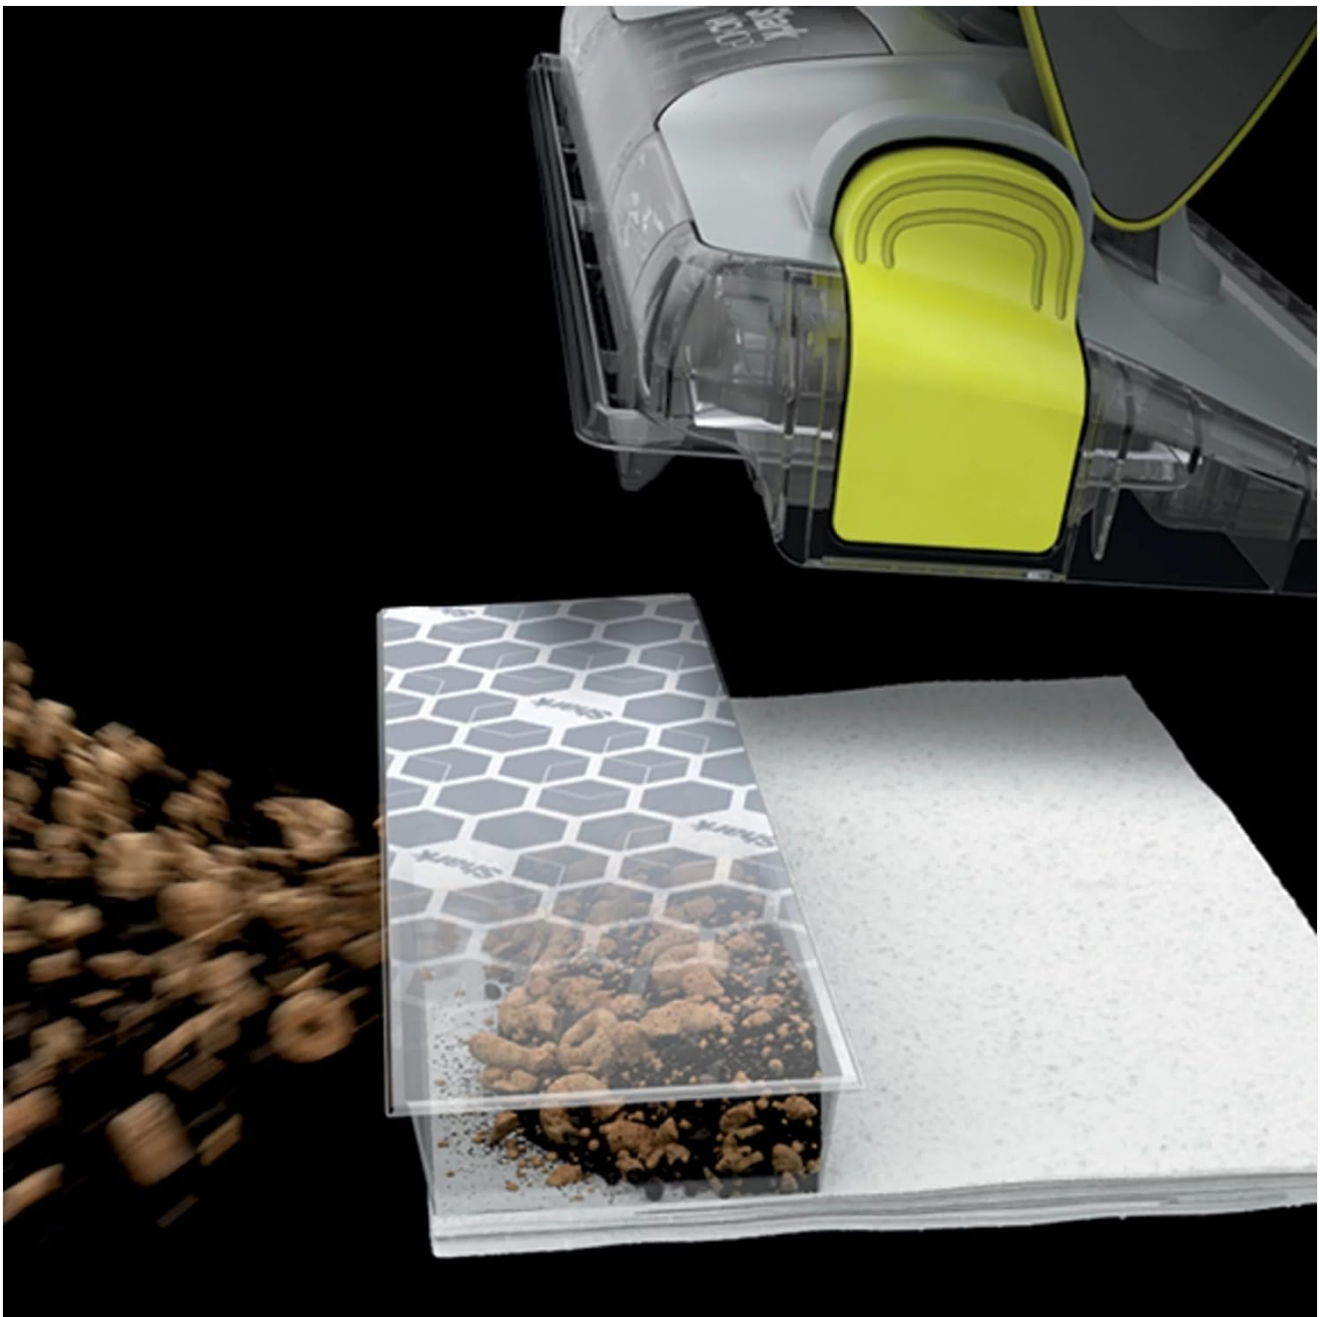


Image: A close-up view of the disposable pad's dirt chamber, illustrating how debris is captured.

3. Spray Mopping Wet Messes

To mop, press and hold the spray button on the handle. This will dispense cleaning solution onto the floor. Move the VACMOP over the wet mess to clean and scrub the surface.



Image: The VACMOP in action, spraying cleaning solution to tackle wet messes.



Image: An overhead perspective demonstrating the VACMOP's cleaning effectiveness on a soiled floor.

4. LED Headlights

The VACMOP is equipped with LED headlights that illuminate the cleaning path, helping to reveal hidden dirt and debris. These lights activate automatically when the unit is powered on.

MAINTENANCE

1. Disposing of Used Pads

When the disposable pad is full or cleaning is complete, press the pad release button located on the VACMOP head. The pad will detach, allowing for no-touch disposal into a waste bin.



Image: A user demonstrating the no-touch disposal of a used VACMOP pad into a trash receptacle.

Shark[®] VACMOP™



✓ **LIGHTWEIGHT**

✓ **NO-TOUCH
DISPOSAL**

Image: A visual representation highlighting the lightweight nature and easy, no-touch disposal feature of the VACMOP pads.

2. General Care

- Wipe the exterior of the VACMOP with a damp cloth as needed.
- Do not use abrasive cleaners or solvents.
- Ensure the charging port is clean and free of debris.
- Store the VACMOP in an upright position in a dry area.

TROUBLESHOOTING

Problem	Possible Cause	Solution
VACMOP not turning on.	Battery is not charged.	Ensure the unit is fully charged.
No spray from nozzle.	Reservoir is empty or clogged nozzle.	Refill the cleaning solution reservoir. Check nozzle for blockages.
Poor vacuum suction.	Disposable pad is full or improperly attached.	Replace the disposable pad. Ensure the pad is securely attached.
Unit not charging.	Charger not properly connected or faulty charger.	Verify charger is securely plugged into both the unit and the outlet. Ensure you are using the correct charger.

SPECIFICATIONS

- **Model:** VM200
- **Brand:** Shark
- **Special Feature:** Lightweight
- **Filter Type:** Foam
- **Cordless:** Yes
- **Capacity:** 1 Pounds (debris)
- **Form Factor:** Upright
- **Color:** Green/Gray
- **Product Dimensions:** 10"L x 6"W x 30"H
- **Item Weight:** 5 pounds
- **Power Source:** 1 Lithium Ion battery (included)
- **Control Method:** Touch / Push Button
- **Indoor/Outdoor Usage:** Indoor

WARRANTY AND SUPPORT

Warranty Information

This Shark VM200 VACMOP comes with a **90-day limited warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal household use. It does not cover damage resulting from misuse, abuse, or normal wear and tear.

Customer Support

For further assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact Shark customer support. Refer to the official Shark website or product packaging for the most current contact information. Visit SharkClean.com