

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [My Arcade](#) /
- › [My Arcade Atari Gamestation Go Portable Video Game System User Manual](#)

My Arcade DGUNL-7065

My Arcade Atari Gamestation Go Portable Video Game System User Manual

MODEL: DGUNL-7065



Image: My Arcade Atari Gamestation Go console in its retail packaging, showcasing the device and game titles.

Introduction

Welcome to the My Arcade Atari Gamestation Go user manual. This portable video game system offers a vast collection of over 200 classic Atari and licensed retro games, providing an immersive gaming experience on its 7-inch full-color display. Designed for both portability and home use, the Gamestation Go features a rechargeable

battery, Wi-Fi connectivity for updates, and HDMI output for connecting to a television. Its intuitive controls, including a paddle, d-pad, trak-ball, and numeric keypad, are enhanced by SmartGlow technology, which illuminates the relevant controls for each game.

Safety Information

- **Not suitable for children under 3 years old.** Small parts may present a choking hazard.
- Always use the provided AC adapter and charge cable for charging.
- Avoid exposing the device to extreme temperatures, direct sunlight, or moisture.
- Do not attempt to disassemble or modify the device. This may void the warranty and cause damage.
- Take regular breaks during gameplay to prevent eye strain and fatigue.

Package Contents

Ensure all items are present in the package:

- My Arcade Atari Gamestation Go Console
- HDMI Cable
- AC Adapter
- Charge Cable (USB)
- User Guide (this document)

Setup

1. Charging the Device

Before first use, fully charge your Gamestation Go. Connect the provided charge cable to the device's charging port and the AC adapter. Plug the AC adapter into a standard wall outlet. The charging indicator light will show the charging status. A full charge typically takes several hours.

2. Powering On/Off

To power on the device, press and hold the Power button located on the side/top of the console until the screen illuminates. To power off, press and hold the Power button again until the shutdown prompt appears, then confirm.

3. Wi-Fi Connection (Optional for Updates)

The Gamestation Go includes built-in Wi-Fi for easy software updates. To connect to Wi-Fi, navigate to the "Settings" menu on the device. Select "Wi-Fi" and choose your network from the list. Enter your Wi-Fi password if prompted. Ensure a stable internet connection for successful updates.

4. Connecting to a Television via HDMI

For a larger display experience, connect your Gamestation Go to a TV using the included HDMI cable. Insert one end of the HDMI cable into the HDMI output port on the Gamestation Go and the other end into an available HDMI

input port on your television. Select the corresponding HDMI input on your TV using its remote control. The device's display will automatically switch to the TV output.

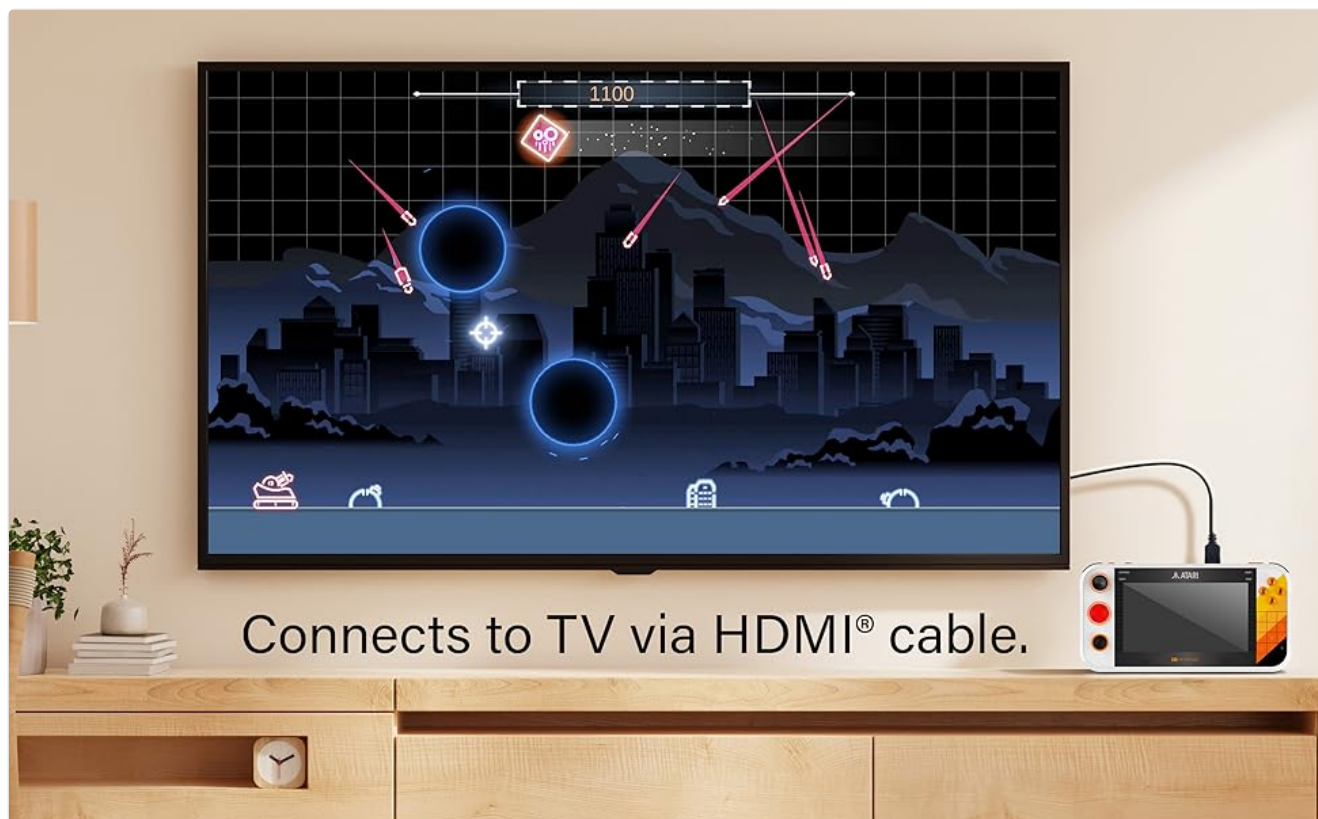


Image: The My Arcade Atari Gamestation Go connected to a television via an HDMI cable, displaying gameplay on the larger screen.

Operating Instructions

1. Controls Overview

The Gamestation Go features a comprehensive set of controls designed to replicate the authentic feel of classic games:

- **Integrated Paddle:** For games requiring precise rotational input.
- **D-Pad:** Standard directional control for many games.
- **Trak-Ball:** For games that originally used a trackball for movement.
- **Numeric Keypad:** Essential for certain Atari 5200 and other titles.
- **Bumpers:** Additional input buttons.
- **Classic Gamepad Buttons (A, B, X, Y):** For action and menu selections.

SmartGlow Technology: This feature illuminates only the controls relevant to the game currently being played, simplifying the user experience and ensuring you use the correct inputs.



Image: A close-up view of the My Arcade Atari Gamestation Go, highlighting the various control inputs including the paddle, D-pad, and action buttons.

2. Navigating Menus

Use the D-Pad or Trak-Ball to navigate through the main menu and game selection screens. The A button typically confirms selections, while the B button acts as a back or cancel function. The "Settings" and "Credit" options are accessible from the top bar of the main menu.

3. Playing Games

From the game selection menu, highlight your desired game and press the A button to start. Follow any on-screen prompts. The SmartGlow feature will guide you to the appropriate controls for that specific game.

4. Game Save Options

The Gamestation Go supports game save options for many titles. Consult the in-game menu or the device's system menu for specific instructions on how to save and load game progress.

Preloaded Game List

The My Arcade Atari Gamestation Go comes preloaded with over 200 classic games across various Atari platforms and other licensed titles. Below is a detailed list:

Atari 2600 Titles:

- 3-D Tic-Tac-Toe
- Adventure
- Adventure II
- Air-Sea Battle
- Aquaventure
- Asteroids
- Atari Video Cube
- Basic Math
- Basketball
- Berzerk
- Bowling
- Breakout
- Canyon Bomber
- Centipede
- Championship Soccer
- Circus Atari
- Combat
- Combat Two
- Crystal Castles
- Dark Chambers
- Demons to Diamonds
- Desert Falcon
- Dodge 'Em
- Double Dunk
- Flag Capture
- Football
- Frog Pond
- Golf
- Gravitar
- Hangman
- Haunted House
- Home Run
- Human Cannonball
- Indy 500
- Maze Craze
- Millipede
- Miniature Golf

- Missile Command
- MotoRodeo
- Night Driver
- Off the Wall
- Quadrun
- Radar Lock
- RealSports Baseball
- RealSports Basketball
- RealSports Boxing
- RealSports Football
- RealSports Soccer
- RealSports Tennis
- RealSports Volleyball
- Saboteur
- Save Mary!
- Secret Quest
- Sky Diver
- Slot Racers
- Solaris
- Space War
- Sprint Master
- Steeplechase
- Stunt Cycle
- Submarine Commander
- Super Baseball
- Super Breakout
- Super Football
- Surround
- Swordquest: Earthworld
- Swordquest: Fireworld
- Swordquest: Waterworld
- Video Checkers
- Video Olympics
- Video Pinball
- Warlords
- Yars' Revenge

Atari 5200 Titles:

- Centipede
- Meebzork
- Millipede
- Missile Command
- RealSports Baseball
- RealSports Basketball

- RealSports Soccer
- RealSports Tennis

Atari 7800 Titles:

- Asteroids
- BasketBrawl
- Centipede
- Dark Chambers
- Desert Falcon
- Fatal Run
- Food Fight
- MotorPsycho
- Ninja Golf
- RealSports Baseball
- Scrapyard Dog

Atari Arcade Titles:

- Agent X
- Asteroids
- Asteroids Deluxe
- Atari Baseball
- Atari Football
- Atari Soccer
- Basketball
- Berzerk
- Black Widow
- Canyon Bomber
- Centipede
- Cloud 9
- Crystal Castles
- Dominos
- Drag Race
- Food Fight
- Frenzy
- Gravitar
- I Robot
- Liberator
- Lunar Lander
- Major Havoc
- Millipede
- Missile Command
- Monte Carlo
- Night Driver
- Pool Shark

- Red Baron
- Runaway
- Skydiver
- Sky Raider
- Space Duel
- Super Breakout
- Super Bug
- Tempest
- Warlords

Atari Recharged Series:

- Asteroids: Recharged
- Berzerk: Recharged
- Breakout: Recharged
- Centipede: Recharged
- Missile Command: Recharged

M-Network Titles:

- Air Raiders
- International Soccer
- Sea Battle
- Space Attack
- Super Challenge Baseball
- Super Challenge Football

Balls of Steel:

- 7 Pinball tables

Additionally, the system includes **PAC-MAN** and other licensed games from Jaleco & PIKO Interactive.

Maintenance

1. Cleaning the Device

To clean the exterior of your Gamestation Go, use a soft, dry, lint-free cloth. For stubborn marks, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the finish and internal components. Do not spray liquids directly onto the device.

2. Battery Care

The Gamestation Go is powered by a built-in Lithium Ion battery. To maximize battery life:

- Avoid fully discharging the battery frequently.
- Store the device in a cool, dry place when not in use for extended periods.
- If storing for a long time, charge the battery to about 50% every few months.
- Do not expose the battery to extreme heat or cold.

Troubleshooting

Problem	Possible Cause / Solution
Device does not power on.	Battery may be depleted. Connect the device to the AC adapter and charge for at least 30 minutes before attempting to power on again.
Screen is blank or frozen.	Perform a soft reset by holding the Power button for 10-15 seconds until the device powers off. Then, power on normally. If the issue persists, ensure the device is charged.
No display on TV via HDMI.	<ul style="list-style-type: none">◦ Ensure the HDMI cable is securely connected to both the Gamestation Go and the TV.◦ Verify that your TV is set to the correct HDMI input source.◦ Try a different HDMI cable or TV port if available.
Games are slow or skipping frames.	Ensure the device's software is up to date via Wi-Fi. If the issue persists, try restarting the device.
Controls are unresponsive or inaccurate.	<ul style="list-style-type: none">◦ Ensure your hands are clean and dry.◦ Restart the device.◦ For specific games, ensure you are using the correct controls as indicated by SmartGlow.
Cannot connect to Wi-Fi.	<ul style="list-style-type: none">◦ Verify your Wi-Fi password is correct.◦ Ensure the device is within range of your Wi-Fi router.◦ Restart your Wi-Fi router.

Specifications

Model Number	DGUNL-7065
Brand	My Arcade
Display	7-inch Full Color Display
Preloaded Games	Over 200+ (Atari 2600, 5200, 7800, Arcade, Recharged, M-Network, Balls of Steel, Pac-Man, Jaleco, PIKO Interactive)
Connectivity	HDMI Output, Built-in Wi-Fi
Battery	1 Lithium Ion battery (included), Rechargeable

Controls	Integrated Paddle, D-Pad, Trak-Ball, Numeric Keypad, Bumpers, A/B/X/Y Buttons, SmartGlow Technology
Product Dimensions	1 x 1 x 1 inches
Item Weight	3.74 pounds
Recommended Age	14 years and up
Language	English (User Guide supports multiple languages)

Warranty Information



Specific warranty details for the My Arcade Atari Gamestation Go are not provided within this manual. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official My Arcade website. Keep your proof of purchase for warranty claims.





Customer Support

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact My Arcade customer support. You can typically find contact information, including phone numbers, email addresses, or support portals, on the official My Arcade website or on the product packaging. For more information, visit the [My Arcade Store on Amazon](#).

© 2025 My Arcade. All rights reserved. Atari and the Atari logo are trademarks of Atari Interactive, Inc.

Related Documents - DGUNL-7065

	<p>Atari Gamestation Pro Firmware Update Guide</p> <p>Comprehensive guide to updating the firmware on your Atari Gamestation Pro retro video game console, covering driver installation, software usage, and troubleshooting steps.</p>
	<p>MY ARCADE Gamestation Gamepad User Guide</p> <p>Explore the MY ARCADE Gamestation Gamepad with this comprehensive user guide. Learn about its features, setup, charging, and important safety information for an optimal gaming experience.</p>

	<p>MY ARCADE PAC-MAN Micro Player Retro Arcade User Guide</p> <p>Official user guide for the MY ARCADE PAC-MAN Micro Player Retro Arcade. Learn how to set up, play, and care for your device. Includes warranty and support information.</p>
	<p>MY ARCADE Gamer V Classic User Guide - Setup, Features, and Warranty</p> <p>Official user guide for the MY ARCADE Gamer V Classic handheld game system. Learn how to set up, use buttons, manage batteries, and understand warranty information.</p>
	<p>MY ARCADE Pocket Player PRO User Guide and Manual</p> <p>Official user guide and manual for the MY ARCADE Pocket Player PRO handheld game console. Learn about setup, features, battery, warranty, and safety information.</p>
	<p>MY ARCADE Pocket Player Pro User Guide</p> <p>Comprehensive user guide for the MY ARCADE Pocket Player Pro, covering setup, operation, safety precautions, and warranty information.</p>