

My Arcade DGUNL-7073

My Arcade Pac-Man Joystick Player (Model DGUNL-7073) Instruction Manual

1. SAFETY INFORMATION

This product is not suitable for children under 3 years old. Adult supervision is recommended during use. Please read all instructions before operating the device.

2. PRODUCT OVERVIEW

The My Arcade Pac-Man Joystick Player is a portable retro gaming console designed to replicate the classic Pac-Man arcade experience. It features a 3.5-inch full-color vertical display, an integrated joystick, and dedicated control buttons. The device supports two game modes: Classic and Speed Up. It is powered by either AA batteries or a USB-C cable, offering flexibility for on-the-go or at-home play.



Image 2.1: Front view of the My Arcade Pac-Man Joystick Player, showcasing the screen and controls.

3. PACKAGE CONTENTS

- My Arcade Pac-Man Joystick Player Console
- User Guide (this document)

4. DEVICE LAYOUT

Familiarize yourself with the key components of your Pac-Man Joystick Player:

1. **Joystick:** Used for directional movement of Pac-Man.
2. **1P/2P Buttons:** Used to select player mode and initiate gameplay.
3. **Credit Button:** Used to add credits to start a game.
4. **Home Button:** Returns to the main menu.
5. **Volume Control:** Adjusts audio output.
6. **Screen Brightness Control:** Adjusts display illumination.
7. **3.5mm Headphone Jack:** For private audio listening.
8. **USB-C Port:** For external power supply (cable not included).
9. **Battery Compartment:** Located on the back, for 4 AA batteries.



Image 4.1: Rear view of the console, showing the battery compartment and USB-C port.

5. SETUP

5.1 Powering the Device

The Pac-Man Joystick Player can be powered by two methods:

- **Batteries:** Insert 4 new AA batteries (not included) into the battery compartment located on the back of the unit. Ensure correct polarity (+/-) as indicated inside the compartment.
- **USB-C Cable:** Connect a USB-C cable (not included) from the console's USB-C port to a compatible USB power source (e.g., wall adapter, power bank).

5.2 Initial Power On

Once powered, press the Power button (location may vary, typically near the screen or on the side) to turn on the

device. The screen will illuminate, displaying the game's title screen.

6. OPERATION

6.1 Starting a Game

To begin playing Pac-Man:

1. Ensure the device is powered on.
2. From the title screen, press the '**1P**' or '**2P**' button to select your player mode.
3. Press the '**Credit**' button to add a credit and start the game.

Note: The on-screen prompt for 'Start' refers to the '1P' or '2P' buttons, not a dedicated 'Start' button.



Image 6.1: A hand demonstrating the use of the joystick for gameplay.

6.2 Gameplay Controls

- **Joystick:** Move Pac-Man through the maze to eat dots and power pellets.

6.3 Game Modes

The console includes two game modes:

- **Classic Mode:** Experience the original Pac-Man gameplay.
- **Speed Up Mode:** A faster-paced version of the game for an increased challenge.

6.4 Audio and Display Adjustments

- **Volume Control:** Use the dedicated volume buttons/dial to adjust the game's sound level.
- **Screen Brightness:** Use the brightness control to optimize visibility in various lighting conditions.
- **Headphone Jack:** Plug in standard 3.5mm headphones for private listening.

6.5 Saving High Scores

The device is designed to save your high scores automatically.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the console. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the device will not be used for an extended period, remove the batteries to prevent leakage.

8. TROUBLESHOOTING

- **Device does not power on:**
 - Check if batteries are inserted correctly and are not depleted. Replace with new batteries if necessary.
 - If using USB-C power, ensure the cable is securely connected and the power source is functional.
- **Screen turns on but no game appears:**
 - Ensure you have pressed the '1P' or '2P' button followed by the 'Credit' button to start the game.
 - Try pressing the 'Home' button to return to the main menu and attempt to start the game again.
- **No sound or distorted sound:**
 - Adjust the volume control.
 - If using headphones, ensure they are fully plugged into the 3.5mm jack and are functioning correctly.
- **Joystick unresponsive:**
 - Ensure the joystick is clean and free from obstructions.
 - Restart the device.





9. SPECIFICATIONS


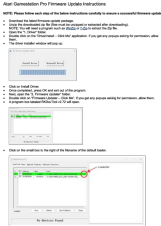
Feature	Detail
Model Number	DGUNL-7073
Product Dimensions	4"L x 6.8"W x 7.6"H
Item Weight	0.4 Kilograms (14.1 ounces)
Screen Size	3.5 Inches
Display Type	LCD
Controller Type	Joystick
Power Source	Battery Powered (4 AA batteries required, not included)
Hardware Interface	USB Type C (cable not included)
Material	Plastic
Manufacturer Recommended Age	14 years and up

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official My Arcade website or contact their customer service directly. Specific warranty terms may vary by region and retailer.

Related Documents - DGUNL-7073

	<p>MY ARCADE PAC-MAN Micro Player Retro Arcade User Guide</p> <p>Official user guide for the MY ARCADE PAC-MAN Micro Player Retro Arcade. Learn how to set up, play, and care for your device. Includes warranty and support information.</p>
	<p>MY ARCADE Pocket Player PRO User Guide and Manual</p> <p>Official user guide and manual for the MY ARCADE Pocket Player PRO handheld game console. Learn about setup, features, battery, warranty, and safety information.</p>
	<p>MY ARCADE Pocket Player Pro User Guide</p> <p>Comprehensive user guide for the MY ARCADE Pocket Player Pro, covering setup, operation, safety precautions, and warranty information.</p>
	<p>My Arcade All Star Stadium Pocket Player User Guide</p> <p>User guide for the My Arcade All Star Stadium Pocket Player game handheld console. Learn how to set up your device, understand button functions, and master gameplay for titles like GOAL!, RACKET ATTACK, HOOPS, and BASES LOADED.</p>

	<p>MY ARCADE Gamestation Gamepad User Guide</p> <p>Explore the MY ARCADE Gamestation Gamepad with this comprehensive user guide. Learn about its features, setup, charging, and important safety information for an optimal gaming experience.</p>
	<p>Atari Gamestation Pro Firmware Update Guide</p> <p>Comprehensive guide to updating the firmware on your Atari Gamestation Pro retro video game console, covering driver installation, software usage, and troubleshooting steps.</p>

Documents - My Arcade – DGUNL-7073



[\[pdf\]](#) User Manual Guide

DGUNL 7073 PACMAN Joystick Player User guide 1 Product Manual My Arcade® Portable Retro Arcade Pac Man f407ba2f05c51354da662ba2d3e5ce67dfb6324b manual! DRMDGUNL7073 petra attachment 9713312 671a75acd60ac659966985 |||

JOYSTICK PLAYER User guide Manuel de l'utilisateur Gua del usuario Manuale dell'Utente Guia do usuri ... MY ARCADE MY ARCADE .USB Implementers Forum USB-C Follow us Suivez-nous MyArcadeRetro **DGUNL-7073** ...

lang:en score:49 filesize: 754.34 K page_count: 56 document date: 2024-08-23



[\[pdf\]](#) Guide

PROOF DGUNL 7073 Pac man Joystick Player User guide 1 2 GuideMy Arcade Man Portable Retro DGUNL7073 Slick ShiftsDGUNL7073 guidecdn shopify s files 0794 8707 4600 v 1749306867 |||

JOYSTICK PLAYER User guide Manuel de l'utilisateur Gua del usuario Manuale dell'Utente Guia do usuri ... egistration Declaration of Conformity Hereby, dreamGEAR, LLC declares that the radio equipment type **DGUNL-7073** is in compliance with Directive 2014/53/EU. The full text of the EU declaration of confor...

lang:en score:47 filesize: 754.05 K page_count: 56 document date: 2024-10-19



[\[pdf\]](#) Guide

DGUNL 7073 PACMAN Joystick Player User guide 1 DOWNLOADShop PAC MAN My Arcade®cdn shopify s files 1691 7407 v 1724711819 Arcade®68052059 use and care guidecdn 1724711819nfm on demandware static Library Sites NFMSHaredLibrary default dw286a9a2d product 068 05 68052059 ||| |||

JOYSTICK PLAYER User guide Manuel de l'utilisateur Gua del usuario Manuale dell'Utente Guia do usuri Bedienungsanleitung Gebruikershandleiding ENGLISH Includes Joystick Player and user guide Materials needed not included 4 AA batteries and

JOYSTICK PLAYER User guide Manuel de l'utilisateur Gua del usuario Manuale dell'Utente Guia do usuri ... MY ARCADE MY ARCADE .USB Implementers Forum USB-C Follow us Suivez-nous MyArcadeRetro **DGUNL-7073** ...

lang:en score:44 filesize: 754.34 K page_count: 56 document date: 2024-08-23



[My Arcade PAC-MAN Joystick Player - Portable Retro Arcade](#)

Discover the My Arcade PAC-MAN Joystick Player, a portable retro arcade machine featuring a 3.5-inch high-resolution display, high score saving, and classic PAC-MAN gameplay. Officially licensed and powered by AA batteries or USB-C.

lang:en score:37 filesize: 3.31 M page_count: 4 document date: 2024-09-06



[\[pdf\] Guide](#)

DGUNL 7073 Joystick Player PAC MAN Sale Sheet Sales SheetMy Arcade Pac Man Portable Retro

DGUNL7073 Slick ShiftsDGUNL7073 Sheetcdn shopify s files 1 0794 8707 4600 v 1749306867 |||

PAC-MAN JOYSTICK PLAYER PORTABLE RETRO ARCADE **DGUNL-7073** O

icially licensed title 3.5 High resolution display 2 Game modes High score saving
GAME HISTORY Collect all the PAC-DOTS and fruits, but watch out for ghosts
BLINKY, PINKY, INKY and CLYDE are out to get one of gaming's most iconic
character...

lang:en score:36 filesize: 3.31 M page_count: 4 document date: 2024-09-06