

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Dyson](#) /

› [Dyson V8 Absolute Cordless Vacuum User Manual](#)

Dyson Dyson V8

Dyson V8 Absolute Cordless Vacuum User Manual

Model: Dyson V8 | Brand: Dyson

INTRODUCTION

The Dyson V8 Absolute Cordless Vacuum is engineered for powerful and versatile cleaning across various surfaces. Featuring a HEPA filter, rotating brushes, and bagless operation, it provides up to 40 minutes of consistent suction for efficient home maintenance.

WHAT'S INCLUDED

Your Dyson V8 Absolute package includes the following components:

- Dyson V8 Absolute main unit
- Crevice tool
- Combination tool
- Docking station
- Charger
- Hair screw tool
- 5AVE Microfiber Cloth



Image: The Dyson V8 Absolute main unit, along with its various attachments including the crevice tool, combination tool, hair screw tool, docking station, charger, and a microfiber cloth.

SETUP

Charging the Battery

Before initial use, fully charge the Dyson V8 Absolute battery. Connect the charger to the docking station or directly to the vacuum's charging port. The battery indicator lights will illuminate during charging and turn off when fully charged. A full charge provides up to 40 minutes of run time in standard mode.

Installing the Docking Station

The docking station facilitates convenient storage and charging. Select a suitable location near a power outlet. Secure the docking station to the wall using appropriate screws and anchors (not included). Once installed, the vacuum can be easily docked for charging and quick access.



Image: The docking station, designed for wall mounting, provides a secure and accessible charging point for the Dyson V8 Absolute.

OPERATING INSTRUCTIONS

Power Modes

The Dyson V8 Absolute features two power modes: Standard and MAX. The standard mode provides an optimal balance between power and run time for everyday cleaning. For tougher dirt and debris, activate MAX mode using the slider on the main unit. Note that MAX mode will reduce battery life.

Attaching and Detaching Tools

To attach a tool, align it with the end of the wand or the main unit and push until it clicks into place. To detach, press the red release button on the tool and pull it away. This mechanism allows for quick transitions between cleaning tasks and surfaces.

Cleaning Different Surfaces

- **Hard Floors & Carpets:** Use the main cleaner head for general cleaning on both hard floors and carpets. The rotating brushes are designed to effectively pick up debris from various floor types.
- **Upholstery & Pet Hair:** The hair screw tool is specifically designed for removing pet hair and embedded dirt from upholstery, stairs, and car interiors.
- **Tight Spaces & Crevices:** Utilize the crevice tool to access narrow gaps, corners, and edges.
- **Dusting & Delicate Surfaces:** The combination tool, with its integrated brush, is suitable for dusting surfaces such as shelves, keyboards, and blinds.

MAINTENANCE

Emptying the Bin

To empty the clear bin, position the vacuum over a trash receptacle. Push the red lever down to release the bin flap and discharge the collected contents. Ensure the bin flap is securely closed after emptying. Regular bin emptying is recommended to maintain optimal suction performance.

Washing the Filter

The Dyson V8 Absolute incorporates a washable HEPA filter. To remove the filter, twist it counter-clockwise from the top of the main unit. Rinse the filter under cold running water until the water runs clear. Squeeze out any excess water and allow it to air dry completely for a minimum of 24 hours before reinsertion. Do not use a tumble dryer or expose it to direct heat sources.

TROUBLESHOOTING

- **No Power:** Verify that the battery is fully charged. Confirm that the charger is correctly connected to both the vacuum and a functional power outlet.
- **Reduced Suction:** Empty the dust bin. Inspect for any obstructions in the cleaner head, wand, or main unit. Ensure the filter is clean, dry, and properly reinserted.
- **Flashing Lights:** Observe the battery indicator lights. A flashing light may signal a charging issue or a blockage within the system. Refer to the complete user manual for detailed explanations of specific light patterns.

SPECIFICATIONS

Feature	Detail
Brand	Dyson
Model Name	Dyson V8
Special Feature	HEPA
Filter Type	HEPA Filter
Included Components	Crevice tool, Combination tool, Docking station, Charger, Hair screw tool
Cordless	Yes
Runtime	40 minutes
Recommended Uses	Carpet, Hard Floor, Tile Floor, Hardwood, Rug, Bare Floor
Color	Silver

Product Dimensions	8.7" L x 9.84" W x 49.45" H
Battery Type	Lithium-Ion
Item Weight	13 pounds
UPC	885609024769

WARRANTY AND SUPPORT

The Dyson V8 Absolute Cordless Vacuum includes a 2-Year Warranty. For warranty claims, technical support, or further assistance, please refer to the official Dyson support channels or visit their website.

