

[Manuals.plus](#) /

› [Boyel Living](#) /

› Boyel Living 55-inch Fireplace TV Stand with 18-inch Electric Fireplace, White - Instruction Manual

Boyel Living B0CT7LDXJ5

Boyel Living 55-inch Fireplace TV Stand with 18-inch Electric Fireplace

INSTRUCTION MANUAL

1. Important Safety Information

Please read and understand all instructions before assembling, operating, or installing this product. Failure to follow these instructions may result in electric shock, fire, property damage, or personal injury.

- Always disconnect the electric fireplace from the power supply before cleaning or performing any maintenance.
- Do not use this fireplace outdoors.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains, at least 3 feet (0.9 m) from the front of the fireplace.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fireplace.
- This TV stand is designed to support televisions up to 55 inches and a maximum weight of 120 pounds on the tabletop. Do not exceed these limits.
- Assembly requires two adults. Ensure all hardware is securely fastened before use.

2. Package Contents

Verify that all components are present before beginning assembly. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- TV Stand Panels (various sizes)
- 18-inch Electric Fireplace Insert
- Remote Control for Electric Fireplace
- Hardware Pack (screws, dowels, cam locks, etc.)
- Assembly Instructions Manual

3. Assembly Instructions

Two adults are recommended for the assembly of this TV stand. Clear a spacious area for assembly and keep all hardware within reach. Follow the step-by-step diagrams provided in the included assembly guide.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out and compare them against the parts list to ensure everything is accounted for.
2. **Assemble the Main Frame:** Begin by connecting the base and side panels using the provided hardware. Ensure all connections are snug and stable.
3. **Install Shelves:** Insert the adjustable shelves into the designated slots within the side compartments.
4. **Integrate Electric Fireplace:** Carefully slide the 18-inch electric fireplace insert into the central opening of the TV stand. Ensure it fits securely and is flush with the front.
5. **Attach Doors:** Mount the storage cabinet doors to the side compartments using the hinges and screws. Adjust as necessary for proper alignment.
6. **Final Checks:** Verify that all screws and fasteners are tightened. Place the TV stand in its desired location.



Figure 3.1: Assembled TV Stand with Electric Fireplace.

The TV stand features a space-saving corner design, solid legs for stability, and solid cabinet door handles. The electric fireplace offers a 3-level flame effect.




Space-saving
Corner Design



Solid Legs



3 Level Flame

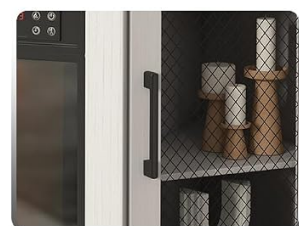

Solid Cabinet
Door Handles

Figure 3.2: Key features of the TV Stand design.

4. Operating Instructions

4.1 Electric Fireplace Operation

The 18-inch electric fireplace provides warmth and ambiance. It is CSA certified and includes an overheat protection system.

5000 BTU FIREPLACE FOR 400 SQ.FT. SPACES



CSA certified



Overheat protection system



Heat Control: 62~82°F



Time Control: 30min-6H



Remote Control

3 Level Adjustable Brightnesses



L1



L2



L3

Figure 4.1: Electric Fireplace Features and Controls.

- **Power On/Off:** Use the power button on the fireplace unit or the remote control to turn the unit on or off.
- **Heat Control:** The fireplace can heat rooms up to 400 sq. ft. The temperature can be adjusted from 62°F to 82°F using the remote control.
- **Flame Effect:** The fireplace features multiple light settings and 3 levels of adjustable flame brightness (L1, L2, L3). These can be adjusted independently of the heat function to create a relaxing ambiance without heat.
- **Timer Function:** Set the operational timer for 30 minutes up to 6 hours using the remote control.
- **Remote Control:** The included remote allows convenient adjustment of all fireplace settings from a distance. Ensure batteries are correctly installed.

4.2 TV Stand Usage

The TV stand provides a stable platform for your television and ample storage.

- **Television Placement:** Place your TV centrally on the tabletop. The tabletop supports up to 120 pounds and is suitable for most 55-inch televisions.
- **Storage:** The middle storage compartment can hold up to 80 pounds, ideal for media equipment. The side compartments, each with a door, can hold up to 40 pounds per shelf, suitable for books, game

consoles, or decorative items.

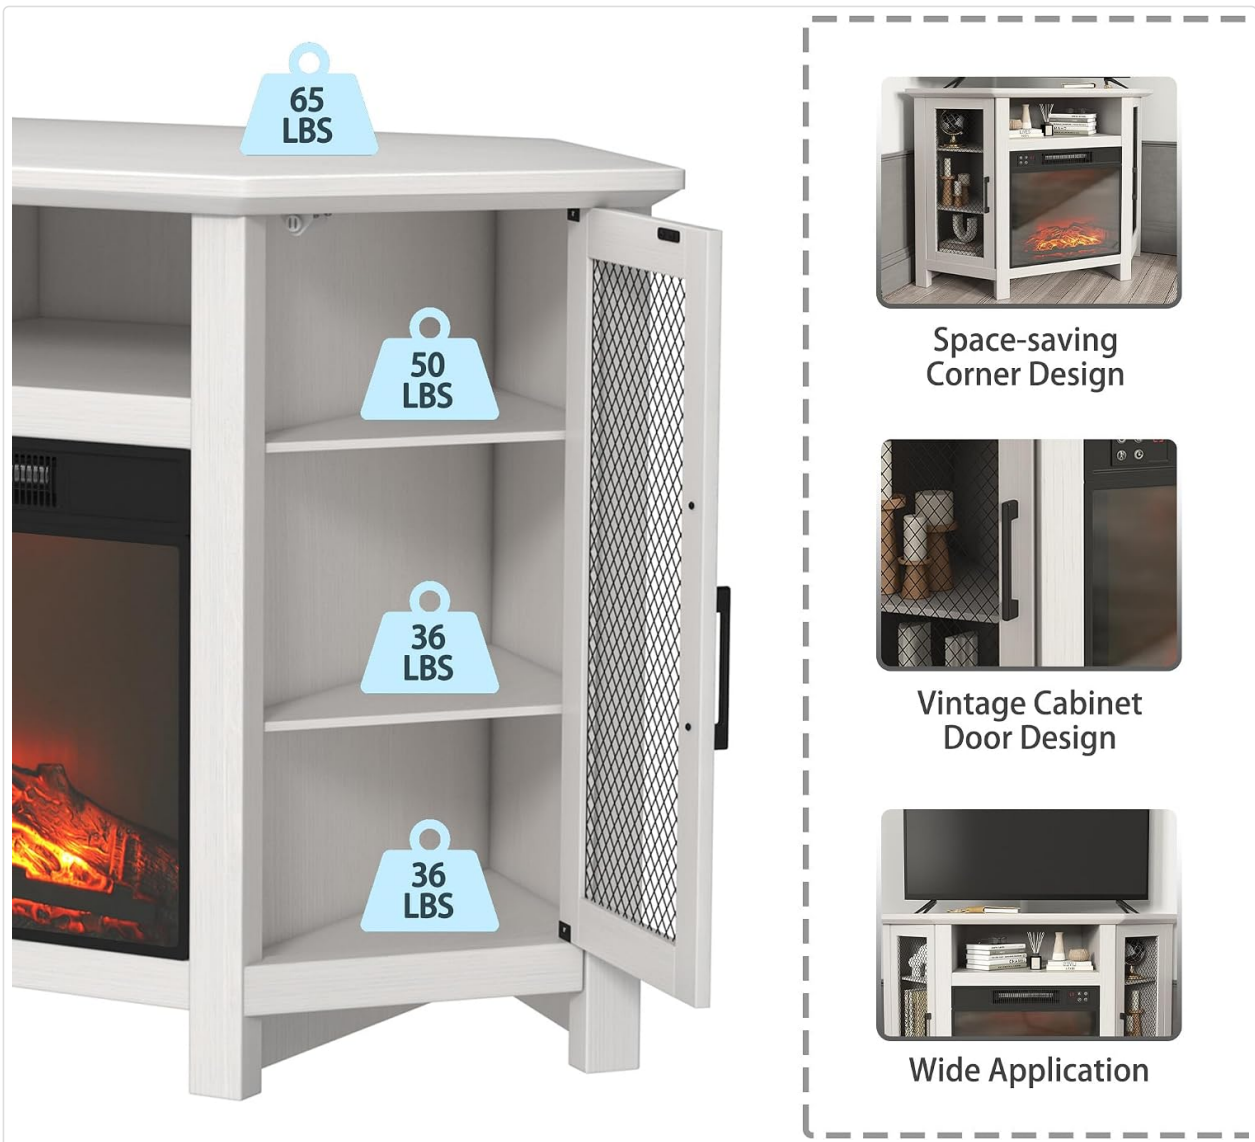


Figure 4.2: Storage Capacities and Design Elements.

5. Maintenance

Regular maintenance ensures the longevity and optimal performance of your TV stand and electric fireplace.

- **Cleaning the TV Stand:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Cleaning the Electric Fireplace:** Ensure the fireplace is turned off and unplugged before cleaning. Use a soft, dry cloth to wipe the exterior. Do not spray water directly onto the unit.
- **Ventilation:** Keep the air vents of the electric fireplace clear of dust and obstructions to ensure proper operation and prevent overheating.
- **Hardware Check:** Periodically check all assembly hardware to ensure it remains tight. Retighten if necessary.

6. Troubleshooting

If you encounter issues, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, remote control batteries dead, power switch off.	Ensure unit is plugged in and power outlet is functional. Check remote batteries and replace if needed. Verify the main power switch on the fireplace is in the 'ON' position.
No heat output.	Heat function not activated, thermostat set too low, overheat protection triggered.	Activate heat function via remote or control panel. Increase thermostat setting. Unplug unit for 15 minutes to reset overheat protection, then plug back in.
Flame effect not working.	Flame effect not activated.	Ensure the flame effect button on the remote or control panel is pressed.
Remote control not responding.	Dead batteries, obstruction, remote too far.	Replace remote batteries. Ensure no obstructions between remote and fireplace sensor. Operate within recommended range.
TV stand feels wobbly.	Loose hardware.	Check and tighten all assembly screws and fasteners. Ensure the stand is on a level surface.

7. Specifications

- **Brand:** Boyel Living
- **Model:** B0CT7LDXJ5
- **Color:** White
- **Material:** High Density Board, Engineered Wood
- **Overall Dimensions:** Approximately 55" (Width) x 29.96" (Depth) x 21.73" (Height) (Based on package dimensions and product size)
- **Item Weight:** 91.3 pounds
- **Mounting Type:** Floor Mount
- **Room Type:** Living Room
- **TV Size Compatibility:** Up to 55 inches
- **Tabletop Weight Capacity:** Up to 120 pounds
- **Middle Compartment Weight Capacity:** Up to 80 pounds
- **Side Compartment Shelf Weight Capacity:** Up to 40 pounds per shelf
- **Electric Fireplace Size:** 18 inches

- **Heat Output:** 5000 BTU, heats up to 400 sq. ft.
- **Temperature Control:** 62°F to 82°F
- **Flame Brightness:** 3 adjustable levels
- **Timer:** 30 minutes to 6 hours
- **Certifications:** CSA certified electric fireplace
- **Assembly Required:** Yes (Two adults recommended)

8. Warranty and Support

For warranty information, product support, or to report missing/damaged parts, please contact Boyel Living customer service. Refer to your purchase documentation for specific warranty terms and contact details.

- **Returns:** This product typically offers a 30-day easy return policy.
- **Protection Plans:** Extended protection plans may be available for purchase separately.